

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Mini Full HD 1080P Media Player User Manual

ASHATA Richer-Rpgs5ndm2tq-01

ASHATA Mini Full HD 1080P Media Player User Manual

Model: Richer-Rpgs5ndm2tq-01

1. INTRODUCTION

This user manual provides comprehensive instructions for the ASHATA Mini Full HD 1080P Media Player. This device is designed to play various multimedia files, including videos, audio, and images, directly on your television or display. It supports a wide range of formats and offers convenient connectivity options for external storage devices.

2. SAFETY INFORMATION

- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Do not open the casing. Refer all servicing to qualified service personnel.
- Ensure proper ventilation around the unit. Do not block ventilation openings.
- Use only the provided power adapter. Using an incorrect adapter may damage the device and void the warranty.
- Keep the device away from direct sunlight, heat sources, and excessive dust.
- Disconnect the power adapter during lightning storms or when unused for long periods.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x ASHATA Mini Full HD 1080P Media Player
- 1 x Power Adapter
- 1 x AV Cable
- 1 x IR Remote Control
- 1 x English User Manual (this document)



Image: Contents of the product package, including the media player, remote control, power adapter, and AV cables.

4. PRODUCT OVERVIEW

The ASHATA Mini Full HD 1080P Media Player is a compact device designed for versatile media playback. It features a user-friendly interface and multiple connectivity options.

4.1 Front Panel



Image: Front view of the media player showing control buttons and the IR receiver window.

- **Control Buttons:** Play/Pause, Navigation (Up, Down, Left, Right), OK/Enter, Return.
- **IR Receiver:** For receiving signals from the remote control.

4.2 Side Panels



Image: Side view of the media player showing the USB port and SD/MMC card slot.

- **USB Host Port:** Connect USB flash drives, external hard drives (up to 2TB), or other USB storage devices.
- **SD/MMC Card Slot:** Insert SD or MMC memory cards for media playback.



Image: Side view of the media player showing the HDMI output port.

- **HDMI Output:** Connect to an HDMI-enabled display for high-definition video and audio output.

5. SETUP

Follow these steps to set up your ASHATA Mini Full HD 1080P Media Player:

1. Connect to Display:

- For High Definition: Connect an HDMI cable (not included) from the player's HDMI output to your TV's HDMI input.
- For Standard Definition: Connect the provided AV cable from the player's AV output to your TV's AV input (Yellow for Video, Red/White for Audio).

2. Connect Power:



Image: The power adapter for the media player.

Connect the power adapter to the DC IN port on the media player, then plug the adapter into a wall outlet.

3. **Insert Storage Device:** Insert your USB flash drive, external hard drive, or SD/MMC card into the corresponding port on the media player.
4. **Power On:** Turn on your TV and select the correct input source (HDMI or AV) that the media player is connected to.

The media player will power on automatically when connected to power.

6. OPERATING INSTRUCTIONS

The media player is controlled using the included IR remote control. Ensure the remote has 2x AAA batteries installed (not included).

6.1 Remote Control Functions



Image: The media player shown with its remote control and connection cables.

- **Power Button:** Turns the player on/off.
- **Navigation Buttons (Up/Down/Left/Right):** Navigate through menus and options.
- **OK/Enter:** Confirm selection.
- **Return/Back:** Go back to the previous menu.
- **Menu:** Access the main menu.
- **Play/Pause, Stop, Fast Forward/Rewind:** Standard media playback controls.

- **Volume +/-:** Adjust audio volume.
- **Subtitle:** Control subtitle options (scaling, position, color).
- **Mode Buttons (Movie, Music, Photo, Setup):** Directly access different media modes or settings.

6.2 Media Playback

Once a storage device is connected, the player will automatically detect it. Use the remote control to navigate to the desired media type (Movie, Music, Photo) and select your file for playback.



Image: The media player in use, connected to a television displaying video content, illustrating its strong compatibility.

- **Video Playback:** Supports H.263, H.264, VC-1, Mpeg1/2/4-HD, Xvid, WMV, RV decoding up to 1080P. Compatible formats include MKV, AVI, TS/TP, M2TS, RM/RMVB, MOV, VOB, FLV, WMV.
- **Audio Playback:** Supports DTS, AC3, FLAC, AAC coding. Compatible formats include MP3, OGG, WMA, APE.
- **Image Viewing:** Supports JPEG, GIF, PNG, BMP formats.
- **Subtitle Support:** External subtitles are supported (ass, ssa, sub). Subtitles can be scaled, moved, and color changed.
- **Breakpoint Playback:** The player supports resuming playback from where it was last stopped.

7. MAINTENANCE

To ensure the longevity and optimal performance of your media player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or aerosols.
- **Ventilation:** Ensure the ventilation openings are not blocked to prevent overheating.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight.
- **Power Disconnection:** Always disconnect the power adapter before cleaning or when the device will not be used for a long time.

8. TROUBLESHOOTING

If you encounter issues with your media player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Device not turning on.	Power adapter not connected properly or faulty.	Ensure the power adapter is securely connected to the device and a working power outlet.
No video output.	Incorrect TV input selected or loose HDMI/AV cable.	Check TV input source. Ensure HDMI or AV cables are securely connected to both the player and the TV.
No audio output.	Volume too low, incorrect audio settings, or loose AV audio cables.	Increase volume on the player and TV. Check audio settings in the player's menu. Ensure AV audio cables (Red/White) are connected.
Cannot read USB drive/SD card.	Incompatible format, faulty device, or improper connection.	Ensure the storage device is formatted to FAT16/FAT32/NTFS. Reinsert the device. Try a different USB port or SD card.
Remote control not working.	Batteries are dead or inserted incorrectly, or IR receiver is blocked.	Replace batteries (2x AAA). Ensure correct polarity. Remove any obstructions between the remote and the player's IR receiver.
Video playback is choppy or freezes.	High bitrate video, slow storage device, or overheating.	Try a lower resolution video. Use a faster USB 3.0 drive if possible. Ensure adequate ventilation around the player.

9. SPECIFICATIONS

Feature	Description
Material	ABS + Metal
Color	Black
Readable Media	SD/MMC/MS cards, USB drives, Mobile hard drives (up to 2TB)
Supported Hard Disk Format	FAT16 / FAT32 / NTFS
Output Interface	AV composite video, PrPbY color output, Left and right audio channels, HDMI HD interface

Feature	Description
Power Supply	AC 100-240V 50/60Hz input; 5.4V / 2A output
TV Format	PAL/NTSC
Video Output	1.0 ± 0.2Vp-p, 75 Ω
Audio Output	2.0 ± 0.2V (RMS)
SNR	80dB
Supported Video Decoding	H.263, H.264, VC-1, Mpeg1/2/4-HD, Xvid, WMV, RV (up to 1080P)
Supported Video Format	MKV, AVI, TS/TP, M2TS, RM/RMVB, MOV, VOB, FLV, WMV
Supported Audio Coding	DTS, AC3, FLAC, AAC
Supported Audio Format	MP3, OGG, WMA, APE
Supported Image Format	JPEG, GIF, PNG, BMP
Supported Subtitle Format	ass, ssa, sub
Dimensions	Approx. 11 x 8 x 2.5 cm (4.3 x 3.1 x 1 inches)
Weight	Approx. 347 g (Net weight: 81.5 g)

SIZE



Image: Diagram showing the approximate dimensions of the media player.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact ASHATA customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

© 2024 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07G86RFQT>

More documents and user manuals: <https://manuals.plus/>