

ECONTROLLY RCEC-TS-12+AL

Universal Replacement Remote Control User Manual

Model: TS-12+AL

INTRODUCTION

This manual provides instructions for the ECONTROLLY TS-12+AL Universal Replacement Remote Control. This remote is designed to be compatible with a wide range of Toshiba TV models, including CT-90275, CT-90326, CT-90302, CT-90366, CT-90325, CT-90329, and CT-8037. It offers a straightforward, plug-and-play experience without the need for complex programming.

SETUP GUIDE

1. Battery Installation

The TS-12+AL remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.





Image: Rear view of the TS-12+AL remote control with the battery cover removed, illustrating the battery compartment ready for two AAA batteries.

2. Initial Use (No Programming Required)

This remote control is designed for immediate use with compatible Toshiba TV models. No programming or complex setup is required. Once the batteries are correctly installed, the remote is ready to operate your television.

OPERATING INSTRUCTIONS

The TS-12+AL remote control provides all standard functions for your Toshiba TV. Point the remote directly at your television's infrared receiver for optimal performance.





Image: Front view of the TS-12+AL universal remote control, displaying its full button layout.

Key Functions:

- **POWER ()**: Turns the TV on or off.
- **INPUT**: Cycles through available input sources (HDMI, AV, etc.).
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the television channel.
- **MUTE**: Mutes or unmutes the TV audio.
- **Number Buttons (0-9, 100)**: Directly select channels.
- **MENU**: Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER)**: Navigate through menus and confirm selections.
- **EXIT**: Exits the current menu or function.
- **C.CAPTION**: Toggles closed captions.
- **INFO**: Displays information about the current program or input.
- **Media Control Buttons (PLAY, PAUSE/STEP, STOP, FF, REW, SKIP)**: Control playback for connected media devices or TV functions.

CARE AND MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive chemicals.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment**: Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with proper polarity (+/-).

- Replace old batteries with new AAA alkaline batteries.
- Make sure there are no obstructions between the remote and the TV's infrared sensor.
- Confirm you are pointing the remote directly at the TV.

- **Certain functions not working:**

- While this remote is broadly compatible, some specific advanced functions unique to certain TV models might not be supported.
- Ensure your TV model is listed among the compatible Toshiba models (CT-90275, CT-90326, CT-90302, CT-90366, CT-90325, CT-90329, CT-8037).

- **No programming needed, but it's not working**

- This remote is pre-programmed for the listed Toshiba TV models. If it's not working, double-check battery installation and ensure the TV is powered on.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	RCEC-TS-12+AL
Brand	ECONTROLLY
Compatible Devices	Toshiba Televisions (various models including CT-90275, CT-90326, CT-90302, CT-90366, CT-90325, CT-90329, CT-8037)
Power Source	2 x AAA Batteries (not included)
Dimensions (L x W x H)	7 x 2 x 0.65 inches
Item Weight	0.81 ounces
Color	Black
Special Feature	Universal, No Programming Required

SUPPORT INFORMATION

For any further assistance or inquiries regarding your ECONTROLLY TS-12+AL Universal Remote Control, please contact the seller or manufacturer directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question