

[Manuals.plus](#) /

› [FurReal](#) /

› FurReal Pauli, My Singing Parrot Instruction Manual

## FurReal E0388EU5

# FurReal Pauli, My Singing Parrot Instruction Manual

Model: E0388EU5 | Brand: FurReal

## INTRODUCTION

Welcome to the world of FurReal Pauli, My Singing Parrot! Pauli is an interactive toy designed to provide engaging play with over 50 sound and motion combinations. This manual will guide you through the setup, operation, and maintenance of your Pauli parrot, ensuring a fun and safe experience.



Image: FurReal Pauli, My Singing Parrot toy with its wings spread, showcasing its vibrant red, blue, yellow, and orange feathers. The parrot has large, expressive eyes and an open beak, ready to interact.

## SETUP

### Battery Installation

Your FurReal Pauli requires 4 AA batteries for operation. These batteries are included with your purchase. Follow these steps to install them:

1. Locate the battery compartment on the underside of Pauli.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 4 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

**Important: Always use fresh batteries. Do not mix old and new batteries, or different types of batteries.**

### Powering On

After installing the batteries, locate the ON/OFF switch, usually near the battery compartment. Slide the switch to the 'ON' position to activate Pauli.

## OPERATING INSTRUCTIONS

Pauli is designed for interactive play, featuring various sounds, movements, and the ability to repeat phrases. Here's how to engage with your parrot:

### Activating Sounds and Movements

- **Pressing the Beak:** Gently press Pauli's beak to activate various sounds and phrases. Pauli will respond with over 50 unique sound and motion combinations.
- **Interacting:** Pauli responds to touch and sound. Pet Pauli or speak to it to encourage different reactions, including wing flapping and head movements.



Image: A child's finger gently touches the beak of the FurReal Pauli parrot, demonstrating how to activate its features.

### Repeating Phrases

Pauli can repeat short phrases in its own bird voice. To make Pauli repeat what you say:

1. Ensure Pauli is powered on.

2. Speak clearly and directly to Pauli.
3. Pauli will record and repeat up to 5 phrases. These recordings are temporary and will be cleared when the toy is turned off.



Image: Two children are shown interacting with the FurReal Pauli parrot. One child gently presses the parrot's wing, while the other watches with interest, illustrating interactive play.

## Dance Performances

Pauli features three distinct dance performances. These are activated through specific interactions or by pressing its beak multiple times. Pauli will flap its wings and move its body to perform its unique dance steps.



Image: A boy and a girl are shown dancing enthusiastically next to the FurReal Pauli parrot, which is positioned as if it is also dancing, highlighting its interactive dance feature.

## MAINTENANCE

### Cleaning

To clean your FurReal Pauli, gently wipe the surface with a soft, damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

### Storage

When not in use for extended periods, turn Pauli off and remove the batteries to prevent leakage and damage. Store the toy in a clean, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If your FurReal Pauli is not functioning as expected, please refer to the following common issues and solutions:

- **No Power/No Response:**
  - Ensure the ON/OFF switch is in the 'ON' position.

- Check that the batteries are correctly installed with the proper polarity.
- Replace old or depleted batteries with fresh AA batteries.
- **Sounds are Distorted or Weak:**
  - This often indicates low battery power. Replace the batteries.
- **Movement is Limited or Non-Responsive:**
  - Check for any obstructions around Pauli's wings or body.
  - Ensure batteries are fresh.

## SPECIFICATIONS



Image: A diagram illustrating the physical dimensions of the FurReal Pauli parrot, indicating a height of 13 inches (33 cm) and a width of 14.5 inches (36.8 cm).

Feature	Detail
Model Number	E0388EU5
Brand	FurReal (Hasbro)
GTIN	05010993506255
Product Dimensions (L x W x H)	36.8L x 5W x 33H centimeters (approx. 14.5 x 2 x 13 inches)
Item Weight	1.47 Kilograms
Batteries Required	4 AA batteries (included)
Recommended Age	4 - 99 years (Manufacturer's minimum age: 48 months)
Material	Plush
Character	Pauli
Included Components	FurReal parrot, instruction manual

## SAFETY INFORMATION

**WARNING: Not suitable for children under 36 months. Choking hazard – small parts may be included. Adult supervision is recommended during play.**

- Keep the toy away from water and moisture to prevent electrical hazards.
- Do not attempt to modify or disassemble the toy, as this may cause damage or injury.
- Dispose of batteries responsibly according to local regulations.

## WARRANTY INFORMATION

Specific warranty details are not provided within this manual. For information regarding warranty coverage and terms, please refer to the product packaging or contact Hasbro customer service directly.

## CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official Hasbro website or contact their customer service department. Contact information can typically be found on the product packaging or their corporate website.