

[Manuals.plus](#) /

› [Briloner](#) /

› Briloner Leuchten LED Ceiling Light 7195-016 User Manual

Briloner 7195-016

Briloner Leuchten LED Ceiling Light 7195-016 User Manual

Model: 7195-016

1. INTRODUCTION

This manual provides comprehensive instructions for the Briloner Leuchten LED Ceiling Light Model 7195-016. This modern LED panel offers adjustable brightness and color temperature, controlled conveniently via an included remote. Please read these instructions carefully before installation and use to ensure safe and optimal performance.



Image 1: Briloner LED Ceiling Light 7195-016 with remote control.

2. SAFETY INSTRUCTIONS

- Always turn off the main power supply at the circuit breaker before attempting any installation, maintenance, or cleaning.
- Installation should be performed by a qualified electrician if you are unsure.
- Ensure the mounting surface can support the weight of the fixture.
- Do not expose the light fixture to water or excessive moisture. This product is for indoor use only.
- Do not attempt to modify or disassemble the LED module.
- Keep the remote control out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Briloner LED Ceiling Light 7195-016

- 1 x Remote Control
- Mounting Hardware (screws, wall anchors)
- User Manual (this document)

4. SETUP AND INSTALLATION

Follow these steps to install your LED ceiling light:

1. **Prepare for Installation:** Turn off the power to the installation area at the main circuit breaker.
2. **Mount the Bracket:** Secure the mounting bracket to the ceiling using the provided screws and wall anchors. Ensure it is firmly attached.
3. **Connect Wiring:** Connect the household electrical wires to the corresponding wires on the light fixture. Typically, this involves connecting live to live, neutral to neutral, and ground to ground. Use appropriate wire connectors.
4. **Attach the Fixture:** Carefully align the light fixture with the mounted bracket and secure it in place. Ensure no wires are pinched.
5. **Restore Power:** Once the fixture is securely installed, restore power at the circuit breaker.

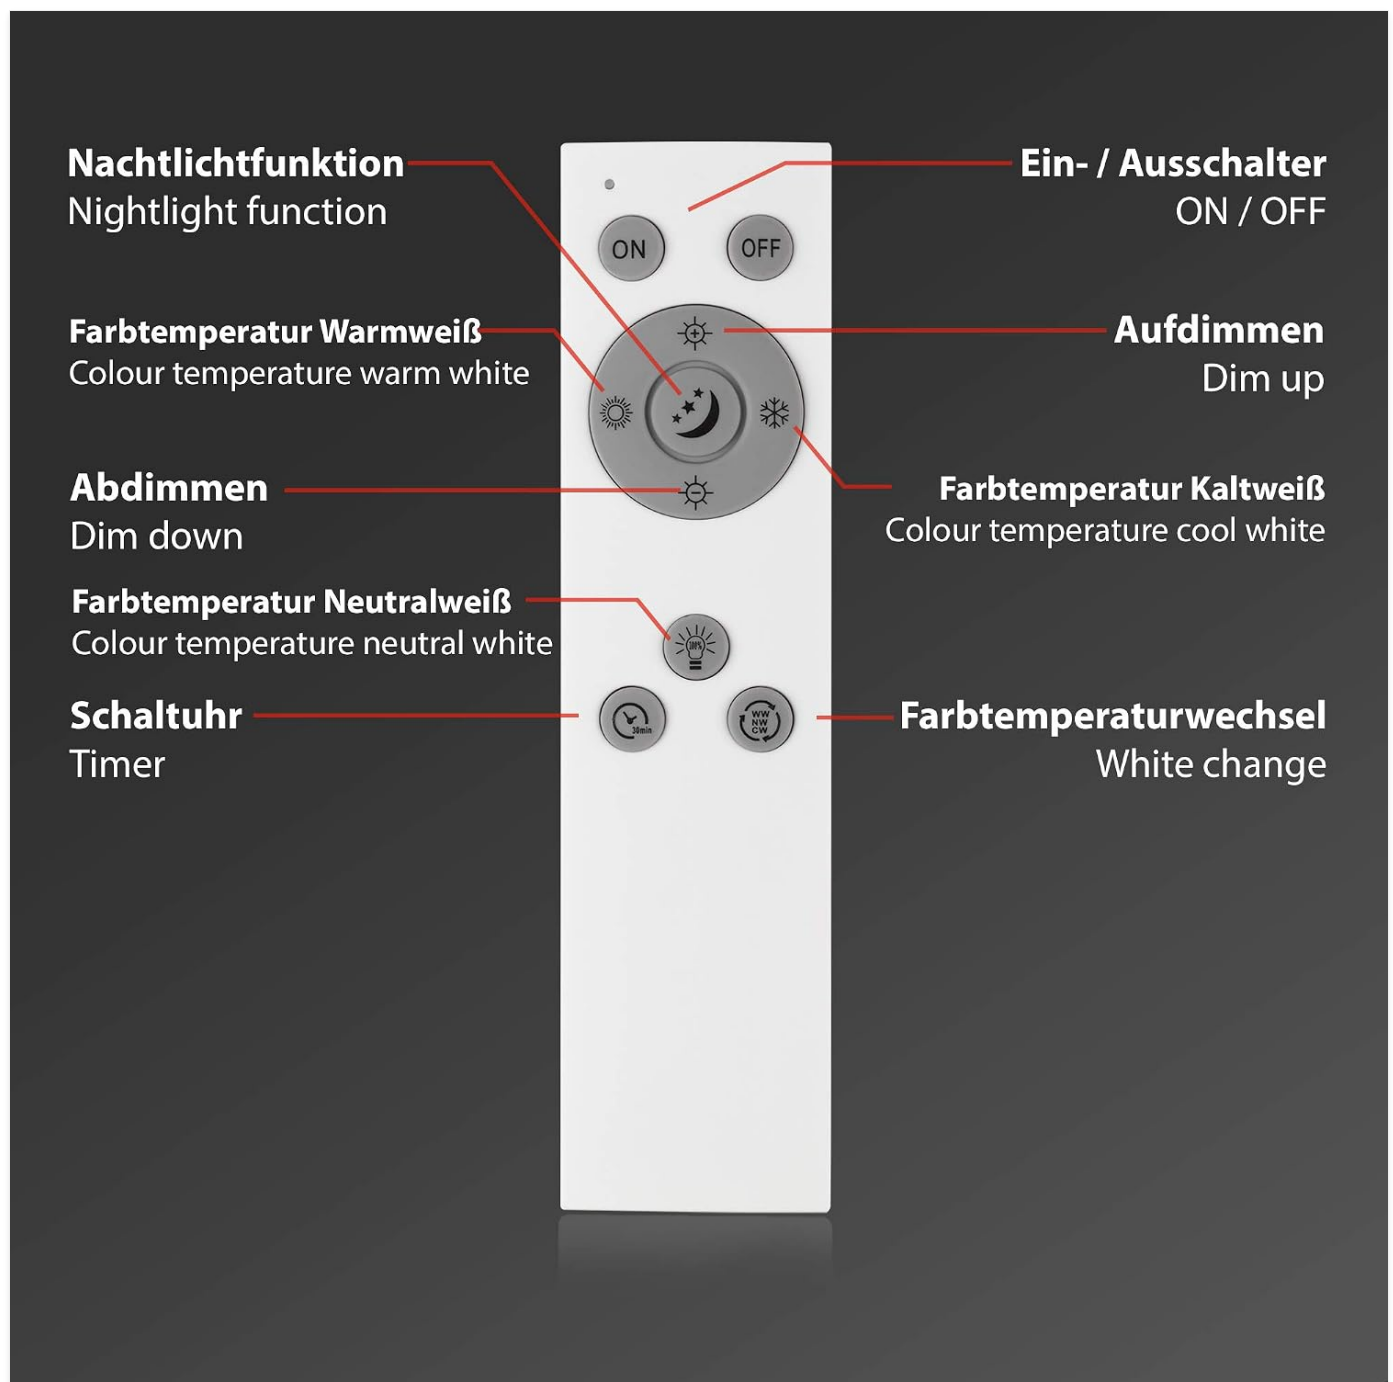


Image 2: Product dimensions (59.5 x 59.5 x 5 cm).

5. OPERATING INSTRUCTIONS

The Briloner LED Ceiling Light 7195-016 is operated using the included remote control. Ensure batteries are correctly inserted into the remote control.



Image 3: Remote Control Functions.

Remote Control Functions:

- **ON/OFF:** Press the 'ON' button to turn the light on, and 'OFF' to turn it off.
- **Dim Up/Down:** Use the brightness buttons (sun icon with '+' or '-') to increase or decrease the light intensity. The light is steplessly dimmable.
- **Color Temperature Control:** Adjust the light color from warm white (3000K) to cool white (6400K) using the color temperature buttons (sun icon with 'warm' or 'cool' indicator).
- **Nightlight Function:** Activates a low-brightness, warm light setting suitable for night use.
- **Timer:** Sets a timer for the light to turn off automatically.
- **Memory Function:** The light retains the last used brightness and color temperature settings when turned off and on via the remote control.



Image 4: Dimmable and Color Control features.

6. MAINTENANCE

To maintain your LED ceiling light, follow these guidelines:

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **Bulb Replacement:** The LED module is integrated and not user-replaceable. If the LEDs fail, the entire fixture may need replacement.

7. TROUBLESHOOTING

If you encounter issues with your Briloner LED Ceiling Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Remote control batteries are dead. Loose wiring connection.	Check circuit breaker. Replace remote control batteries. Turn off power and check wiring connections.
Remote control not working.	Batteries are dead or incorrectly inserted. Remote is too far from the light. Obstruction between remote and light.	Replace batteries and ensure correct polarity. Operate remote within effective range. Remove any obstructions.
Light flickers or dims unexpectedly.	Unstable power supply. Faulty wiring. Product defect.	Consult an electrician to check power supply. Turn off power and check wiring. Contact customer support if problem persists.

If the problem persists after trying these solutions, please contact Briloner customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	7195-016
Brand	Briloner
Dimensions (L x W x H)	59.5 x 59.5 x 5 cm
Material	Metal, Plastic (shade)
Color	White
Light Source	Integrated LED
Power Consumption	36 Watt
Luminous Flux	3800 Lumen
Color Temperature	3000K (Warm White) - 6400K (Cool White)
Dimmable	Yes, steplessly via remote control
Control Method	Remote Control (Infrared)
Voltage	120 Volts (AC)
Indoor/Outdoor Use	Indoor Use Only
Energy Efficiency Class	A+
Item Weight	3.9 kg

9. WARRANTY AND SUPPORT

The Briloner LED Ceiling Light 7195-016 comes with a limited warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Briloner website. For technical support, troubleshooting assistance, or warranty claims, please contact Briloner customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

© 2026 Briloner Leuchten. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question