



Manuals.plus /

- › **Clever Creations /**
- › Clever Creations Wooden Christmas Advent Calendar User Manual

Clever Creations B07G9MJRLJ

Clever Creations Wooden Christmas Advent Calendar User Manual

Model: Windmill Village (ASIN: B07G9MJRLJ)
Brand: Clever Creations

PRODUCT OVERVIEW

The Clever Creations Wooden Christmas Advent Calendar, Windmill Village model, is a decorative item designed to help count down the days until Christmas. This calendar features 24 individual drawers for small treats or messages, and is illuminated by LED lights, creating a festive atmosphere. Its intricate wooden design depicts a charming windmill village scene.



Figure 1: Front view of the Clever Creations Wooden Christmas Advent Calendar, Windmill Village model, showcasing its detailed wooden structure and 24 numbered drawers.

SETUP INSTRUCTIONS

1. **Unboxing:** Carefully remove the advent calendar from its packaging. Inspect for any damage during transit. Retain packaging for future storage if desired.

2. **Placement:** Choose a stable, flat surface for placement, away from direct heat sources or excessive moisture. Ensure the location allows for easy access to the drawers.
3. **Battery Installation (for LED lights):** This advent calendar features LED lighting. While the product specifications state "Batteries required: No", the product title indicates "Battery Operated". Please refer to the product packaging or the base of the unit for specific battery type (e.g., AA, AAA) and quantity required for the LED lights. Insert batteries according to the polarity markings (+/-).
4. **Filling Drawers:** Open each of the 24 numbered drawers. Place small treats, candies, or personalized messages inside each drawer, corresponding to the day of December.



Figure 2: Close-up view of the advent calendar drawers, demonstrating how small items like chocolates can be placed inside.

OPERATING INSTRUCTIONS

- **Daily Countdown:** Starting from December 1st, open the drawer corresponding to the current date. Continue daily until December 24th.
- **LED Light Operation:** Locate the power switch for the LED lights, typically found on the back or bottom of the unit. Toggle the switch to the "ON" position to illuminate the village scene. Turn to "OFF" when not in use to conserve battery life.



Figure 3: The advent calendar with its LED lights activated, highlighting the illuminated village scene and creating a warm glow.

- **Cleaning:** Dust the advent calendar regularly with a soft, dry cloth. For stubborn spots, a slightly damp cloth can be used, but ensure the surface is dried immediately to prevent damage to the wood. Do not use abrasive cleaners or solvents.
- **Storage:** After the holiday season, remove any remaining items from the drawers. If using batteries, remove them to prevent corrosion. Store the calendar in its original packaging or a protective container in a cool, dry place, away from extreme temperatures and humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights do not turn on.	<ul style="list-style-type: none"> • Batteries are dead or incorrectly installed. • Power switch is in the "OFF" position. 	<ul style="list-style-type: none"> • Replace batteries with new ones, ensuring correct polarity. • Toggle the power switch to the "ON" position.
Drawers are difficult to open/close.	<ul style="list-style-type: none"> • Obstruction inside or around the drawer. • Humidity causing wood to swell slightly. 	<ul style="list-style-type: none"> • Check for any items blocking the drawer's movement. • Ensure the calendar is stored in a dry environment. Avoid forcing the drawers.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.75 x 3 x 11.75 inches (19.7 x 7.6 x 29.8 cm)
Item Weight	2 pounds (0.91 kg)
Manufacturer	Clever Creations
ASIN	B07G9MJRLJ
Color/Model	Windmill Village
Theme	Christmas
Material	Wood
Power Source	Battery Operated (for LED lights)

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the original purchase documentation or visit the official Clever Creations website. Contact details for support may also be available on the product packaging.

You can visit the Clever Creations Store for more information:[Clever Creations Store on Amazon](#).