

Manuals.plus /

› DBPOWER /

› DBPOWER MK101 Portable DVD Player User Manual

DBPOWER MK101

DBPOWER MK101 Portable DVD Player User Manual

Model: MK101

1. PRODUCT OVERVIEW

The DBPOWER MK101 is a versatile portable DVD player designed for entertainment on the go. It features a 10.5-inch LCD screen with 270-degree rotation, region-free playback, and support for various media formats via DVD, SD card, and USB.



Image: The DBPOWER MK101 Portable DVD Player with its screen open, displaying a vibrant, colorful image.

Key Features:

- **10.5-inch LCD Screen:** Provides a clear display with 1024x600 resolution.
- **270-Degree Swivel Screen:** Allows for flexible viewing angles and can be folded flat like a tablet.
- **Region-Free Playback:** Compatible with DVDs from all regions.
- **CPRM Support:** Plays copy-protected content.
- **Last Memory Function:** Resumes playback from where you left off.
- **Multiple Power Options:** Includes a built-in 2500mAh rechargeable battery for up to 5 hours of playback, an AC adapter, and a car charger.
- **Versatile Connectivity:** Features AV input/output, USB port, and SD card slot.
- **Supported Media:** Plays CD, CD-R, CD-RW, VCD, SVCD, CVD, DVD-R, DVD+R, DVD-RW, DVD+RW, AVI, MPG, VOB, FLV, MP3, WMA, OGG.

2. SETUP

2.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- DBPOWER MK101 Portable DVD Player
- AV Cable
- Car Charger
- Remote Control
- Instruction Manual
- Car Headrest Holder

2.2 Powering On the Device

Before first use, fully charge the device using the AC adapter. Connect the AC adapter to the DC IN 12V port on the side of the player and plug it into a wall outlet. The charging indicator light will illuminate.

Video: This video demonstrates the initial setup and basic functions of the portable DVD player, including powering on and inserting a DVD.

To turn on the player, slide the ON/OFF switch located on the side of the device to the 'ON' position.



Image: A close-up view of the player's control panel and side ports, highlighting the power switch and various input/output options.

2.3 Inserting a DVD


Open the disc cover by gently pressing the 'OPEN' button or latch. Place the DVD disc onto the spindle with the label side facing up. Gently press the center of the disc until it clicks into place. Close the disc cover.

高品質の材料を採用し、
環境に優しい



全体にプラスチック、
高級感あふれる

丈夫と滑り止めのデザインで、
耐衝撃性のあるし、長持ちできます

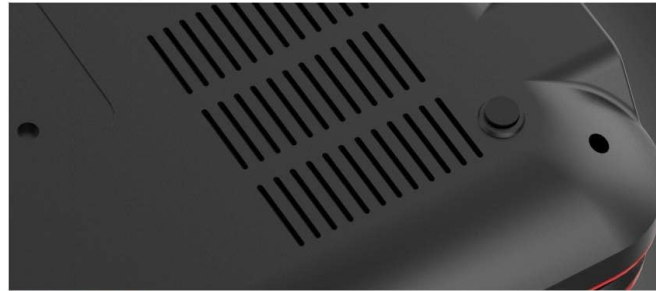

DVDトレイ処、ツヤ消しのデザイン、
指紋がつきにくい

Image: The portable DVD player with its disc tray open, illustrating how to correctly insert a DVD.

3. OPERATING INSTRUCTIONS

3.1 Basic Playback

After inserting a DVD and powering on the device, the player will automatically begin reading the disc. Use the control buttons on the player or the remote control to navigate menus, play, pause, stop, fast forward, and rewind.

Video: A demonstration of the portable DVD player's basic operation, including disc playback and menu navigation.

3.2 Screen Rotation

The screen can be rotated up to 270 degrees. Gently swivel the screen to your desired viewing angle. It can also be folded flat against the base, transforming the player into a compact tablet-like device.



- ・CD
- ・中国のVCD
- ・CD-Rに入ったMP3
- ・市販のDVDタイトル
- ・SDカードに入った写真
- ・自分で録画した映像のDVD
- ・放送録画したコンテンツをダビングしたDVD

Image: The portable DVD player's screen shown in various rotated positions, demonstrating its 270-degree swivel capability.

3.3 Using SD Card and USB

Insert an SD card into the SD card slot or a USB flash drive into the USB port. Use the 'MODE' button on the player or remote to switch to SD or USB mode. The player will then display the media files, allowing you to select and play them.



Image: An illustration of the player's side ports, indicating the USB and SD card slots for external media playback.

3.4 Connecting to External Devices (TV/Projector)

To view content on a larger screen, connect the DVD player to a TV or projector using the provided AV cable. Connect one end of the AV cable to the AV OUT port on the DVD player and the other end to

the AV IN ports on your TV or projector. Select the correct AV input source on your external display.

Video: This video demonstrates how to connect the portable DVD player to a projector using the AV cable for a larger viewing experience.

4. MAINTENANCE

4.1 Cleaning

Regularly clean the exterior of the player with a soft, dry cloth. For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners or solvents.

To clean the disc lens, use a specialized DVD lens cleaning disc. Do not attempt to clean the lens manually, as this can cause damage.

4.2 Storage

When not in use, store the DVD player in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the disc tray is empty and the screen is closed to protect it from dust and damage.

5. TROUBLESHOOTING

5.1 No Power

- Ensure the power switch is in the 'ON' position.
- Check if the battery is charged. Connect the AC adapter and try again.
- If using the car charger, ensure the car's ignition is on and the charger is properly connected.

5.2 Disc Not Playing / Disc Error

- Ensure the disc is clean and free of scratches or smudges. Wipe with a soft cloth from the center outwards.
- Verify the disc is inserted correctly with the label side facing up.
- Check if the disc format is supported by the player (refer to Supported Media in Product Overview).
- Try a different disc to determine if the issue is with the player or the disc.

5.3 No Sound

- Increase the volume using the volume controls on the player or remote.
- Check if the player is muted. Press the 'MUTE' button on the remote.
- If using external speakers or headphones, ensure they are properly connected and functioning.

5.4 No Picture on External Display

- Ensure the AV cable is securely connected to both the DVD player's AV OUT and the external display's AV IN ports.

- Select the correct AV input source on your TV or projector.

6. SPECIFICATIONS

Feature	Specification
Model Number	MK101
Screen Size	10.5 inches (diagonal)
LCD Resolution	1024 x 600 pixels
Continuous Playback Time	Up to 5 hours (on full charge)
Battery Capacity	7.4V 2500mAh
Power Supply	AC Adapter, Car Charger, Built-in Battery
USB Ports	1
Supported Media Types	DVD, CD, SD Card, USB Flash Drive
Supported Disc Formats	CPRM, CD-R, CD-RW, VCD, SVCD, CVD, DVD-R, DVD+R, DVD-RW, DVD+RW
Supported File Formats	AVI, MPG, VOB, FLV, MP3, WMA, OGG
Product Dimensions	26 x 18.3 x 3.7 cm
Product Weight	895 grams
Color	Red

7. WARRANTY AND SUPPORT

DBPOWER is committed to providing excellent customer service and product support.

- **Quality Warranty:** This product comes with a 12-month quality warranty from the date of purchase.
- **Return Policy:** A 30-day return period is valid from the date of purchase.
- **Customer Support:** Professional customer support is available for any inquiries or assistance you may need.
- **Response Time:** We aim for a 24-hour quick response service.

For direct support, you can contact us via the following methods:

DBPOWER



@505uyify

★休業日：土日祝日

※その他年末年始、GW、お盆休業がございます。

Image: DBPOWER customer support details, including a QR code for LINE support.

Scan the QR code or visit <https://lin.ee/QdIW3a0> for LINE support.

Please note that support services may be limited on weekends, public holidays, and during year-end/New Year, Golden Week, and Obon holidays.