

Manuals.plus /

- › Passion-Electro /
- › Replacement Remote Control User Manual for JVC UX-T300R HI-FI System

Passion-Electro JVC UX-T300R Replacement Remote Control

User Manual

REPLACEMENT REMOTE CONTROL FOR JVC UX-T300R HI-FI SYSTEM

Model: JVC UX-T300R Replacement Remote Control | Brand: Passion-Electro

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your new Passion-Electro replacement remote control, specifically designed for the JVC UX-T300R HI-FI system. This is a specialized replacement remote, not a generic universal remote, ensuring full compatibility with your original unit's functions.

Package Contents

- 1 x Passion-Electro Replacement Remote Control
- (Batteries are not included)

Setup

Battery Installation

Your remote control requires two (2) AAA 1.5V batteries (LR03-AAA). Please follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming is necessary. Once batteries are inserted, the remote is ready for use.



Figure 1: Rear view of the remote control with battery cover.



Figure 2: Close-up of the battery compartment opening.

Operating Instructions

This replacement remote control is designed to replicate the full functionality of your original JVC UX-T300R HI-FI system remote. Point the remote control directly at the JVC UX-T300R unit when operating.

Key Functions Overview



Figure 3: Front view of the remote control, displaying all buttons.



Figure 4: Side view of the remote control, illustrating its ergonomic design.

- **POWER Button:** Turns the HI-FI system on or off.
- **MUTE Button:** Mutes or unmutes the audio output.
- **TV/SAT/DVD/AUX Buttons:** Selects the corresponding input source on your HI-FI system.
- **Numeric Keypad (0-9):** Used for direct track selection, channel input, or other numerical entries.
- **MENU/EXIT Buttons:** Navigates through menus and exits current menu screens.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used for menu navigation and confirming selections.
- **Volume Control (V+/V-):** Adjusts the volume level.
- **Channel/Track Control (P+/P-):** Changes channels or navigates through tracks.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Standard controls for media playback.
- **INFO Button:** Displays information about the current track or input.
- **SLEEP Button:** Sets a sleep timer for the system.
- **SMART/NETTV Buttons:** Accesses smart features or network services if supported by your HI-FI system.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the specific menu or application.

For detailed operation of specific functions, please refer to your original JVC UX-T300R HI-FI system's user manual.

Maintenance

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Care

- Remove batteries if the remote control will not be used for an extended period to prevent battery leakage.
- Replace all batteries at the same time. Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

Troubleshooting

| Problem | Possible Cause | Solution |
|-------------------------------|---|--|
| Remote control does not work. | Batteries are dead or incorrectly inserted. | Replace batteries with new ones, ensuring correct polarity (+/-). |
| | Obstruction between remote and HI-FI system. | Remove any objects blocking the line of sight to the HI-FI system's infrared receiver. |
| | Remote control is too far from the HI-FI system. | Move closer to the HI-FI system (within 10 meters). |
| Some functions do not work. | Specific function not supported by your JVC UX-T300R model. | Verify the function exists on your original HI-FI system's remote or in its manual. |
| | Remote control not pointed correctly. | Ensure the remote is pointed directly at the HI-FI system's IR sensor. |

Specifications

| | |
|--------------------------------|----------------------------------|
| Brand | Passion-Electro |
| Model Compatibility | JVC UX-T300R HI-FI System |
| Color | Black |
| Connectivity Technology | Infrared (IR) |
| Max Range | 10 Meters (approx. 33 feet) |
| Batteries Required | 2 x AAA 1.5V (LR03-AAA) |
| Max Supported Devices | 1 (Specialized for JVC UX-T300R) |

Warranty and Support

This product is a new replacement remote control. While specific warranty details are not provided, the product is designed to offer functionality similar to an original remote.

For any issues or inquiries, please contact your retailer or the manufacturer, Passion-Electro, through their official channels. Refer to your purchase documentation for contact information.

Note: This remote control is shipped within 48 hours of order.