



Manuals.plus /

› BassPal /

› BassPal TonePro U14 Wireless Sport Earphones User Manual

BassPal TonePro U14

BassPal TonePro U14 Wireless Sport Earphones User Manual

Model: TonePro U14

1. INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your BassPal TonePro U14 Wireless Sport Earphones. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. SAFETY INFORMATION

Please use a standard 5V/1A charging plug to charge the headphones. Fast charging over 5V may cause heat damage to the headphones.

3. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- BassPal TonePro U14 Wireless Sport Earphones
- USB Charging Cable
- Multiple Sizes of Ear Tips
- Carrying Case
- User Manual



Image: Contents of the BassPal TonePro U14 package, including earphones, charging cable, ear tips, carrying case, and user manual.

4. PRODUCT OVERVIEW

The BassPal TonePro U14 earphones feature an ergonomic design with flexible ear hooks for secure and comfortable wear. They are equipped with controls for music and calls.

HEADPHONES INSTRUCTION KEY



Image: Diagram illustrating the various components and controls of the BassPal TonePro U14 earphones, including volume buttons, MFB button, USB charging port, LED indicator, ear tip, and ear-hook.

Key Components:

- **Volume+ / Next Song Button:** Increases volume with a short press, skips to the next song with a long press.
- **Volume- / Previous Song Button:** Decreases volume with a short press, goes to the previous song with a long press.
- **Power On/Off (MFB Button):** Multi-Function Button for power, play/pause, and call management.
- **USB Charging Port:** For connecting the charging cable.
- **LED Indicator:** Displays status (e.g., charging, pairing, connected).
- **Ear Tip:** Soft silicone tips for in-ear comfort and sound isolation.
- **Ear-hook:** Provides secure fit during physical activity.

5. SETUP

5.1. Charging the Earphones

Before first use, fully charge the earphones. Connect the provided USB charging cable to the USB charging port on the earphones and to a standard 5V/1A USB power source. The LED indicator will show charging status and turn off or change color when fully charged. A full charge takes approximately 1.5 hours and provides up to 9 hours of playback.



POWERFUL BATTERY LIFE

Up to 9 hours of playtime from 1.5 hours charge

iOS Battery Indicator

The image features a pair of black BassPal TonePro U14 earphones with a red cable. To the right, a graphic shows a battery icon with four lightning bolts and a green bar containing a microphone and a musical note icon. Below this, a smartphone displays a music player interface with a circular callout showing a 99% battery level next to a headphones icon.

Image: BassPal TonePro U14 earphones with a visual representation of their powerful battery life and iOS battery indicator feature.

5.2. Pairing with a Bluetooth Device

1. Ensure the earphones are turned off.
2. Press and hold the MFB button for approximately 5-7 seconds until the LED indicator flashes red and blue alternately, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "TonePro U14" from the list of found devices.
5. Once connected, the LED indicator will flash blue slowly, and you may hear a confirmation tone.
6. The earphones will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- **Power On:** Press and hold the MFB button for 3 seconds. The LED will flash blue.
- **Power Off:** Press and hold the MFB button for 3 seconds. The LED will flash red.

6.2. Music Playback

- **Play/Pause:** Short press the MFB button.
- **Volume Up:** Short press the "Volume+" button.
- **Volume Down:** Short press the "Volume-" button.
- **Next Song:** Long press the "Volume+" button.
- **Previous Song:** Long press the "Volume-" button.

6.3. Call Management

- **Answer/End Call:** Short press the MFB button.
- **Reject Call:** Long press the MFB button.
- **Redial Last Number:** Double press the MFB button.

6.4. Voice Control

The earphones support voice control. Refer to your device's instructions for activating its voice assistant (e.g., Siri, Google Assistant) via Bluetooth headphones.

7. PRODUCT FEATURES

The BassPal TonePro U14 earphones are designed for an active lifestyle, offering high-fidelity sound and a comfortable, secure fit.

7.1. High-Fidelity Sound

Experience clear audio with rich bass and crisp treble, powered by Bluetooth 4.1 CSR with CVC 6.0 noise reduction technology.

HIGH-FIDELITY SOUND

Wireless workout headphones with
rock-solid bass and crisp treble



Image: Close-up of the BassPal TonePro U14 earphone highlighting its high-fidelity sound capabilities with rock-solid bass and crisp treble.

7.2. Enhanced Comfort and Wearability

The ergonomic design and flexible ear hooks ensure the earphones stay securely behind your ears and rest comfortably in the ear canal, preventing them from falling out during activities. The soft silicone gel surface contributes to sweat resistance.

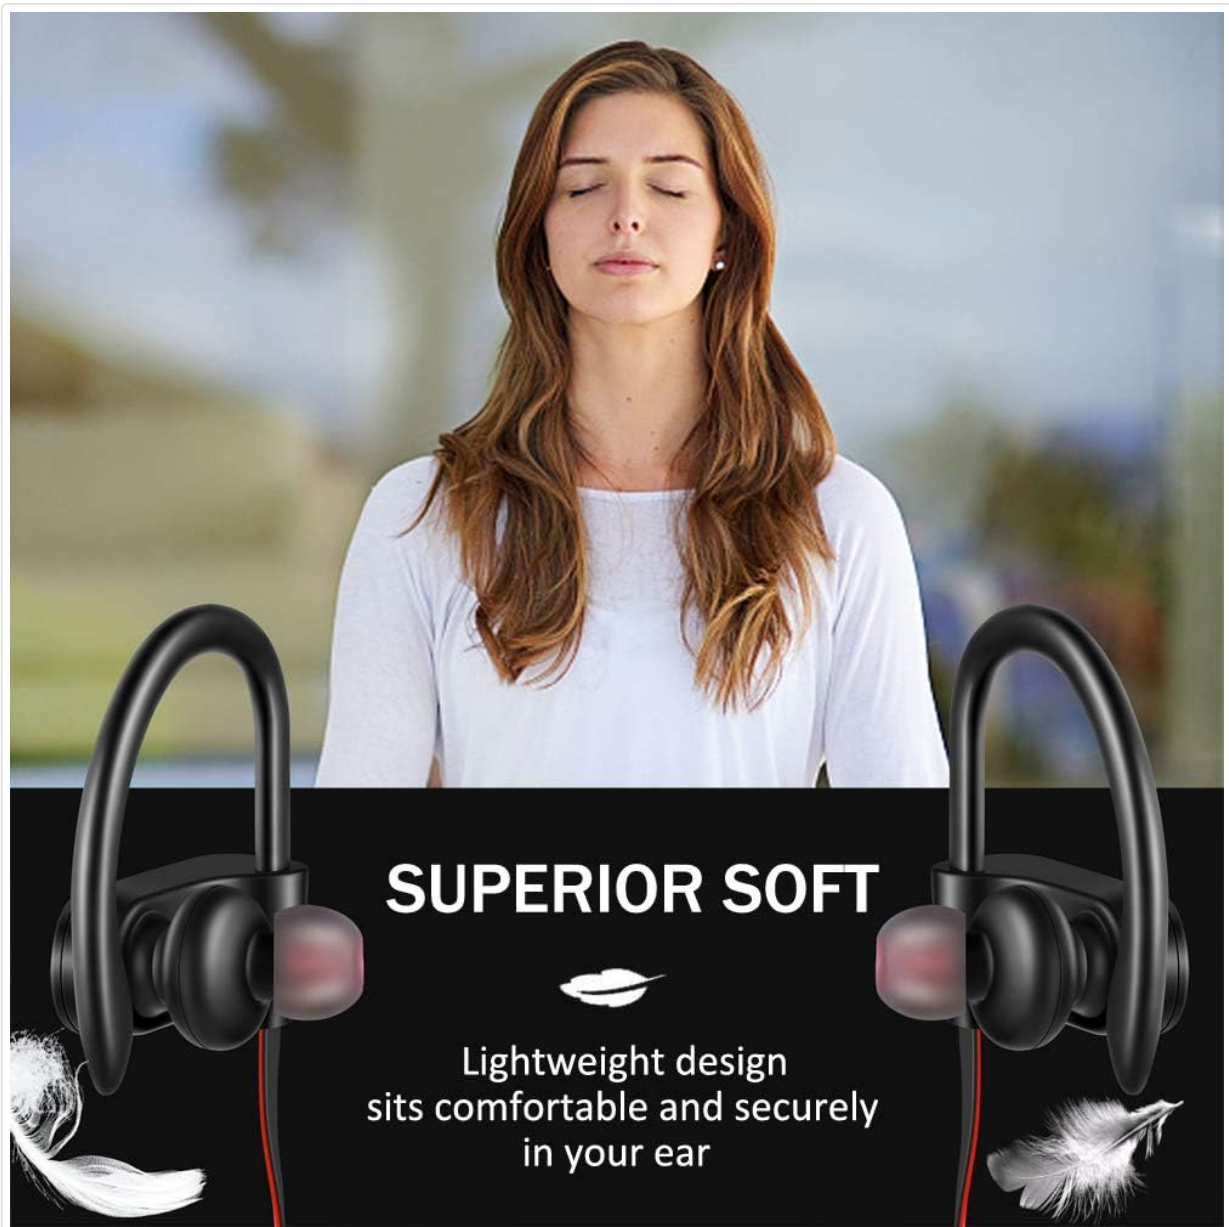


Image: A woman wearing BassPal TonePro U14 earphones, emphasizing their superior soft and lightweight design for comfortable and secure fit.

7.3. Designed for Active Lifestyles

With universal compatibility and a signal range of up to 33 feet, these earphones are suitable for various activities.

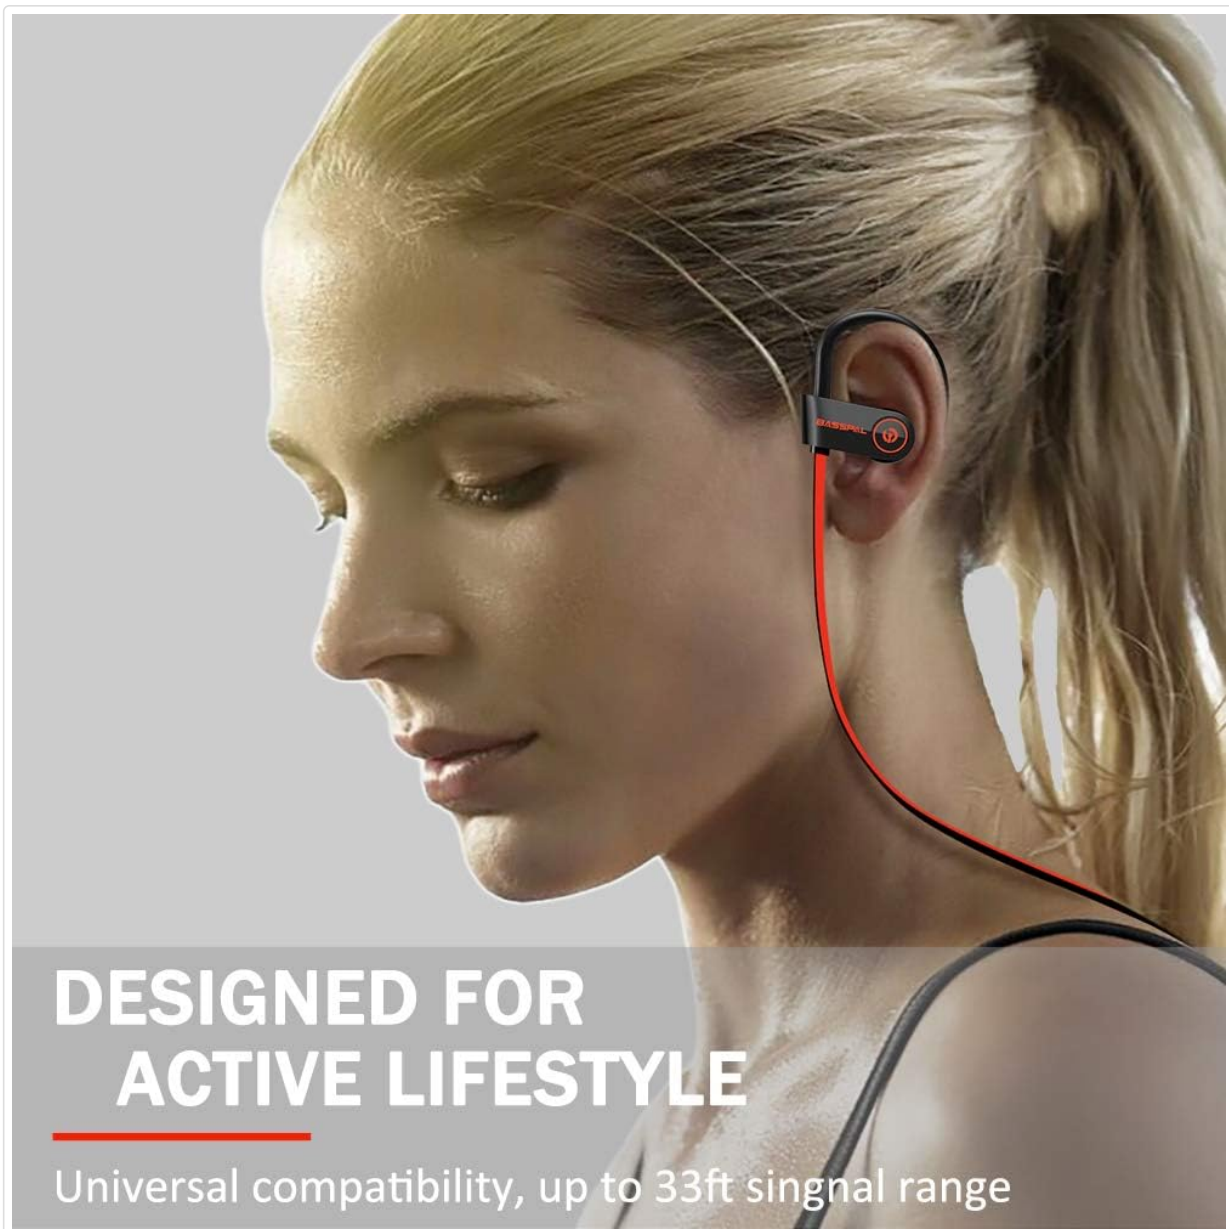


Image: A woman wearing BassPal TonePro U14 earphones while exercising, illustrating their design for an active lifestyle with universal compatibility and a 33ft signal range.

8. MAINTENANCE

8.1. Cleaning

The earphones are IPX7 water-resistant, meaning they can withstand sweat, rain, and splashes. However, they are not designed for submersion. Wipe the earphones with a soft, dry cloth after each use, especially after workouts, to remove sweat and dirt. Do not use abrasive cleaners or solvents.

8.2. Storage

When not in use, store the earphones in the provided carrying case to protect them from dust, scratches, and damage. Avoid storing them in extreme temperatures.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Earphones do not power on.	Low battery.	Charge the earphones fully using the provided USB cable and a 5V/1A adapter.
Cannot pair with device.	Earphones not in pairing mode; Bluetooth off on device; device too far.	Ensure earphones are in pairing mode (red/blue flashing LED). Turn on Bluetooth on your device. Move device closer to earphones (within 33 ft). Forget previous pairings on your device and try again.
No sound or low volume.	Volume too low; earphones not connected; incorrect audio output selected.	Increase volume on both earphones and your device. Re-pair the earphones. Check your device's audio output settings.
Intermittent connection.	Interference; device too far; low battery.	Move away from sources of interference (Wi-Fi routers, other Bluetooth devices). Keep device within 33 ft. Charge earphones.

10. SPECIFICATIONS

Feature	Detail
Model Name	TonePro U14
Connectivity Technology	Wireless, Bluetooth
Wireless Communication Technology	Bluetooth 4.1, A2DP, AVRCP, Headset, Handsfree
Water Resistance Level	IPX7 Water Resistant
Noise Control	Active Noise Cancellation (CVC 6.0)
Battery Life	Up to 9 Hours
Charging Time	1.5 Hours
Bluetooth Range	33 Feet (10 meters)
Earpiece Shape	Hook
Material	Silicone
Item Weight	0.64 ounces (0.04 Pounds)
UPC	687551492654

11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official BassPal website. Keep your purchase receipt for warranty claims.