

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VBESTLIFE](#) /

› [VBESTLIFE Mini Media Player 1080P User Manual](#)

## VBESTLIFE 1080P

# VBESTLIFE Mini Media Player 1080P User Manual

Model: 1080P

[Introduction](#)

[Safety Information](#)

[Maintenance](#)

[Package](#)

[Contents](#)

[Troubleshooting](#)

[Product](#)

[Overview](#)

[Specifications](#)

[Setup](#)

[Support](#)

[Operation](#)

## 1. INTRODUCTION

---

The VBESTLIFE Mini Media Player 1080P is a compact and versatile device designed to play various multimedia files directly on your television or display. It supports a wide range of video, audio, and image formats from external storage devices such as USB drives, SD cards, and mobile hard drives, offering a convenient solution for home entertainment.



Support RM/RMVB(Real8/9/10) video decoding to 1080P (1920x1080); Support H.264 (MKV, MOV, AVI, M2TS, TP, TRP, IFO, ISO,) decoding to 1080P. Support WMV9 / VC-1 to 1080P.

*Image 1.1: The VBESTLIFE Mini Media Player connected to a television, demonstrating its 1080P output capability.*

## 2. SAFETY INFORMATION

---

Please read and understand all safety instructions before using this product to prevent injury or damage to the device.

- **Power Supply:** Use only the provided power adapter. Ensure the voltage matches the requirements specified on the adapter.
- **Ventilation:** Do not block any ventilation openings. Place the device on a stable, flat surface with adequate airflow to prevent overheating.
- **Moisture:** Keep the device away from water, moisture, and high humidity environments. Do not operate with wet hands.
- **Cleaning:** Unplug the device before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Repairs:** Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- **External Storage:** Ensure external storage devices are properly connected and powered (if required) to avoid data loss or damage to the player.



Image 2.1: The bottom of the media player, displaying a label with important safety instructions regarding power adapter usage.

### 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x VBESTLIFE Mini Media Player
- 1 x Power Adapter (EU plug)
- 1 x AV Cable
- 1 x IR Remote Control
- 1 x English User Manual



*Image 3.1: All components included in the VBESTLIFE Mini Media Player package.*

## 4. PRODUCT OVERVIEW

---

### 4.1 Device Layout and Dimensions

The VBESTLIFE Mini Media Player is designed for portability and ease of use. Its compact size allows for discreet placement near your display.



Image 4.1: The physical dimensions of the media player, measuring approximately 11.5 cm (4.5 in) in length, 7.2 cm (2.8 in) in width, and 2.3 cm (0.9 in) in height.

## 4.2 Front and Side Panel

The front panel features basic control buttons, while the side panel provides convenient access for external storage.

- **Power Button:** To turn the device on or off.
- **Navigation Buttons:** For menu navigation and media control (Play/Pause, Forward, Rewind).
- **SD Card Slot:** For inserting SD/MMC/MS memory cards.
- **USB Host Port:** For connecting USB flash drives or external USB hard drives.



Image 4.2: A detailed view of the side panel, highlighting the SD card slot and the USB host port for connecting external storage devices.

## 4.3 Rear Panel Connections

The rear panel houses all necessary output and power connections.

- **DC IN:** Power input port for the provided power adapter.
- **AV Out:** Composite video and stereo audio output for older televisions.
- **VGA Out:** Video Graphics Array output for compatible monitors or projectors.

- **Optical Out:** Digital audio output for connecting to home theater systems.
- **HDMI Out:** High-Definition Multimedia Interface for digital video and audio output to modern displays.



*Image 4.3: A detailed view of the rear panel, illustrating the various input and output ports available on the media player.*

## 5. SETUP

---

### 5.1 Connecting to Power

1. Connect the provided power adapter to the **DC IN** port on the rear of the media player.
2. Plug the power adapter into a wall outlet.

### 5.2 Connecting to a Display Device

Choose one of the following connection methods based on your display device:

#### **HDMI Connection (Recommended for HD displays)**

1. Connect an HDMI cable (not included) from the **HDMI Out** port on the media player to an HDMI input port on your television or monitor.
2. Select the corresponding HDMI input on your display device.

#### **AV Connection (For older televisions)**

1. Connect the provided AV cable to the **AV Out** port on the media player.
2. Connect the other end of the AV cable (red, white, yellow RCA connectors) to the corresponding AV input ports on your television.
3. Select the AV input on your display device.

#### **VGA Connection (For compatible monitors/projectors)**

1. Connect a VGA cable (not included) from the **VGA Out** port on the media player to the VGA input port on your monitor or projector.
2. Note that VGA only transmits video. For audio, you will need to use the AV audio outputs or Optical output.
3. Select the VGA input on your display device.

# Rich video output interface

real full digital HDMI1.3 interface, component video terminal  
YUV, AV, etc



*Image 5.1: The media player connected to a television, illustrating the HDMI connection and other available rear ports.*

## 5.3 Inserting External Storage

The player supports various external storage devices:

- **USB Drive:** Insert a USB flash drive or external USB hard drive into the **USB Host** port.
- **SD Card:** Insert an SD, MMC, or MS card into the **SD Card Slot**.
- For external hard drives requiring additional power, ensure they are connected to their own power source.

Support USB drive, mobile hard drive, SD card, 2.5T mobile hard drive (3.5 inch).



Image 5.2: The media player with illustrations of a USB drive, mobile hard drive, and SD card, indicating support for these external storage types.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Powering On/Off

- Press the **Power** button on the front panel of the player or on the remote control to turn the device on or off.

### 6.2 Using the Remote Control

The included IR remote control allows full functionality from a distance. Ensure 2 AAA batteries (not included) are inserted correctly.

- **Directional Buttons (Up/Down/Left/Right):** Navigate through menus and options.

- **OK Button:** Confirm selections.
- **Play/Pause, Stop, Fast Forward/Rewind:** Control media playback.
- **Menu/Return:** Access main menu or go back to the previous screen.
- **Volume +/-:** Adjust audio volume.
- **Subtitle/Audio:** Select subtitle tracks or audio languages during playback.

### 6.3 Navigating Menus and Playing Media

1. After powering on, the main menu will appear on your display.
2. Use the directional buttons on the remote to select the desired media type (e.g., Video, Music, Photo, File Browser).
3. Press **OK** to enter the selected category.
4. Navigate to your connected storage device (USB or SD card).
5. Browse through your files and select the desired media file.
6. Press **OK** to start playback.

### 6.4 Supported Media Formats

The player supports a wide array of formats:

- **Video Decoding:** H.263, H.264, VC-1, Mpeg1/2/4-HD, Xvid, WMV, RV (up to 1080P).
- **Video Formats:** AVI, TS/TP, M2TS, RM/RMVB, MOV, VOB, FLV, WMV.
- **Audio Encoding:** DTS, AC3, FLAC, AAC.
- **Audio Formats:** MP3, OGG, WMA, APE.
- **Image Formats:** JPEG, GIF, PNG, BMP.
- **Subtitle Formats:** ass, ssa, sub. External subtitles can be scaled, moved, and color-changed.
- **Hard Disk Formats:** FAT16, FAT32, NTFS.

The player also features a breakpoint playback function, allowing you to resume media from where you left off.

## 7. MAINTENANCE

---

Proper care ensures the longevity of your media player.

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry, lint-free cloth to wipe the exterior of the device. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure the ventilation holes are not obstructed during operation to prevent overheating.

## 8. TROUBLESHOOTING

---

If you encounter issues with your media player, refer to the following common problems and solutions:

### No Power

- Ensure the power adapter is securely connected to both the player and a working wall outlet.
- Verify that the power outlet is functional.
- Press the power button on the device or remote control.

## No Video or Audio Output

- Check all cable connections (HDMI, AV, VGA) between the player and your display device.
- Ensure your television or monitor is set to the correct input source (e.g., HDMI 1, AV, VGA).
- If using AV, ensure all three RCA connectors (red, white, yellow) are connected to their corresponding ports.
- If using VGA, ensure separate audio connections are made if audio is desired.
- Check the volume level on both the media player and your display device.

## External Storage Device Not Recognized

- Ensure the USB drive or SD card is properly inserted into its respective slot.
- Try connecting a different USB drive or SD card to rule out an issue with the storage device itself.
- For external hard drives, ensure they are formatted to FAT16, FAT32, or NTFS.
- If an external hard drive requires external power, ensure it is connected to its own power source. Some hard drives may draw too much power for the player's USB port alone.
- Restart the media player and try reconnecting the storage device.

## Remote Control Not Working

- Ensure 2 AAA batteries are correctly inserted into the remote control. Replace batteries if necessary.
- Point the remote control directly at the front of the media player.
- Ensure there are no obstructions between the remote control and the player.

## Playback Issues (Jerky Video, Unsupported Format)

- Verify that the media file format is listed under the "Supported Media Formats" section (Section 6.4).
- Ensure the video bitrate is not excessively high, as this can cause choppy playback on some files.
- Try playing the file on another device to confirm the file itself is not corrupted.
- Ensure the external storage device is not faulty or too slow.

## 9. SPECIFICATIONS

---

<b>Brand</b>	VBESTLIFE
<b>Model</b>	1080P
<b>Color</b>	Black
<b>Product Type</b>	TV Decoder / Media Streamer
<b>Resolution</b>	1080p
<b>Connectivity Technology</b>	HDMI, USB
<b>Output Interfaces</b>	HDMI 1.3, Composite AV, VGA, Optical Audio
<b>Input Interfaces</b>	USB Host, SD/MMC/MS Card Slot
<b>Supported Hard Disk Formats</b>	FAT16, FAT32, NTFS
<b>Video Decoding Support</b>	H.263, H.264, VC-1, Mpeg1/2/4-HD, Xvid, WMV, RV
<b>Video Format Support</b>	AVI, TS/TP, M2TS, RM/RMVB, MOV, VOB, FLV, WMV

<b>Audio Encoding Support</b>	DTS, AC3, FLAC, AAC
<b>Audio Format Support</b>	MP3, OGG, WMA, APE
<b>Image Format Support</b>	JPEG, GIF, PNG, BMP
<b>Subtitle Format Support</b>	ass, ssa, sub
<b>Power Supply</b>	Input AC 100-240V 50/60Hz; Output DC 5.4V / 2A
<b>Operating Temperature</b>	-5°C to 50°C
<b>Remote Control Battery</b>	2 x AAA batteries (not included)

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your purchase or contact VBESTLIFE customer service through their official channels. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the [VBESTLIFE Brand Store on Amazon](#).