

Ninja CT680CO2SS

Ninja Intelli-Sense Kitchen System Blender CT680CO2SS Instruction Manual

Model: CT680CO2SS | Brand: Ninja

1. INTRODUCTION AND OVERVIEW

The Ninja Intelli-Sense Kitchen System Blender CT680CO2SS is a versatile appliance designed to simplify food preparation. It features a powerful 1200-watt smart base with an intuitive touchscreen display, capable of transforming into multiple high-performance appliances.

Key Features:

- **1200-Watt Smart Base:** Provides robust power for various tasks.
- **Intuitive Touchscreen Display:** Easy selection of programs and manual options.
- **8 Smart Programs Powered by Smart Vessel Recognition:** Automatically adjusts settings based on the attached vessel.
- **72 oz. Total Crushing Pitcher (64 oz. max liquid capacity):** Ideal for large batches of frozen drinks, smoothies, and ice crushing. Includes Stacked Blade Assembly.
- **8-cup Precision Processor:** Designed for chopping, pureeing, garnishing, and dough making. Features a feed chute lid.
- **Dough Blade Assembly:** Specifically for dough preparation in the processor bowl.
- **Reversible Slicing/Shredding Disc and Disc Spindle:** Expands food processing capabilities for slicing and shredding.
- **35-Recipe Inspiration Guide:** Included to help you explore various culinary creations.

2. SAFETY INFORMATION

Please read all instructions carefully before using your Ninja Intelli-Sense Kitchen System Blender. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not immerse the motor base in water or other liquids.
- Ensure the lid is securely locked before operating the appliance.

3. PRODUCT COMPONENTS

Your Ninja Intelli-Sense Kitchen System includes the following main components:

- **1200-Watt Smart Base:** The main power unit with touchscreen display.
- **72 oz. Total Crushing Pitcher:** Large capacity pitcher for blending.
- **Stacked Blade Assembly:** For use with the Total Crushing Pitcher.
- **8-cup Precision Processor Bowl:** For food processing tasks.
- **Feed Chute Lid:** For the Precision Processor Bowl.
- **Dough Blade Assembly:** For kneading dough in the processor bowl.
- **Reversible Slicing/Shredding Disc:** For slicing and shredding ingredients.
- **Disc Spindle:** To hold the slicing/shredding disc.



Figure 1: The Ninja Intelli-Sense Kitchen System Blender CT680CO2SS, showcasing the main motor base, the 72oz Total

4. SETUP INSTRUCTIONS

Before first use, wash all components (except the motor base) in warm, soapy water, then rinse and dry thoroughly. The motor base should be wiped clean with a damp cloth.

Assembling the Total Crushing Pitcher:

1. Place the motor base on a clean, dry, level surface.
2. Place the 72 oz. Total Crushing Pitcher onto the motor base, aligning the pitcher handle slightly to the right of the base. Rotate the pitcher clockwise until it clicks into place.
3. Carefully place the Stacked Blade Assembly onto the drive gear inside the pitcher.
4. Add your ingredients to the pitcher. Do not exceed the MAX LIQUID line.
5. Place the pitcher lid onto the pitcher and press down firmly until it clicks into place. The handle on the lid must be aligned with the pitcher handle.

Assembling the 8-cup Precision Processor Bowl:

1. Place the motor base on a clean, dry, level surface.
2. Place the 8-cup Precision Processor Bowl onto the motor base, aligning the bowl handle slightly to the right of the base. Rotate the bowl clockwise until it clicks into place.
3. For chopping/pureeing, carefully place the Chopping Blade Assembly onto the drive gear inside the bowl. For dough, use the Dough Blade Assembly. For slicing/shredding, place the Disc Spindle onto the drive gear, then attach the Reversible Slicing/Shredding Disc.
4. Add your ingredients to the bowl.
5. Place the Feed Chute Lid onto the processor bowl and press down firmly until it clicks into place. The handle on the lid must be aligned with the bowl handle.

5. OPERATING INSTRUCTIONS

The Ninja Intelli-Sense Kitchen System features Smart Programs and a Manual mode for precise control.

Smart Programs (Automatic Operation):

The Smart Vessel Recognition technology automatically displays a unique menu of Smart Programs for each attached vessel. These chef-designed programs are calibrated patterns of pausing, pulsing, and speed.

1. Ensure the desired vessel (pitcher or processor bowl) is correctly assembled and locked onto the motor base.
2. The touchscreen display will illuminate with available Smart Programs for that vessel (e.g., SMOOTHIE, ICE CRUSH, DOUGH, CHOP).
3. Select the desired Smart Program by touching its icon on the display. The program will begin automatically.
4. The program will run for a preset duration and stop automatically when complete.

Manual Mode (Variable Speed Control):

For custom control, use the Manual mode.

1. Ensure the vessel is correctly assembled and locked.

2. Select the 'Manual' option on the touchscreen display.
3. Use the dial to adjust the speed from 1 to 10.
4. Press the START/STOP button to begin or end blending/processing.
5. The PULSE button provides short bursts of power for quick chopping or mixing.

Example Uses:

- **Smoothies & Frozen Drinks:** Use the 72 oz. pitcher with the 'SMOOTHIE' or 'ICE CRUSH' Smart Program.
- **Chopping & Pureeing:** Use the 8-cup processor bowl with the Chopping Blade Assembly and 'CHOP' Smart Program.
- **Dough:** Use the 8-cup processor bowl with the Dough Blade Assembly and 'DOUGH' Smart Program.
- **Slicing & Shredding:** Use the 8-cup processor bowl with the Reversible Slicing/Shredding Disc.

Your browser does not support the video tag.

Video 1: A demonstration of a multi-functional food processor and blender combo, showing how to mince meat, knead dough, and prepare various juices. This video illustrates similar functionalities to the Ninja Intelli-Sense Kitchen System, including food processing and blending capabilities.

Your browser does not support the video tag.

Video 2: A concise overview of a food processor and blender combo, highlighting its various attachments and uses for different food preparation tasks. This video demonstrates the versatility of a kitchen system similar to the Ninja Intelli-Sense.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Ninja Intelli-Sense Kitchen System.

Dishwasher Safe Parts:

All removable parts, including the pitcher, processor bowl, lids, and blade assemblies, are dishwasher safe. Place them on the top rack of your dishwasher.

Hand Washing:

For hand washing, use warm, soapy water and a non-abrasive sponge or brush. Exercise extreme caution when handling blade assemblies as the blades are very sharp.

Motor Base Cleaning:

Wipe the motor base clean with a damp cloth. Do not immerse the motor base in water or any other liquid.

7. TROUBLESHOOTING

If your Ninja Intelli-Sense Kitchen System is not operating as expected, please refer to the following common issues and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into an outlet. Verify that the pitcher or processor bowl and its lid are correctly assembled and locked onto the motor base. The Smart Vessel Recognition system requires proper assembly to activate.
- **Ingredients are not blending/processing:** Ensure you have added sufficient liquid for blending. For thick mixtures, use the PULSE function or add more liquid. For food processing, ensure the correct

blade/disc is installed and ingredients are cut into appropriate sizes.

- **Motor sounds strained:** Do not overload the appliance. Reduce the amount of ingredients or add more liquid. If the motor continues to strain, turn off the appliance and allow it to cool down before resuming use.
- **Lid is difficult to remove:** Ensure the appliance is turned off and unplugged. Press the release button on the lid handle to unlock it, then lift the handle to remove the lid.

8. SPECIFICATIONS

Feature	Specification
Brand	Ninja
Model Number	CT680CO2SS
Power/Wattage	1200 watts
Capacity (Pitcher)	72 Fluid Ounces (64 oz. max liquid)
Capacity (Processor Bowl)	8-cup
Material	Plastic
Colour	Black
Product Dimensions	31.5 x 45.97 x 43.94 cm
Item Weight	7.58 kg
Power Source	Corded Electric
Special Features	Portable, Smart Programs, Touchscreen Display

9. WARRANTY AND SUPPORT

Your Ninja Intelli-Sense Kitchen System Blender CT680CO2SS comes with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or to order replacement parts, please visit the official Ninja website or contact their customer service department. Keep your purchase receipt and model number handy for faster service.