

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [gear4music](#) /

› [DISC DP-6 Digital Piano Bench Pack User Manual](#)

## gear4music DP-6

# DISC DP-6 Digital Piano Bench Pack

## USER MANUAL

Model: DP-6 | Brand: Gear4music

## Introduction

---

Thank you for choosing the Gear4music DISC DP-6 Digital Piano Bench Pack. This manual provides essential information for the setup, operation, and maintenance of your new digital piano. The DP-6 is an 88-key digital piano designed to offer a realistic piano experience with weighted action keys, making it suitable for both beginners and experienced players. It features a compact design, a range of voices, and versatile connectivity options.



*Image: The complete DISC DP-6 Digital Piano Bench Pack, including the white digital piano, matching bench, and headphones.*

Key features of your DP-6 Digital Piano include:

- **Weighted Action Keys:** Provides a realistic piano feel, allowing for dynamic control over sound intensity.
- **88 Full-Size Keys:** A complete keyboard for comprehensive musical expression.
- **Built-in Speakers & Headphone Jack:** Enables both shared listening and silent practice.
- **Compact and Detachable Design:** Easy to fit in various spaces and convenient for storage.
- **Extensive Connectivity:** Includes USB to host, line outputs, and MIDI in/out for versatile integration with other equipment.
- **16 Instrument Voices:** Offers a variety of sounds to explore different musical styles.

## Setup and Assembly

The DP-6 Digital Piano is designed for straightforward assembly. It comes with a detachable base for ease of setup and storage. Please follow these general guidelines for initial setup.



Image: Diagram showing the dimensions of the DP-6 Digital Piano: 139cm (width) x 78cm (height) x 42cm (depth).

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the packing list (not provided in this manual, refer to product packaging) are present.
2. **Base Assembly:** Assemble the piano stand/base according to the included assembly instructions (typically found in the product box). Ensure all screws are tightened securely for stability.
3. **Attaching the Piano Unit:** Carefully place the main piano unit onto the assembled base. Secure it using the provided fasteners. It is recommended to have assistance for this step due to the weight of the unit.
4. **Pedal Connection:** Connect the sustain pedal to the designated pedal input jack, usually located at the rear or underside of the piano.
5. **Power Connection:** Connect the power adapter to the DC IN jack on the rear of the piano and then plug it into a suitable power outlet.
6. **Bench Assembly:** Assemble the piano bench following its specific instructions.



*Image: Rear view of the DP-6 Digital Piano, highlighting the various input/output ports for power, pedals, and external devices.*

## Operating Instructions

---

This section details the basic functions and controls of your DP-6 Digital Piano.

### Power On/Off

Locate the "STANDBY/ON" button, typically on the left side of the keyboard. Press it to power on the instrument. Press it again to put the piano into standby mode.



*Image: Close-up view of the "STANDBY/ON" power button located on the left side of the DP-6 keyboard.*

## **Volume Control**

Adjust the overall volume using the "MASTER VOLUME" knob, usually located on the left side of the control panel. Turn clockwise to increase volume and counter-clockwise to decrease.



*Image: Detailed view of the DP-6 control panel, showing the Master Volume knob and various function buttons.*

## Selecting Voices

The DP-6 offers 16 different instrument voices. Use the dedicated voice buttons (e.g., GRAND PIANO, E. PIANO, STRINGS, etc.) on the control panel to select your desired sound. Some voices may have variations accessible through additional presses or a data control knob.



Image: Close-up of the voice selection section of the DP-6 control panel, displaying buttons for various instrument sounds like Grand Piano, Electric Piano, Strings, etc.

## Headphone Use

For silent practice, connect standard 3.5mm headphones to the headphone jack. The internal speakers will automatically mute when headphones are connected.

## Connectivity (USB, MIDI, Line Out)

The DP-6 features various connectivity options for expanded use:

- **USB to Host:** Connect the piano to a computer using a USB cable to use it as a MIDI controller or for recording MIDI data with compatible software.
- **MIDI In/Out:** Allows connection to other MIDI-compatible devices for advanced control or integration into a larger music setup.
- **Line Outputs:** Connect the piano to external amplification systems, mixers, or recording interfaces for live performance or studio recording.

## Recording and Tempo Control

The DP-6 includes basic recording functionality and tempo control. Refer to the specific buttons on the control panel for these features. The recording function allows you to capture your performances directly on the piano, while tempo control adjusts the speed of built-in metronome or rhythm functions (if available).

## Maintenance

Proper care will ensure the longevity and optimal performance of your DP-6 Digital Piano.

- **Cleaning:** Use a soft, dry cloth to wipe down the piano's surface. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners, solvents, or waxes, as these can damage the finish.
- **Key Cleaning:** Gently wipe the keys with a soft, slightly damp cloth. Do not use excessive moisture.
- **Storage:** When not in use for extended periods, store the piano in a cool, dry place away from direct sunlight and extreme temperature fluctuations. The detachable base allows for more compact storage if needed.
- **Avoid Liquids:** Keep liquids away from the piano to prevent damage to internal electronics.
- **Dust Cover:** Consider using a dust cover to protect the keys and control panel from dust accumulation.

## Troubleshooting

If you encounter issues with your DP-6 Digital Piano, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speakers.	<ul style="list-style-type: none"><li>• Volume too low.</li><li>• Headphones connected.</li><li>• Power issue.</li></ul>	<ul style="list-style-type: none"><li>• Increase MASTER VOLUME.</li><li>• Disconnect headphones.</li><li>• Ensure power adapter is securely connected and power outlet is active.</li></ul>
Keys not responding.	<ul style="list-style-type: none"><li>• Piano not powered on.</li><li>• Incorrect voice selected (e.g., silent voice).</li></ul>	<ul style="list-style-type: none"><li>• Press STANDBY/ON button.</li><li>• Select a different voice (e.g., GRAND PIANO).</li></ul>
Sustain pedal not working.	<ul style="list-style-type: none"><li>• Pedal not connected properly.</li><li>• Faulty pedal.</li></ul>	<ul style="list-style-type: none"><li>• Check pedal cable connection to the piano.</li><li>• Test with another compatible pedal if available.</li></ul>
Distorted sound.	<ul style="list-style-type: none"><li>• Volume too high.</li><li>• External device issues (if connected).</li></ul>	<ul style="list-style-type: none"><li>• Reduce MASTER VOLUME.</li><li>• Check connections and volume levels of any connected external devices.</li></ul>

If the problem persists after trying these solutions, please contact Gear4music customer support.

## Specifications

Below are the technical specifications for the Gear4music DP-6 Digital Piano:

<b>Model Name</b>	DP-6
<b>Brand</b>	Gear4music

<b>Number of Keys</b>	88
<b>Product Dimensions</b>	42 x 139 x 78 cm
<b>Weight</b>	Not specified
<b>Color</b>	White
<b>Instrument Type</b>	Piano, Digital Piano
<b>Voices</b>	16 (e.g., Grand Piano, E. Piano, Organ, Strings)
<b>Headphone Jack</b>	3.5mm Jack
<b>Connectivity Technology</b>	Auxiliary, MIDI USB
<b>Supported Software</b>	Standard MIDI Software
<b>Special Features</b>	Headphone Jack, Recording, Tempo Control
<b>Power Source</b>	Corded Electric

## Warranty and Support

Gear4music products are manufactured to high standards and undergo rigorous quality control. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Gear4music website.

For technical support, troubleshooting assistance beyond this manual, or spare parts, please contact Gear4music customer service. You can typically find contact information on the Gear4music website or on your purchase documentation.

**Online Resources:** [www.gear4music.com](http://www.gear4music.com)