

Savoy House RMT-DC-UNIVERSAL

Savoy House Universal Remote for DC Motor Fans - Instruction Manual

Model: RMT-DC-UNIVERSAL

- [Introduction](#) [Setup](#) [Operating Instructions](#) [Maintenance Support](#) [Troubleshooting](#) [Specifications](#) [Warranty &](#)

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Savoy House Universal Remote Control for DC Motor Fans (Model: RMT-DC-UNIVERSAL). Please read this manual thoroughly before using the product to ensure proper function and safety.

The Savoy House RMT-DC-UNIVERSAL remote control is designed to provide convenient wireless operation for compatible DC motor ceiling fans, allowing you to adjust fan speed, direction, and light settings.

2. SETUP

2.1 Package Contents

- Savoy House Universal Remote Control (RMT-DC-UNIVERSAL)
- Wall Mount Holder (if included)
- Mounting Screws (if included)
- AAA Batteries (not always included, check packaging)

2.2 Battery Installation

- The remote control requires AAA batteries for operation. Ensure correct polarity when inserting batteries.
1. Locate the battery compartment cover on the back of the remote control.
 2. Slide the cover open in the direction indicated by the arrow.
 3. Insert two (2) AAA batteries, matching the positive (+) and negative (-) terminals as shown inside the compartment.
 4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Front view of the Savoy House Universal Remote Control. It is white with gray buttons. From top to bottom, buttons include 'MAX', '+', '-', a fan direction toggle, a square stop button, and a light control button with a sun icon.

2.3 Pairing the Remote Control (if applicable)

Some DC motor fans may require pairing the remote control with the fan receiver. Refer to your specific fan's instruction manual for detailed pairing procedures. Typically, this involves:

- Turning off the power to the fan at the circuit breaker.
- Turning the power back on.
- Within a specific timeframe (e.g., 30-60 seconds), pressing and holding a designated button on the remote (often the "MAX" or "STOP" button) until the fan responds (e.g., light flashes, fan jogs).

Note: If your fan does not respond, consult the fan's manual or contact Savoy House customer support.

3. OPERATING INSTRUCTIONS

The Savoy House Universal Remote Control features several buttons for comprehensive control of your DC motor fan. Refer to the image above for button identification.

Remote Control Button Functions

Button	Function
MAX	Sets the fan speed to maximum.
+	Increases the fan speed.
-	Decreases the fan speed.
 (Fan Direction Toggle)	Reverses the fan blade direction (e.g., for summer downdraft or winter updraft). Press once to toggle direction.
 (Square Stop Button)	Turns the fan off.
 (Light Control)	Turns the fan light on or off. If the fan supports dimming, press and hold to adjust light brightness.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's range decreases or if the fan becomes unresponsive. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries. Dispose of used batteries according to local regulations.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Fan does not respond to remote.	- Dead or weak batteries. - Remote not paired with fan. - Obstruction between remote and fan receiver. - Power to fan is off.	- Replace batteries with new AAA batteries. - Refer to Section 2.3 for pairing instructions or consult your fan's manual. - Ensure clear line of sight. - Check circuit breaker and wall switch.
Fan operates intermittently.	- Low battery power. - Interference from other devices.	- Replace batteries. - Move away from other electronic devices that may cause interference.

Problem	Possible Cause	Solution
Light function not working.	- Light bulb is faulty or loose. - Light function not enabled on fan.	- Check and replace light bulb if necessary. - Ensure the fan's light kit is properly installed and connected.

If you continue to experience issues, please contact Savoy House customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	RMT-DC-UNIVERSAL
Brand	Savoy House
Color	White
Compatible Devices	DC Motor Fans
Connectivity Technology	Infrared
Number of Buttons	10
Battery Type	AAA (x2)
Manufacturer	Savoy House
UPC	822920279713

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Savoy House products are manufactured to high-quality standards. For specific warranty details regarding your RMT-DC-UNIVERSAL remote control, please refer to the warranty card included with your purchase or visit the official Savoy House website. Keep your proof of purchase for warranty claims.

7.2 Customer Support

If you have any questions, require technical assistance, or need to report an issue with your remote control, please contact Savoy House customer support. Contact information can typically be found on the Savoy House website or on the product packaging.

Online Support: www.savoyhouse.com

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07GDSPVM8>

More documents and user manuals: <https://manuals.plus/>