

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wohome](#) /
› [Wohome Sound Bar S88 Instruction Manual](#)

Wohome S88

Wohome Sound Bar S88 Instruction Manual

Model: S88

1. INTRODUCTION

Thank you for choosing the Wohome Sound Bar S88. This 20-inch soundbar is designed to enhance your audio experience for televisions, computers, and other compatible devices. Featuring Bluetooth 5.0, 3D surround sound, and multiple connectivity options, the S88 delivers clear and powerful audio. Please read this manual thoroughly before use to ensure proper operation and to maximize your enjoyment of the product.

2. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Wohome Sound Bar S88
- Remote Control (batteries not included)
- Power Adapter
- Optical Cable
- AUX Cable
- Wall Mount Kit (screws and anchors)
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your Wohome Sound Bar S88.



Image 1: Wohome Sound Bar S88 and its remote control.



Image 2: Rear panel of the soundbar displaying various input ports for connectivity.



Image 3: The included remote control for convenient operation of the soundbar.

4. SETUP

4.1 Placement

The soundbar can be placed on a cabinet below your TV or mounted on the wall. Ensure it is positioned centrally for optimal sound distribution.



Image 4: Examples of soundbar placement, either on a surface or wall-mounted.

4.2 Connecting to Your TV or Device

The Wohome Sound Bar S88 offers multiple ways to connect to your audio source. Choose the method that best suits your device.

- **HDMI-ARC Connection:** Connect an HDMI cable from the soundbar's HDMI-ARC port to your TV's HDMI-ARC port. This allows your TV remote to control the soundbar's volume and power.
- **Optical Connection:** Use an optical cable to connect the soundbar's OPTICAL port to your TV's optical output.
- **AUX Connection:** Connect an AUX cable from the soundbar's AUX port to your device's 3.5mm audio output.
- **Coaxial Connection:** Use a coaxial cable to connect the soundbar's COAXIAL port to your TV's coaxial output.
- **USB Playback:** Insert a USB drive into the USB port for direct audio playback.
- **Bluetooth Connection:** For wireless audio, enable Bluetooth on your device and pair with the soundbar (see Section 5.3 for details).

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button on the remote control or on the soundbar to turn the unit on or off.

5.2 Input Selection

Use the 'MODE' button on the remote control (Image 3) or the soundbar to cycle through input sources: HDMI-ARC, OPTICAL, AUX, COAXIAL, USB, and Bluetooth (BT).

5.3 Bluetooth Pairing

1. Turn on the soundbar and select 'BT' mode using the 'MODE' button. The LED indicator will flash, indicating it's in pairing mode.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select 'Wohome S88' from the list. Once connected, the LED indicator will stop flashing and remain solid.

5.4 Volume and Tone Control

Use the 'VOL+' and 'VOL-' buttons on the remote control (Image 3) to adjust the master volume. The remote also features dedicated buttons for adjusting bass and treble levels.

5.5 Sound Modes (EQs) and 3D Surround Sound

The soundbar features three equalizer (EQ) modes: Music, Dialogue, and Movie. These modes optimize audio for different content types. All three modes support 3D surround sound for an immersive listening experience. Select your preferred mode using the dedicated buttons on the remote control (Image 3).



Image 5: Visual representation of the three sound modes and 3D surround sound feature.

5.6 Media Playback Examples

The following videos demonstrate the soundbar in various usage scenarios, highlighting its audio capabilities.

Video 1: Demonstration of the soundbar connected to a turntable, showcasing its audio output for music playback.

Video 2: The soundbar in use with a television, illustrating enhanced audio for general viewing.

Video 3: A short clip demonstrating the soundbar's audio performance during a movie scene.

6. MAINTENANCE

To ensure the longevity and optimal performance of your soundbar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the soundbar has adequate ventilation and is not covered, to prevent overheating.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your soundbar, please refer to the following common problems and solutions:

- **No Power:**

- Ensure the power adapter is securely connected to both the soundbar and a working power outlet.
- Check if the power outlet is functional by plugging in another device.

- **No Sound:**

- Verify that the correct input source is selected on the soundbar.
- Check the volume level on both the soundbar and your connected device.
- Ensure all audio cables are securely connected.
- If using HDMI-ARC, confirm your TV's audio output settings are configured for external speakers.

- **Bluetooth Pairing Issues:**

- Make sure the soundbar is in Bluetooth pairing mode (LED flashing).
- Ensure your device's Bluetooth is enabled and within range (up to 10 meters).
- Try unpairing and re-pairing the device.

- **Remote Control Not Working:**

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the soundbar.

8. SPECIFICATIONS

Detailed technical specifications for the Wohome Sound Bar S88:

Feature	Specification
Model Name	S88
Speaker Type	Soundbar
Special Feature	Equalizer, 3D Surround Sound
Recommended Uses	For Televisions, Computers, Smartphones or Tablets
Compatible Devices	Personal Computer, Television
Product Dimensions	20 x 4 x 2.8 inches
Item Weight	7.92 pounds (3.6 Kilograms)
Surround Sound Channel Configuration	5.1 (Virtual)
Connectivity Technology	Bluetooth 5.0, HDMI-ARC, AUX, Coaxial, USB, Optical
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Speaker Maximum Output Power	80 Watts
Control Method	Remote

9. WARRANTY AND SUPPORT

Wohome provides a limited warranty for this product. For specific warranty details, please refer to the documentation

included with your purchase. We also offer lifetime technical support for the Wohome Sound Bar S88. If you have any questions, require assistance, or encounter issues not covered in this manual, please do not hesitate to contact us via Amazon message or the contact information provided on the service card included in your package.