

Amazon Basics PS75EF

User Manual

AMAZON BASICS DUAL FIREARM SAFETY DEVICE WITH PROGRAMMABLE ELECTRONIC KEYPAD LOCK

Model: PS75EF

Important Safety Information

Read all instructions carefully before using this product. Failure to follow these instructions may result in injury or damage to the device. Keep this manual for future reference.

- Always store firearms unloaded and locked.
- Keep keys and access codes in a secure location, away from children and unauthorized users.
- Do not store the device in areas with extreme temperatures or high humidity.
- Ensure the device is securely mounted if intended for floor mounting.

Package Contents

- Amazon Basics Dual Firearm Safety Device
- Backup Keys (2)
- Mounting Hardware (Screws, Washers)
- User Manual

Product Overview

The Amazon Basics Dual Firearm Safety Device is designed to provide secure storage for firearms, valuables, or documents. It features a programmable electronic keypad for quick access and a traditional key lock for backup entry. The interior is lined with foam to protect contents.



Figure 1: Front view of the Amazon Basics Dual Firearm Safety Device, showing the electronic keypad and key lock.



Figure 2: Interior view of the safety device, showing the foam lining and the backup keys inserted into the lock.



Figure 3: Close-up of the electronic keypad, highlighting the numbered buttons and the Amazon Basics logo.

Setup

1. Initial Access

Upon first use, access the device using the provided backup keys. Insert one of the keys into the keyhole on the front of the device and turn it to unlock. The door will automatically open.

2. Battery Installation

The electronic keypad requires batteries (not included). Locate the battery compartment, typically inside the door or on the back panel. Insert the required number and type of batteries (e.g., 4 AA batteries) according to the polarity indicators.

3. Setting Your Personal Access Code

1. With the door open, locate the programming button (often a small red or green button) inside the device.

2. Press the programming button. The keypad will typically beep or an indicator light will illuminate.
3. Enter your desired 4-8 digit access code on the keypad.
4. Press the programming button again to confirm. The device should beep or flash to indicate successful programming.
5. *Test the new code with the door open before closing it.* If the code works, close the door and test it again.

Note: If the code is not accepted, repeat the programming steps. Keep your access code confidential and memorable.

4. Mounting the Device (Optional)

The device features pre-drilled holes for floor mounting to enhance security. Use the included hardware to secure the device to a solid surface. Ensure the mounting location is stable and discreet.



Figure 4: The safety device securely placed on a shelf, demonstrating a typical installation scenario.

1. Opening with Electronic Keypad

1. Enter your programmed access code on the keypad.
2. The device will beep or an indicator light will confirm the correct code.
3. The door will automatically open.

2. Opening with Backup Key

In case of battery failure or forgotten code, use the backup key:

1. Insert the backup key into the keyhole.
2. Turn the key to unlock the device.
3. The door will automatically open.

3. Closing the Device

To close the device, simply push the door firmly until it latches shut. The electronic lock will automatically engage.



Figure 5: The safety device open on a shelf, showing its capacity for storing items like a passport and a small firearm.

Maintenance

- **Battery Replacement:** Replace batteries annually or when the low battery indicator (if present) illuminates. Use only the recommended battery type.
- **Cleaning:** Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Keyhole Maintenance:** Periodically check the keyhole for obstructions. Do not lubricate the keyhole unless specifically recommended by the manufacturer.

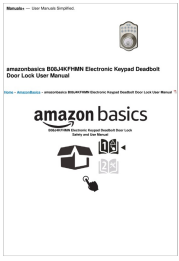


Troubleshooting

Problem	Possible Cause	Solution
Keypad does not respond.	Dead or low batteries.	Replace batteries. Use backup key to open if necessary.
Door does not open after entering code.	Incorrect code entered; batteries low; mechanism jammed.	Re-enter code carefully. Replace batteries. Use backup key. Check for obstructions.
Cannot program new code.	Incorrect programming sequence; batteries low.	Review "Setting Your Personal Access Code" section and repeat steps. Ensure batteries are fresh.
Backup key does not work.	Key is bent or damaged; keyhole obstructed.	Inspect key for damage. Check keyhole for debris. Do not force the key.

Specifications

Feature	Detail
Model Number	PS75EF
Exterior Dimensions (LxWxH)	11.8 x 9.8 x 3 inches
Interior Dimensions (LxWxH)	11.7 x 7.4 x 2.8 inches
Weight	8.48 pounds (3.85 Kilograms)
Lock Type	Electronic Keypad, Key
Material	16-gauge Powder-Coated Steel, Plastic

Feature	Detail
Mounting Type	Floor Mount (hardware included)
UPC	852368006497

	<p>Amazon Basics B08J4KFHMN Electronic Keypad Deadbolt Door Lock User Manual</p> <p>This document provides a comprehensive user manual for the Amazon Basics B08J4KFHMN Electronic Keypad Deadbolt Door Lock, covering installation, operation, troubleshooting, and safety guidelines.</p>
	<p>Amazon Basics Home Safe User Manual</p> <p>Comprehensive user manual for the Amazon Basics Home Safe, detailing setup, operation, security features, and maintenance for model numbers B078K4W8N9, B078K44SG4, and B078K2YPRW.</p>
	<p>Amazon Basics Home Safe User Guide</p> <p>Comprehensive guide for setting up and using your Amazon Basics Home Safe, including instructions on opening, setting passwords, master codes, and maintenance.</p>