

Andis 30245

Andis 30245 1875W Tourmaline Ceramic Ionic Pro Dry Professional Hair Dryer User Manual

Model: 30245

INTRODUCTION

Thank you for choosing the Andis 30245 1875W Tourmaline Ceramic Ionic Pro Dry Professional Hair Dryer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair dryer. Please read all instructions carefully before use.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, do not use this appliance near water. Do not reach for an appliance that has fallen into water. Unplug immediately.

Your hair dryer is equipped with a Ground Fault Circuit Interrupter (GFCI) plug. This safety device is designed to protect you from electric shock. If the GFCI trips, press the 'RESET' button to restore power. Always test the GFCI before each use by pressing the 'TEST' button, then 'RESET'.

- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Keep away from water or other liquids.
- Do not operate any appliance with a damaged cord or plug.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.

PACKAGE CONTENTS

- Andis 1875W Tourmaline Ceramic Ionic Pro Dry Professional Hair Dryer
- Styling Pick Attachment
- Concentrator Attachment

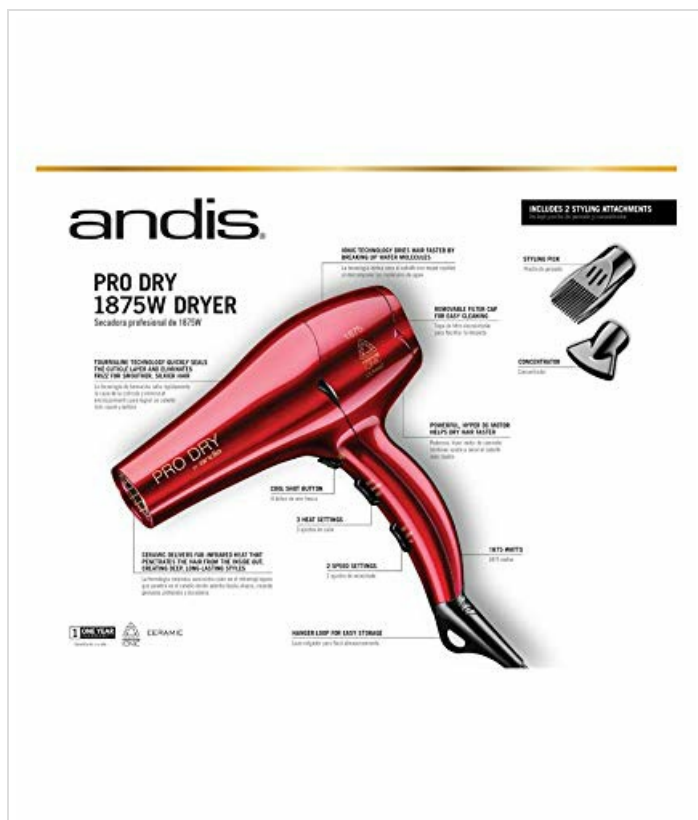


Image: The Andis 30245 hair dryer shown with its two included attachments: a styling pick and a concentrator nozzle.

SETUP

1. Ensure your hands are dry before handling the appliance.
2. Plug the hair dryer into a standard 110V electrical outlet.
3. To attach an accessory, align the attachment with the nozzle of the dryer and push it firmly into place. Ensure it is securely fastened before use.
4. To remove an accessory, allow the dryer to cool completely, then gently pull the attachment off.

OPERATING INSTRUCTIONS

The Andis 30245 hair dryer features multiple settings for customized styling.



Image: A close-up view of the Andis 30245 hair dryer, highlighting the control switches for speed (OFF, LOW, HI) and heat (COOL, WARM, HOT), along with the separate cool shot button.

Speed Settings

Use the speed switch located on the handle to select your desired airflow:

- **OFF:** Turns the appliance off.
- **LOW:** Provides gentle airflow for delicate or fine hair, or for precise styling.
- **HI:** Delivers powerful airflow for fast drying of thick or coarse hair.

Heat Settings

Use the heat switch to select your desired temperature:

- **COOL:** For setting styles and adding shine.
- **WARM:** For general drying and styling.
- **HOT:** For fast drying and initial styling of wet hair.

Cool Shot Button

Press and hold the snowflake button for an instant burst of cool air. This helps to set your style and lock in shine after drying with heat.

Using Attachments

- **Concentrator:** Directs airflow for precise styling and smoothing. Ideal for straightening hair sections.
- **Styling Pick:** Helps to lift and add volume to hair, especially effective for curly or textured hair.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

Cleaning the Air Filter

The removable filter cap at the rear of the dryer should be cleaned regularly to prevent lint and hair buildup, which can reduce airflow and cause overheating.

1. Ensure the hair dryer is unplugged and completely cool.
2. Gently twist or pull off the rear filter cap (refer to product diagram if unsure).
3. Remove any accumulated lint or hair using a soft brush or by hand.
4. Replace the filter cap, ensuring it clicks securely into place.

General Cleaning

Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

- **Dryer not turning on:** Check if the power cord is securely plugged into the outlet. Ensure the GFCI plug has not tripped (press 'RESET' if necessary).
- **Low airflow or overheating:** The air filter may be clogged. Refer to the 'Cleaning the Air Filter' section for instructions.
- **Attachments falling off:** Ensure attachments are pushed firmly onto the nozzle. If they become loose over time, they may need replacement.

If problems persist, contact Andis customer support.

SPECIFICATIONS

- **Model Number:** 30245
- **Wattage:** 1875 watts
- **Technology:** Tourmaline Ceramic Ionic
- **Heat Settings:** 3 (Cool, Warm, Hot)
- **Speed Settings:** 2 (Low, High)
- **Special Features:** Cool Shot Button, High velocity DC motor, Anti-slip soft touch housing
- **Power Source:** Corded Electric
- **Product Dimensions:** 9.37 x 12 x 3.87 inches
- **Weight:** 2.09 Pounds
- **Color:** Old Red
- **Material:** Ceramic



Image: The Andis 30245 1875W Tourmaline Ceramic Ionic Pro Dry Professional Hair Dryer in its red finish, showcasing its sleek design.

WARRANTY AND SUPPORT

Andis products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included in your product packaging or visit the official Andis website. Keep your purchase receipt as proof of purchase for any warranty claims.