

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Frigidaire](#) /

› [Frigidaire FFCD2413US 24" Built-in Dishwasher with 3 Wash Cycles, 14 Place Settings and Energy Star Certified, in Stainless Steel](#)

Frigidaire FFCD2413U

Frigidaire FFCD2413US 24" Built-in Dishwasher Instruction Manual

Model: FFCD2413U | Brand: Frigidaire

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Frigidaire FFCD2413US 24-inch Built-in Dishwasher. Please read all instructions carefully before using your appliance to ensure safe and efficient operation. This dishwasher is designed to provide a thorough clean with its three separate spray arms and offers a capacity of up to 14 place settings. It includes features such as delay start, cycle status indicators, a filtration system, and a heated drying system, and is Energy Star certified for energy efficiency.

SAFETY INFORMATION

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Do not touch the heating element during or immediately after use.
- Do not allow children to play in or on the dishwasher.
- Use only detergents or rinse agents recommended for dishwashers.
- Keep sharp items pointed down to avoid injury.
- Ensure the dishwasher is properly grounded.

SETUP

Dimensions and Electrical Requirements

The Frigidaire FFCD2413US dishwasher has an exterior width of 24 inches, a cutout depth of 24 inches, and a cutout height of 35.25 inches. The overall dimensions are approximately 25"D x 24"W x 35"H. It operates on 120 Volts, 15 Amps, and 60 Hz frequency. Proper electrical and plumbing connections are essential for safe operation.




Front view of the Frigidaire FFCD2413US 24-inch Built-in Dishwasher in Stainless Steel. This image shows the sleek stainless steel exterior and the top-mounted control panel.

Energy Efficiency

This dishwasher is Energy Star certified, indicating its efficiency in water and energy consumption. The estimated yearly energy cost is approximately \$35 when used with an electric water heater, and \$24 with a natural gas water heater, based

on 270 kWh estimated yearly electricity use.

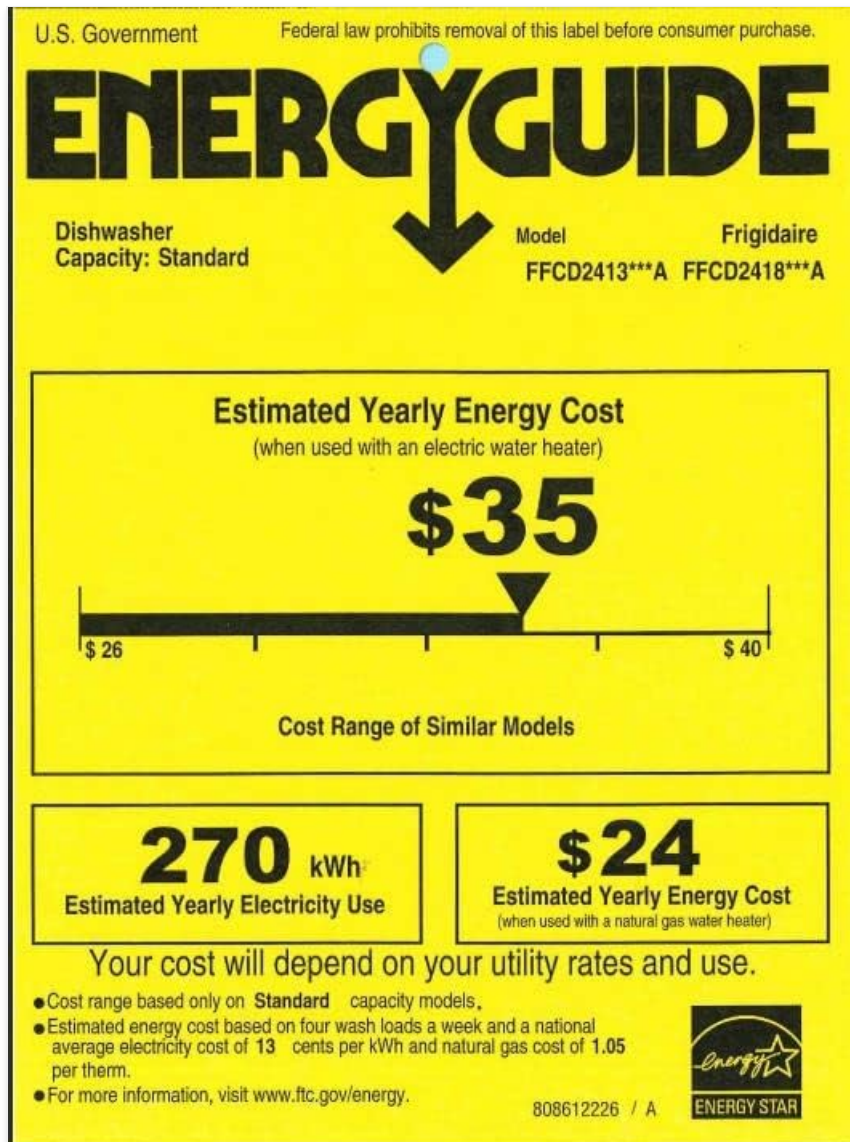

Energy Guide label for the Frigidaire FFCD2413US dishwasher, showing estimated yearly energy cost and electricity use, highlighting its Energy Star certification.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel is located on the top edge of the dishwasher door, providing easy access to cycle and option selections. Status indicators illuminate to show when the dishwasher is washing, drying, or clean.



Close-up view of the Frigidaire dishwasher's control panel, displaying the various cycle and option buttons along the top edge of the door.

Loading the Dishwasher

The dishwasher features an upper rack, a lower rack, and a SpaceWise Silverware Basket, allowing for flexible loading of up to 14 place settings. Ensure dishes are loaded properly to allow water to reach all surfaces for optimal cleaning.



Interior view of the Frigidaire FFCD2413US dishwasher, showcasing the upper and lower racks, and the dedicated silverware basket for efficient loading.

Wash Cycles

Select the appropriate wash cycle based on the soil level of your dishes:

- **PowerPlus (Heavy):** For heavily soiled dishes and pots.
- **Normal:** For regularly soiled dishes.
- **Light:** For lightly soiled dishes or rinse-only needs.

Wash Options

Enhance your wash cycle with these available options:

- **Heated Dry:** Utilizes a heating element to ensure dishes are thoroughly dry.
- **No Heat Dry:** Dries dishes without heat, saving energy.
- **Hi-Temp Wash:** Increases water temperature for improved cleaning performance.
- **Delay Start:** Allows you to set the dishwasher to start up to 4 hours in advance, running on your schedule.

CARE AND MAINTENANCE

Filtration System

The dishwasher is equipped with a self-cleaning filtration system designed to eliminate food particles, contributing to cleaner dishes and preventing clogs. Regular checks and occasional cleaning of the filter may be necessary depending on usage.

Cleaning the Interior and Exterior

Wipe the exterior with a soft, damp cloth. For the interior, periodically run a dishwasher cleaner or a cycle with white vinegar to remove mineral buildup and odors.

TROUBLESHOOTING

Before calling for service, review this section for common issues and their solutions.

| Problem | Possible Cause | Solution |
|---------------------------|--|--|
| Dishwasher does not start | Door not latched; Power supply issue; Cycle not selected | Ensure door is fully closed; Check circuit breaker; Select a wash cycle and press Start. |
| Dishes not clean | Improper loading; Clogged spray arms; Insufficient detergent | Reload dishes correctly; Clean spray arm nozzles; Use recommended amount of detergent. |
| Water not draining | Clogged drain hose; Clogged filter | Check and clear drain hose; Clean the filtration system. |
| Dishwasher leaks | Improperly seated door gasket; Too much detergent | Inspect and clean door gasket; Reduce detergent amount. |

TECHNICAL SPECIFICATIONS

| Specification | Detail |
|----------------------------|--------------------|
| Brand | Frigidaire |
| Model Name | FFCD2413U |
| Form Factor | Built-In |
| Finish Type | Stainless steel |
| Product Dimensions (DxWxH) | 25"D x 24"W x 35"H |
| Item Weight | 83.6 pounds |
| Capacity | 14 Place Settings |
| Voltage | 120 Volts |
| Operating Frequency | 60 Hz |

| Specification | Detail |
|---------------------|-------------|
| Number of Cycles | 3 |
| Noise Level | 60 dB |
| Certification | Energy Star |
| Special Feature | Delay Start |
| Included Components | Dishwasher |

WARRANTY AND CUSTOMER SUPPORT

Your Frigidaire FFCD2413US dishwasher comes with a manufacturer's warranty. For specific warranty details, including coverage period and terms, please refer to the documentation included with your purchase or visit the official Frigidaire website. For technical assistance, troubleshooting, or to schedule service, please contact Frigidaire customer support. You can often find contact information on the manufacturer's website or through your retailer.

For general customer support inquiries related to your purchase, you may also visit the [Amazon Customer Support](#) page.