



Manuals.plus /

› Panasonic /

› Panasonic 23L Convection Microwave Oven NN-CT36HBFDDG User Manual

Panasonic NN-CT36HBFDDG

Panasonic 23L Convection Microwave Oven User Manual

Model: NN-CT36HBFDDG

1. INTRODUCTION

Thank you for purchasing the Panasonic 23L Convection Microwave Oven, model NN-CT36HBFDDG. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy, observe the following basic precautions:

- Read all instructions before using the appliance.
- Do not operate the oven when empty.
- Use only microwave-safe cookware.
- Do not heat sealed containers, as they may explode.
- Supervise children closely when the oven is in use.
- Do not attempt to service or repair the oven yourself. Refer all servicing to qualified service personnel.
- Ensure proper ventilation around the appliance.
- This appliance must be grounded. Connect only to a properly grounded outlet.

WARNING HIGH VOLTAGE: This appliance must be serviced by a professional. Do not open. No user-serviceable parts inside.



Image: Rear view of the microwave oven, displaying a high voltage warning label and power cord.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all the following items are included:

- Panasonic 23L Convection Microwave Oven (NN-CT36HBFDG)
- User Manual
- Warranty Card
- Extended Warranty Card
- Round Wire Rack
- Glass Tray

- Crispy Tawa

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Panasonic microwave oven.

4.1 Front View



Image: Front view of the Panasonic 23L Convection Microwave Oven in black, featuring a dark glass door with a floral design and a control panel on the right.

4.2 Interior View



Image: Interior view of the Panasonic microwave oven with the door open, revealing the glass turntable and internal cavity. The control panel is visible on the right.

4.3 Control Panel



Image: Detailed view of the control panel, featuring a digital display, buttons for Micro Power, Grill, Convection, Combination, Auto Defrost, Timer/Clock, and various auto-cook menus like Indian Menu, Zero Oil Recipes, and Vapor Clean.

4.4 Dimensions



Auto High Med Low

10.00 kg
°C

Def   

CONVECTION



Micro Power



Grill

 


Convection

10
min

1
min

10
sec



Combination

Auto
Defrost

Timer/
Clock

Express

Indian
Menu

Fermen-
tation

Starters

Tandoori
Menu

Gourmet

Zero Oil
Recipes

Kid's
Menu


Dessert

▲
Up

▼
Down

Vapor
Clean

126 Auto Menu


Stop/Reset


Start

Image: A diagram showing the external dimensions of the Panasonic microwave oven: 48.6 cm (width), 40.5 cm (depth), and 29.2 cm (height).

5. SETUP

Follow these steps to set up your microwave oven for first use:

1. **Unpacking:** Carefully remove all packaging materials and accessories. Check for any damage.
2. **Placement:** Place the oven on a flat, stable surface strong enough to hold its weight. Ensure there is adequate ventilation space around the oven (at least 10 cm at the back, 15 cm on the sides, and 30 cm above). Do not block any ventilation openings.
3. **Turntable Assembly:** Place the roller ring in the center of the oven cavity. Position the glass tray securely on top of the roller ring.
4. **Power Connection:** Plug the power cord into a grounded 230V, 50Hz electrical outlet.
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth.

6. OPERATING INSTRUCTIONS

Your Panasonic microwave oven offers various cooking modes. Refer to the control panel image in Section 4.3 for button locations.

6.1 Basic Microwave Cooking

1. Place food in a microwave-safe dish on the glass tray.
2. Close the oven door.
3. Press the **Micro Power** button repeatedly to select the desired power level (e.g., High, Med, Low).
4. Use the **10 min**, **1 min**, and **10 sec** buttons to set the cooking time.
5. Press **Start** to begin cooking.

6.2 Convection Cooking

Convection mode uses a fan to circulate hot air, ideal for baking and roasting.

1. Place food on the wire rack or crispy tawa.
2. Press the **Convection** button.
3. Use the **Up** or **Down** buttons to set the desired temperature.
4. Set the cooking time using the time buttons.
5. Press **Start**. The oven will preheat to the set temperature. Once preheated, an alert will sound. Place the food inside and press **Start** again to continue cooking.

6.3 Grill Cooking

Use the grill function for browning and toasting.

1. Place food on the wire rack.
2. Press the **Grill** button.
3. Set the cooking time using the time buttons.

4. Press **Start**.

6.4 Combination Cooking

Combination modes combine microwave, grill, and/or convection for faster and more versatile cooking.

1. Press the **Combination** button repeatedly to select the desired combination mode.
2. Set the cooking time.
3. Press **Start**.

6.5 Auto Cook Menu

The oven features 126 preset auto-cook menus for various dishes.

1. Press the specific menu button (e.g., **Indian Menu, Zero Oil Recipes, Kids' Menu, Dessert, Starters, Tandoori Menu, Gourmet**).
2. Use the **Up** or **Down** buttons to select the desired recipe number from the internal menu list (often printed on the oven door frame).
3. Enter the food weight if prompted, using the **Up** or **Down** buttons.
4. Press **Start**.

6.6 Auto Defrost

This function allows for quick and efficient defrosting based on food type and weight.

1. Press the **Auto Defrost** button.
2. Use the **Up** or **Down** buttons to select the food category.
3. Enter the food weight.
4. Press **Start**.

6.7 Timer/Clock

To set the current time or use the timer function:

- Press the **Timer/Clock** button.
- Follow the on-screen prompts or refer to the detailed instructions in the full user manual for setting the clock or kitchen timer.

7. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your oven.

7.1 General Cleaning

- Always unplug the oven before cleaning.
- Wipe the interior and exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners.
- Clean the glass tray and roller ring with warm, soapy water. They are typically dishwasher safe.
- Wipe the door seal and adjacent parts regularly to remove spills and crumbs.

7.2 Vapor Clean Function

The **Vapor Clean** function assists in loosening food residue inside the oven for easier cleaning.

1. Place a microwave-safe bowl of water inside the oven.
2. Press the **Vapor Clean** button.
3. Press **Start**. The steam generated will help soften stubborn stains.
4. After the cycle, carefully remove the bowl and wipe the interior with a damp cloth.

8. TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food not cooking evenly	Improper stirring/turning; Food not covered; Incorrect power level/time.	Stir or turn food halfway through cooking; Cover food with a microwave-safe lid or plastic wrap; Adjust power level and cooking time.
Display shows an error code	Internal malfunction.	Unplug the oven for a few minutes, then plug it back in. If the error persists, contact customer support.
Light bulb not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

For issues not listed here, or if problems persist, please contact Panasonic customer support.

9. SPECIFICATIONS

Key technical specifications for the Panasonic NN-CT36HBFDD Convection Microwave Oven:

Feature	Specification
Model Number	NN-CT36HBFDG
Capacity	23 Litres
Oven Cooking Mode	Convection
Microwave Power Output	800 Watts
Voltage	230 Volts
Fuel Type	Electric
Color	Black
Material	Iron
Item Weight	13.8 kg
Product Dimensions (LxWxH)	43.6 x 53.6 x 33 Centimeters
Special Features	Auto Cook, Turntable, Vapor Clean, Zero Oil Recipes

10. WARRANTY AND SUPPORT

Your Panasonic 23L Convection Microwave Oven (NN-CT36HBFDG) comes with a **1-year warranty** on the product. Please refer to the included Warranty Card and Extended Warranty Card for detailed terms and conditions.

For customer assistance, service, or warranty claims, please contact Panasonic customer support:

- **Toll-Free Numbers:** 1800 103 1333, 1800 108 1333
- **Email:** HELPLINE@IN.Panasonic.com

Please have your model number (NN-CT36HBFDG) and purchase details ready when contacting support.