

[Manuals.plus](#) /

> [KRUPS](#) /

> KRUPS Pro Aroma KM303810 Drip Coffee Maker Instruction Manual

## KRUPS KM303810

# KRUPS Pro Aroma KM303810 Drip Coffee Maker Instruction Manual

Model: KM303810

## INTRODUCTION

The KRUPS Pro Aroma KM303810 is a drip coffee maker designed for brewing aromatic coffee. This appliance features a 1-liter capacity thermal carafe, ensuring your coffee remains hot for an extended period. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your coffee maker.





Image: Front view of the KRUPS Pro Aroma KM303810 Drip Coffee Maker.

---

## IMPORTANT SAFETY INSTRUCTIONS

Please read and follow all safety instructions carefully before using the appliance to prevent personal injury or damage. Keep this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Always unplug the appliance from the power outlet when not in use, before cleaning, or in case of malfunction.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Use the appliance only for its intended household purpose.
- Avoid contact with hot surfaces. Use handles or knobs.

---

## SETUP

### 1. Unpacking

Carefully remove the coffee maker and all accessories from the packaging. Dispose of packaging materials responsibly.

## 2. Initial Cleaning

Before first use, clean all removable parts (carafe, filter holder) with warm soapy water. Run two full cycles with only water (no coffee) to rinse the internal components.

## 3. Placement

Place the coffee maker on a stable, flat, heat-resistant surface, away from water sources and heat. Ensure adequate ventilation around the appliance.





Image: Side view of the coffee maker, showing its compact design.

## OPERATING INSTRUCTIONS

### 1. Filling the Water Tank

Open the lid of the water tank. Fill the water tank with fresh, cold water up to the desired level, using the water level indicator on the side of the appliance. Do not exceed the 'MAX' mark.





Image: Close-up of the front water level indicator, showing markings for cups.

## 2. Adding Coffee Grounds

Open the filter holder by rotating it outwards. Place a size #6 paper filter (or the reusable filter if included) into the filter holder. Add the desired amount of ground coffee. For best results, use approximately one tablespoon of coffee per cup (150ml).



Image: The swivel filter holder opened, showing a paper filter with coffee grounds.

### 3. Placing the Thermal Carafe

Ensure the thermal carafe is correctly positioned on the warming plate beneath the filter holder. The anti-drip system will only function properly if the carafe is in place.

KRUPS  
PRO AROMA

MAX  
12  
8  
6 | 9  
4 | 6  
2 | 3





Image: Illustration demonstrating the anti-drip system, preventing coffee from dripping when the carafe is removed.

#### **4. Starting the Brewing Cycle**

Plug the appliance into a power outlet. Press the On/Off button to start the brewing cycle. The indicator light will illuminate. The coffee will begin to brew and drip into the thermal carafe.



Image: Close-up of the illuminated On/Off power button.

## 5. After Brewing

Once the brewing cycle is complete, the appliance will automatically switch off. The thermal carafe is designed to keep coffee hot for up to 4 hours. You can serve coffee directly from the carafe.

## MAINTENANCE AND CLEANING

### 1. Daily Cleaning

- Unplug the coffee maker and allow it to cool completely before cleaning.
- Wash the thermal carafe, filter holder, and lid with warm soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners or scourers.

### 2. Descaling

Over time, mineral deposits (limescale) can build up in your coffee maker, affecting performance and coffee taste. Descale your appliance regularly, depending on water hardness and frequency of use (e.g., every 2-3 months).

- Use a commercially available descaling solution suitable for coffee makers, following the manufacturer's instructions.
- Alternatively, you can use a solution of white vinegar and water (1 part vinegar to 2 parts water).
- Run a full brewing cycle with the descaling solution (without coffee).
- After descaling, run at least two full cycles with fresh water to rinse out any residual descaling solution.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; no water in tank; power button not pressed.	Check power connection; fill water tank; press On/Off button.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio.	Adjust the amount of coffee grounds to your preference.
Coffee overflows from the filter holder.	Too much coffee grounds; filter clogged; carafe not correctly placed.	Reduce coffee quantity; ensure filter is not clogged; check carafe position.
Water leaks from the appliance.	Water tank overfilled; carafe not correctly placed; anti-drip valve blocked.	Do not exceed MAX fill line; ensure carafe is seated properly; clean anti-drip valve.
Coffee is not hot enough.	Appliance needs descaling.	Perform a descaling cycle.

## TECHNICAL SPECIFICATIONS

**Brand:** KRUPS

**Model:** KM303810

**Capacity:** 1 Liter (up to 10 cups)

**Color:** Black / Steel

**Power:** 800 W

**Dimensions (D x W x H):** 24.3 cm x 26.5 cm x 40.2 cm

**Weight:** 2.33 kg

**Material:** Plastic (housing), Stainless steel (thermal carafe interior)

**Filter Type:** Reusable filter or #6 paper filter

**Special Features:** Automatic shut-off, Front water level indicator, Anti-drip system, Thermal carafe (keeps warm for up to 4 hours)



Image: Diagram showing the dimensions of the KRUPS Pro Aroma KM303810 coffee maker.

## WARRANTY INFORMATION

This KRUPS Pro Aroma KM303810 coffee maker comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal household use.

For detailed terms and conditions, please refer to the official warranty document:

[Download Warranty \(PDF\)](#)

Please retain your proof of purchase for warranty claims.

---

## CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report a problem with your KRUPS Pro Aroma KM303810 coffee maker, please contact KRUPS customer service.

You can find contact information and further support resources on the official KRUPS website or through your local retailer.

[Visit the KRUPS Store on Amazon](#)

---