

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VTech](#) /

> [VTech VT1091 Cordless Phone User Manual](#)

VTech VT1091

VTech VT1091 Cordless Phone User Manual

Model: VT1091

INTRODUCTION

Thank you for purchasing the VTech VT1091 Cordless Phone. This manual provides essential information for setting up, operating, and maintaining your new phone. Please read these instructions carefully to ensure proper use and to fully benefit from its features.

PACKAGE CONTENTS

Before you begin, ensure all items are present in your package:

- Cordless Handset
- Base Unit
- Power Adapter for Base Unit
- Telephone Line Cord
- Rechargeable Batteries (pre-installed or separate)
- User Manual (this document)



Image: The VTech VT1091 cordless phone handset resting in its base unit, showing the front view of the keypad and screen.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards to open.
3. Insert the supplied rechargeable batteries, observing the correct polarity (+ and -).
4. Replace the battery compartment cover.

2. Connecting the Base Unit

1. Connect one end of the telephone line cord to the TEL LINE jack on the back of the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Connect the small end of the power adapter to the DC IN jack on the back of the base unit.
4. Plug the large end of the power adapter into a standard electrical outlet.



Image: Rear view of the VTech VT1091 base unit, showing the ports for the telephone line cord and the power adapter.

3. Charging the Handset

Place the handset on the base unit with the display facing forward. The handset will begin charging. For optimal battery performance, allow the handset to charge for at least 16 hours before initial use.

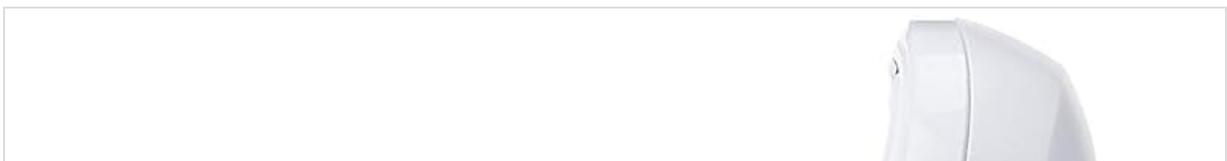




Image: Side view of the VTech VT1091 cordless phone handset securely placed in its charging base.

KEY FEATURES

- **Amplification:** Amplification of incoming sounds by up to 30 decibels.
- **Ultra-low Radiation Mode:** Operates with reduced radiation levels.
- **BOOSTER Button:** One-touch button for easy sound amplification.
- **Large Keypad:** Big buttons with backlit keypad for improved visibility.
- **Backlit LCD Display:** Large display with orange backlight.
- **Handset Speakerphone:** For hands-free communication.
- **Page/Handset Locator:** Helps locate a misplaced handset.
- **Auto Answer/Keypad Lock:** Convenient call handling and security features.
- **Alarm/Secrecy:** Includes alarm function and call secrecy feature.
- **GAP Compliant:** Compatible with other GAP-enabled DECT devices.
- **Phonebook Directory:** 20 name and number entries.
- **Caller ID:** Displays the last 10 caller numbers.
- **Redial:** Stores the last 5 numbers dialed.
- **Ringer Melodies:** 10 selectable ringer melodies (5 polyphonic and 5 standard).
- **Battery Life:** Approximately 10 hours talk time / 100 hours standby time.
- **Memory Buttons:** 3 one-touch memory buttons.
- **Speed Dial:** 8 number (2-9) speed dial memories.
- **Hearing Aid Compatible:** Designed for use with hearing aids.





Image: Close-up of the VTech VT1091 handset, highlighting the large backlit keypad, LCD display, and dedicated function buttons.

OPERATING INSTRUCTIONS

Making a Call

1. Press the **TALK** button to get a dial tone.
2. Dial the desired phone number.
3. To end the call, press the **OFF** button or place the handset back on the base unit.

Answering a Call

When the phone rings, press the **TALK** button to answer the call.

Using the Speakerphone

During a call, press the **TALK** button again (with the speaker icon) to activate the speakerphone function. Press it again to switch back to the earpiece.

Adjusting Volume

During a call, use the **UP** and **DOWN** arrow buttons on the side of the handset to adjust the earpiece or speakerphone volume.

Phonebook Directory

1. Press the **MENU** button.
2. Navigate to "Phonebook" using the arrow buttons and press **MENU** to select.
3. Follow the on-screen prompts to add, edit, or delete entries.

Redial Function

Press the **REDIAL** button to view a list of the last 5 dialed numbers. Use the arrow buttons to select a number and press **TALK** to dial.

Caller ID

When the phone rings, the caller's number (if available) will be displayed on the screen. Press the **CID** button to review the caller ID list. Use the arrow buttons to scroll through entries.

BOOSTER Function

During a call, press the dedicated **BOOSTER** button (if available, often integrated with volume or a specific key) to instantly amplify the incoming audio by up to 30 decibels. Press again to deactivate.

Handset Locator

To locate a misplaced handset, press the **PAGE** button on the base unit. The handset will ring.

MAINTENANCE

Cleaning

Wipe the handset and base unit with a soft, damp cloth. Do not use cleaning sprays or abrasive cleaners, as these can damage the finish or electrical components.

Battery Care

- Only use the supplied rechargeable batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Do not dispose of batteries in a fire.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
No dial tone	<ul style="list-style-type: none"> • Ensure the telephone line cord is securely connected to both the base unit and the wall jack. • Check if the power adapter is properly connected to the base unit and a working electrical outlet. • Test the wall jack with another phone to confirm it is active.
Handset does not charge	<ul style="list-style-type: none"> • Ensure the handset is correctly placed on the base unit. • Check that the power adapter is connected to the base unit and a live power outlet. • Clean the charging contacts on both the handset and base unit with a dry cloth.
Poor sound quality	<ul style="list-style-type: none"> • Move the handset closer to the base unit. • Ensure there are no large metal objects or other electronic devices interfering with the signal. • Check for loose connections of the telephone line cord.
Caller ID not displayed	<ul style="list-style-type: none"> • Ensure you have subscribed to Caller ID service from your telephone service provider. • Check the phone's settings to ensure Caller ID is enabled.

SPECIFICATIONS

Brand	VTech
Model	VT1091
Telephone Type	Cordless
Color	White
Material	Plastic
Power Source	Corded Electric (for base unit)
Dialer Type	Single Keypad
Answering System Type	Digital (Note: This model's primary features do not highlight an integrated answering machine, but refers to general digital phone capabilities.)
Multiline Operation	Single
Phone Talk Time	10 Hours

Phone Standby Time	100 Hours
Caller ID	Yes
UPC	735078026569

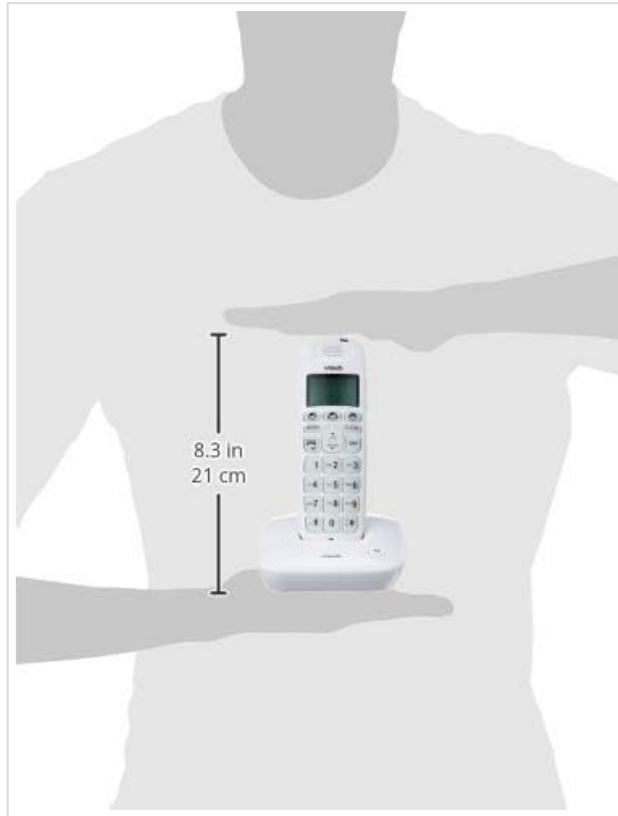


Image: The VTech VT1091 cordless phone in its base, with a measurement overlay indicating a height of 8.3 inches (21 cm).

WARRANTY AND SUPPORT

This VTech VT1091 Cordless Phone comes with a **2 Year Local (Singapore) Manufacturer Warranty**.

For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official VTech Singapore website.

For further assistance, please contact VTech customer service.