

## JVC XV-Y430B

# JVC XV-Y430B DVD Player Instruction Manual

Model: XV-Y430B

## 1. INTRODUCTION

Thank you for purchasing the JVC XV-Y430B DVD Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure proper functionality and to maximize your viewing and listening experience.

The JVC XV-Y430B is a versatile DVD player compatible with various disc formats and equipped with multiple connectivity options, including HDMI, for high-quality audio and video output.

### Package Contents

Before proceeding with the setup, please ensure all items are present in the package:

- JVC XV-Y430B All Region Code Free DVD Player
- Remote Control
- RCA Cable
- 2 x AAA Batteries (for remote control)
- 110V Adapter (flat prongs)

## Specifications:

Supports: DVD-R/RW, DVD+R/RW, CD-R/RW

Compatible with: DVD, DVCD, Super VCD, VCD, HDCD, CDDA, MP3, MPEG4,

Kodak Picture CD, JPEG

Progressive Scan

Video Connections: Video, S-Video

Audio Connections: Coaxial, Optical, 5.1 CH Stereo

Supports Subtitles for MPEG4

English OSD

With USB Jack

With SD Card Reader

With CD Ripping

HDMI:576I/576P/720P/1080I /1080P

Power Supply: 110-240V~ 50/60Hz

Figure 1: JVC XV-Y430B DVD Player retail box contents.

## 2. SETUP

### 2.1 Remote Control Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover.

### 2.2 Connecting the DVD Player

Connect the DVD player to your television or audio system using one of the following methods:

#### HDMI Connection (Recommended for best quality)

- Connect one end of an HDMI cable (not included) to the **HDMI OUT** port on the back of the DVD player.
- Connect the other end of the HDMI cable to an available **HDMI IN** port on your television.
- Select the corresponding HDMI input on your television.

#### RCA (Composite Video/Stereo Audio) Connection

- Connect the yellow RCA cable to the **VIDEO OUT** port on the DVD player and the **VIDEO IN** port on your television.
- Connect the red and white RCA cables to the **AUDIO OUT (R/L)** ports on the DVD player and the **AUDIO IN (R/L)** ports on your television or audio receiver.
- Select the corresponding AV input on your television or audio receiver.

#### S-Video Connection (Video only)

- Connect an S-Video cable (not included) to the **S-VIDEO OUT** port on the DVD player and the **S-VIDEO IN** port on your television.
- For audio, use the RCA audio cables as described above.
- Select the corresponding S-Video input on your television.

#### Digital Audio Connections (Coaxial/Optical)

- For digital audio output to a compatible audio receiver, connect a Coaxial Digital Audio cable or an Optical Digital Audio cable (not included) from the respective port on the DVD player to your audio receiver.
- Select the corresponding digital audio input on your audio receiver.



Figure 2: Rear panel connections of the JVC XV-Y430B DVD Player.

### 2.3 Power Connection

- Connect the provided power adapter to the **POWER IN** port on the DVD player.
- Plug the power adapter into a suitable wall outlet (110V to 240V, 50/60Hz).
- Press the **POWER** button on the front panel or remote control to turn on the player.



Figure 3: Front panel of the JVC XV-Y430B DVD Player.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Disc Playback

1. Turn on your television and select the correct input source for the DVD player.
2. Press the **OPEN/CLOSE** button on the front panel or remote control to open the disc tray.
3. Place a compatible disc (DVD, VCD, CD, etc.) onto the disc tray with the label side facing up.

4. Press the **OPEN/CLOSE** button again to close the disc tray. The player will automatically begin playback or display the disc menu.
5. Use the remote control's navigation buttons (Up, Down, Left, Right, OK) to navigate disc menus.
6. Use **PLAY/PAUSE**, **STOP**, **FAST FORWARD**, and **REWIND** buttons for playback control.

### 3.2 USB and SD Card Playback

The JVC XV-Y430B supports media playback from USB drives and SD cards.

1. Insert a USB flash drive into the **USB 2.0** port on the front panel or an SD card into the **SD Card Reader** slot.
2. The player should automatically detect the device and display a file browser. If not, press the **SOURCE** or **USB/CARD** button on the remote control.
3. Navigate through the folders and files using the remote control. Select a file (e.g., MP3, JPEG, MPEG4) and press **OK** to begin playback or viewing.

### 3.3 Advanced Features

- **Subtitle Selection:** During DVD or MPEG4 playback, press the **SUBTITLE** button on the remote to cycle through available subtitle languages.
- **Parental Lock:** Access the system setup menu to configure parental control settings, restricting playback of certain content based on rating. A password may be required.
- **Slow Motion/Advanced Zoom:** Use dedicated buttons on the remote control to activate slow motion playback or zoom into specific areas of the video.
- **CD Ripping:** Insert an audio CD and a USB drive. Navigate to the CD Ripping function in the menu to convert audio tracks to MP3 files on the USB drive.
- **Multi TV System:** The player automatically detects NTSC and PAL TV systems. Ensure your TV is compatible with the output signal.
- **OSD (On-Screen Display):** The player features an English On-Screen Display for easy navigation and settings adjustment.

## 4. MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the DVD player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Use a soft, lint-free cloth to wipe discs from the center outwards.
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block ventilation openings.
- **Power Off:** When not in use for extended periods, unplug the power cord from the wall outlet.

## 5. TROUBLESHOOTING

If you encounter issues with your JVC XV-Y430B DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; power outlet faulty.	Ensure power cord is securely connected. Try a different outlet.

Problem	Possible Cause	Solution
No picture	Incorrect input selected on TV; video cables loose or faulty.	Select correct TV input. Check all video cable connections. Try a different cable.
No sound	Audio cables loose or faulty; TV/receiver volume too low or muted.	Check audio cable connections. Adjust TV/receiver volume. Ensure not muted.
Disc does not play	Disc inserted incorrectly; disc is dirty or scratched; incompatible disc format.	Insert disc with label side up. Clean disc. Check disc compatibility (DVD/VCD/CD/MP3/MPEG4).
Remote control not working	Batteries depleted or inserted incorrectly; obstruction between remote and player.	Replace batteries, check polarity. Remove obstructions. Point remote directly at player.

## 6. SPECIFICATIONS

Feature	Description
<b>Compatible Disc Formats</b>	DVD, Super VCD, VCD, HDCD, CDDA, MP3, MPEG4, Kodak Picture CD, JPEG
<b>Supported Disc Types</b>	DVD-R/RW, DVD+R/RW, CD-R/RW
<b>Video Connections</b>	HDMI, Video (RCA), S-Video
<b>Audio Connections</b>	Coaxial Digital, Optical Digital, 5.1 Channel Stereo (RCA)
<b>HDMI Output Resolutions</b>	576i/576P/720P/1080i/1080P
<b>USB Port</b>	USB 2.0
<b>Card Reader</b>	SD Card Reader
<b>Special Features</b>	Region Free, Progressive Scan, Subtitle Support (MPEG4), Parental Lock, Slow Motion, Advanced Zoom, CD Ripping, English OSD
<b>TV System</b>	NTSC, PAL, Auto
<b>Power Supply</b>	110V to 240V ~ 50/60Hz
<b>Dimensions (L x W x H)</b>	Approximately 10 x 10 x 4 inches
<b>Weight</b>	Approximately 3 pounds

## 7. WARRANTY INFORMATION

This product is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for any warranty claims.

The warranty typically covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

## 8. SUPPORT

---

For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact JVC customer support. Visit the official JVC website for the most up-to-date contact information, FAQs, and additional resources.

You may also find support resources by searching for "JVC XV-Y430B support" online.