

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [NEDIS](#) /

› [NEDIS 3-in-1 Mobile Phone Camera Lens Kit SMLK200 User Manual](#)

NEDIS SMLK200

NEDIS 3-in-1 Mobile Phone Camera Lens Kit SMLK200 User Manual

Brand: NEDIS | Model: SMLK200

1. PRODUCT OVERVIEW

The NEDIS 3-in-1 Mobile Phone Camera Lens Kit enhances your smartphone or tablet photography with three distinct lens effects: Macro, Wide Angle, and Fisheye. Designed for universal compatibility, this kit includes a scratch-resistant clip for easy attachment to most mobile devices.

Key Features:

- Plug & play functionality for immediate use.
- Adds creative effects to mobile phone and tablet cameras.
- Universal, scratch-resistant clip for secure attachment.
- Complete pack includes lens covers and a travel pouch for protection.



Image: The Fisheye lens (left) and the Wide Angle/Macro lens (right) from the kit.

2. PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1x Fisheye Lens
- 1x Wide Angle Lens (attaches to Macro Lens)
- 1x Macro Lens (base lens for Wide Angle)
- 1x Universal Clip
- 2x Lens Covers (for Wide Angle and Fisheye lenses)
- 1x Travel Pouch



Image: All components of the lens kit, including the lenses, clip, and storage pouch.

3. SETUP AND INSTALLATION

3.1 Attaching the Universal Clip

1. Identify the camera lens on your mobile phone or tablet.
2. Gently open the universal clip.
3. Position the clip so that the threaded opening on the clip is directly centered over your device's camera lens. Ensure the clip's soft pads protect your device from scratches.



Image: Front view of a smartphone with the universal clip correctly positioned over the camera.



Image: Back view of a smartphone with the universal clip correctly positioned over the camera.

3.2 Attaching the Lenses

1. Select the desired lens (Fisheye, Wide Angle, or Macro). Note that the Wide Angle lens screws onto the Macro lens. To use the Macro lens alone, unscrew the Wide Angle lens.
2. Carefully screw the chosen lens into the threaded opening of the universal clip until it is secure. Do not overtighten.
3. Open your device's camera application and check the view. Adjust the clip or lens position slightly if necessary to eliminate any dark corners (vignetting).



Image: Side view of a smartphone with a lens attached to the universal clip.

4. OPERATING INSTRUCTIONS

4.1 Using the Wide Angle Lens

The Wide Angle lens expands your camera's field of view, allowing you to capture more of the scene. This is ideal for landscapes, group photos, or architectural shots where you want to fit more into the frame.

- Attach the Wide Angle lens (which is screwed onto the Macro lens) to the universal clip.

- Ensure the lens is clean for optimal image quality.
- Point your camera and compose your shot.

4.2 Using the Macro Lens

The Macro lens allows you to take extreme close-up shots of small objects, revealing intricate details not visible to the naked eye. This lens is perfect for capturing insects, flowers, textures, or small product details.

- To use the Macro lens, unscrew the Wide Angle lens from the Macro lens.
- Attach the Macro lens (the smaller, base lens) to the universal clip.
- Bring your device very close to the subject (typically 1-3 cm) until it comes into focus. Slight movements can significantly change focus.

4.3 Using the Fisheye Lens

The Fisheye lens creates a hemispherical, ultra-wide-angle image with a strong barrel distortion, giving a unique, artistic, and often humorous effect. It's great for creative shots, action sports, or capturing a vast scene with a distinct perspective.

- Attach the Fisheye lens to the universal clip.
- Experiment with different angles and distances to achieve desired effects.

5. MAINTENANCE

5.1 Cleaning the Lenses

To maintain optimal image quality, keep your lenses clean and free from dust and smudges.

- Use a soft, lint-free microfiber cloth specifically designed for optics.
- Gently wipe the lens surface. For stubborn smudges, a small amount of lens cleaning solution can be applied to the cloth (not directly to the lens).
- Avoid using abrasive materials or harsh chemicals, as these can damage the lens coating.

5.2 Storage

When not in use, store the lenses in the provided travel pouch with their lens covers attached. This protects them from dust, scratches, and impacts.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dark corners (vignetting) in photos	Lens not perfectly centered over the device's camera.	Adjust the universal clip and lens position until the lens is perfectly aligned with your device's camera.
Blurry or out-of-focus images	Lens is dirty; incorrect focus distance (especially for Macro lens); device camera struggling to focus.	Clean the lens with a microfiber cloth. For Macro, ensure you are very close to the subject. Tap on your device's screen to manually focus.

Problem	Possible Cause	Solution
Lens not attaching securely to clip	Threads are misaligned or damaged.	Ensure the lens is screwed on straight. Do not force it. If threads are damaged, contact customer support.
Clip not fitting device	Device is too thick or has an unusual camera placement.	The clip is designed for universal fit but may not be compatible with all devices, especially those with very thick cases or cameras far from the edge. Try removing the case.

7. SPECIFICATIONS

Feature	Detail
Brand	NEDIS
Model Name	SMLK200
Model Number	5412810268726
Color	Black/Silver
Product Dimensions (L x W x H)	6.7 x 12 x 2.7 cm
Item Weight	39.9 Grams
Lens Types	Macro, Wide Angle, Fisheye
Fisheye Angle of View	180 degrees
Compatibility	Universal clip for mobile phones and tablets

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or visit the official NEDIS website. Keep your proof of purchase for any warranty claims.