

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Genesis GT3.0, GT30, 100580 RV Entertainment System User Manual

Redi-Remote RT100580

Redi-Remote Replacement Remote Control User Manual

Brand: Redi-Remote | **Model:** RT100580

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with Genesis GT3.0, GT30, and 100580 RV Entertainment Systems. This remote is a custom-built replacement and is not an original Genesis brand remote control. It is specifically engineered to be compatible with the listed Genesis units, providing full functionality for the entertainment system.

The remote features a sliding cover over the lower half of the buttons, which can be moved down to reveal additional controls.

2. SETUP

2.1 Battery Installation

The remote control requires four (4) AAA alkaline batteries for operation. To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

2.2 Initial Use

This Redi-Remote replacement remote control requires no programming. Once batteries are correctly installed, it is ready for immediate use with your compatible Genesis GT3.0, GT30, or 100580 RV Entertainment System. It operates using infrared (IR) technology.

3. OPERATING INSTRUCTIONS

The remote control is designed to perform all functions for the specific Genesis unit it is intended to control. It is primarily for use with DVD Receivers.



Image of the Redi-Remote replacement remote control, showing its black casing and button layout. The remote measures approximately 7.5 inches in length.

3.1 Basic Functions

- **Power:** Press the **POWER** button to turn the Genesis entertainment system on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the audio volume.
- **Channel/Track Selection:** Use the **CH+** and **CH-** buttons for channel surfing or track selection.
- **Navigation:** Use the directional arrow buttons and **ENTER** button to navigate menus and make selections.

3.2 Accessing Lower Buttons

The remote control features a sliding cover that conceals additional function buttons. To access these buttons, gently slide the cover downwards. Once revealed, these buttons provide access to advanced features of your Genesis entertainment system.

Ensure a clear line of sight between the remote control and the infrared receiver on your Genesis unit for optimal performance. The maximum effective range is approximately 20 feet.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's responsiveness decreases or if it stops functioning. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation. Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

If you experience issues with your Redi-Remote replacement remote control, please refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are installed correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA alkaline batteries.
 - Ensure there is a clear line of sight between the remote's infrared emitter and the Genesis unit's IR receiver. Obstructions can block the signal.
 - Verify that you are within the maximum operating range of 20 feet.
- **Certain Functions Not Working:**
 - Confirm that the remote is designed for your specific Genesis GT3.0, GT30, or 100580 RV Entertainment System. This remote is not programmable for auxiliary devices.
 - Ensure the sliding cover is fully open if you are trying to access buttons located underneath it.
- **Remote Feels Stiff:**
 - The sliding cover may feel tight initially. With regular use, it should become smoother.

If these steps do not resolve the issue, please refer to the Support section for further assistance.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Name	RT100580
Model Number	RT100580
Compatible Devices	Genesis GT3.0, GT30, 100580 RV Entertainment System (DVD/Blu-ray Player)
Connectivity Technology	Infrared (IR)
Maximum Range	20 Feet
Number of Buttons	58
Special Feature	No Programming Required
Color	Black
Item Dimensions (L x W x H)	7.5" x 2.25" x 0.75" (19.05 cm x 5.72 cm x 1.91 cm)
Item Weight	5 Ounces (141.75 grams)
Batteries Required	4 AAA batteries
Battery Type	Alkaline

7. WARRANTY AND SUPPORT

This Redi-Remote replacement remote control is provided by RemotesPro. For any concerns with the remote after purchase, please contact the seller directly for assistance.

7.1 Return Policy

A return policy of 30 days for refund or replacement is typically offered. Please refer to your purchase documentation or contact the seller, RemotesPro, for specific details regarding returns and exchanges.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07GHQZPWR>

More documents and user manuals: <https://manuals.plus/>