

RCA W122SC24T2

RCA 12.2" Windows 10 2-in-1 Tablet User Manual

Model: W122SC24T2

INTRODUCTION

This manual provides essential information for the safe and efficient use of your RCA 12.2" Windows 10 2-in-1 Tablet with Travel Keyboard. Please read this manual thoroughly before operating the device and retain it for future reference. This device combines the portability of a tablet with the functionality of a laptop, running on Windows 10 Home.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the original power adapter and accessories provided with the device.
- Do not attempt to disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from water and other liquids.
- Ensure proper ventilation when using the device to prevent overheating.

PACKAGE CONTENTS

Verify that all items are present in the package:

- RCA 12.2" Windows 10 2-in-1 Tablet
- Travel Keyboard
- Power Adapter
- Quick Start Guide (if included)

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your RCA 2-in-1 Tablet.

Tablet Components



Figure 1: RCA 12.2" 2-in-1 Tablet with Travel Keyboard attached.

- **12.2" Touchscreen Display:** High-resolution 1920 x 1200 IPS display for clear visuals and touch interaction.
- **Front and Rear Cameras:** 2MP front camera for video calls and 2MP rear camera for photos.
- **Integrated Kickstand:** Allows the tablet to stand upright for viewing.
- **Ports:** Includes HDMI output for connecting to external displays, USB ports, and a MicroSD Card Slot supporting up to 128GB.
- **Speakers:** Integrated audio output.

Travel Keyboard



Figure 2: The RCA 2-in-1 Tablet with its detachable travel keyboard.

- **Magnetic Connection:** Easily attaches and detaches from the tablet via strong magnets.
- **Full-size Keys:** Provides a comfortable typing experience.
- **Integrated Touchpad:** For precise cursor control.

SETUP

1. Initial Charging

Before first use, fully charge your tablet. Connect the power adapter to the tablet's charging port and plug it into a wall outlet. The charging indicator light will illuminate. A full charge can provide up to 6 hours of battery life.

2. Attaching and Detaching the Keyboard

To attach the keyboard, align the magnetic connector on the keyboard with the corresponding port on the tablet. The magnets will guide it into place. To detach, gently pull the tablet away from the keyboard.



Figure 3: The tablet and keyboard folded together for portability.

3. Initial Windows 10 Setup

Upon first power-on, the tablet will guide you through the Windows 10 Home setup process. Follow the on-screen prompts to:

- Select your region and language.
- Connect to a Wi-Fi network.
- Accept the license terms.
- Create or sign in with a Microsoft account.
- Set up a PIN or password.
- Adjust privacy settings.



Figure 4: The Windows 10 desktop environment on the tablet.

4. Connecting to Wi-Fi

During initial setup, you will be prompted to connect to Wi-Fi. If you need to connect later or change networks:

1. Click the **Network** icon (looks like a globe or Wi-Fi signal) in the taskbar.
2. Select your desired Wi-Fi network from the list.
3. Click **Connect** and enter the network password if prompted.

OPERATING THE TABLET

Basic Navigation

- **Touchscreen:** Use gestures like tap, swipe, pinch-to-zoom, and long-press for interaction.
- **Keyboard and Touchpad:** When attached, use the physical keyboard for typing and the touchpad for cursor control, similar to a laptop.
- **Windows Start Menu:** Access applications, settings, and power options by clicking the Windows icon in the bottom-left corner.

Connecting Peripherals

- **Bluetooth:** To connect Bluetooth devices (e.g., headphones, mice), go to **Settings > Devices > Bluetooth & other devices** and turn Bluetooth on.
- **USB Devices:** Plug USB flash drives, external hard drives, or other USB accessories into the available USB ports.
- **HDMI Output:** Connect the tablet to an external monitor or TV using an HDMI cable (not included) via the HDMI output port.
- **MicroSD Card:** Insert a MicroSD card into the dedicated slot to expand storage up to 128GB.

Battery Management

To maximize battery life, adjust screen brightness, close unused applications, and enable Battery Saver mode in Windows settings. Recharge the tablet when the battery level is low to avoid unexpected shutdowns.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and exterior. Do not use harsh chemicals or abrasive materials.
- **Software Updates:** Regularly check for and install Windows updates to ensure optimal performance and security. Go to **Settings > Update & Security > Windows Update**.
- **Storage Management:** Periodically clear temporary files and uninstall unused applications to free up storage space. Go to **Settings > System > Storage**.

TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

Device Not Powering On or Charging

- Ensure the power adapter is securely connected to both the tablet and a working power outlet.
- Try a different power outlet.
- If the battery is completely drained, it may take a few minutes of charging before the device responds.

Slow Performance or Lagging

- Close unnecessary applications running in the background.
- Ensure Windows is up to date.
- Check available storage space; low storage can affect performance.
- Restart the tablet.

Wi-Fi or Bluetooth Connectivity Issues

- Toggle Wi-Fi or Bluetooth off and on in Windows settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect.
- Ensure you are within range of the Wi-Fi signal or Bluetooth device.

Keyboard or Touchpad Not Responding

- Ensure the keyboard is securely attached to the tablet's magnetic connector.
- Detach and reattach the keyboard.
- Restart the tablet.

Audio Issues (Low Volume or No Sound)

- Check the volume level in Windows and ensure it is not muted.
- Ensure no headphones are plugged in if you expect sound from the speakers.
- Update audio drivers via Windows Update or Device Manager.

SPECIFICATIONS

Feature	Specification
Screen Size	12.2 Inches
Screen Resolution	1920 x 1200 (IPS)
Processor	Intel Celeron N4000 (2.6 GHz)
RAM	2GB
Internal Storage	64GB Flash Memory
Expandable Storage	MicroSD Card Slot (up to 128GB)
Operating System	Windows 10 Home
Front Camera	2 MP
Rear Camera	2 MP
Wireless Connectivity	Wi-Fi, Bluetooth
Ports	HDMI Output, USB, MicroSD Slot
Battery Life	Up to 6 Hours (Average)
Dimensions (LxWxH)	11.6 x 7.6 x 2.7 inches
Model Number	W122SC24T2

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official RCA support website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact RCA customer service directly. Contact details are typically available on the manufacturer's website or in the product packaging.


© 2023 RCA. All rights reserved.

Related Documents

	<p>RCA 10.1" FHD Tablet (RATM21036K) - Quick Start Guide & Warranty Information</p> <p>Get started with your RCA 10.1" FHD Android Tablet (RATM21036K). This guide covers setup, features, safety, and the one-year limited warranty. Includes FCC compliance and disposal information.</p>
--	---

 <p>RCA RCT6303W87 10 Viking Pro with keyboard User Manual</p> <p>Need Help? Visit support.rcatables.com</p>	<p>RCA 10 Viking Pro RCT6303W87 DK User Manual</p> <p>Comprehensive user manual for the RCA 10 Viking Pro tablet (model RCT6303W87 DK), covering setup, operation, features, troubleshooting, and warranty information.</p>
 <p>RCA 10" HD Tablet Android Tablet Model: RATR31024</p>	<p>RCA 10 inch HD Android Tablet User Manual Model RATR31024</p> <p>Comprehensive user manual for the RCA 10 inch HD Android Tablet (Model RATR31024), covering setup, features, basic operation, system settings, multimedia, and connectivity. Learn how to power on/off, manage apps, connect to Wi-Fi, and utilize USB support.</p>
 <p>RCA 14.1" 2-in-1 Convertible Laptop Quick Start Guide Download at support.rcatables.com</p>	<p>RCA 14.1" 2-in-1 Convertible Laptop Quick Start Guide</p> <p>Quick start guide for the RCA 14.1" 2-in-1 Convertible Laptop, covering setup, features, basic operations, and safety information.</p>

Documents - RCA – W122SC24T2

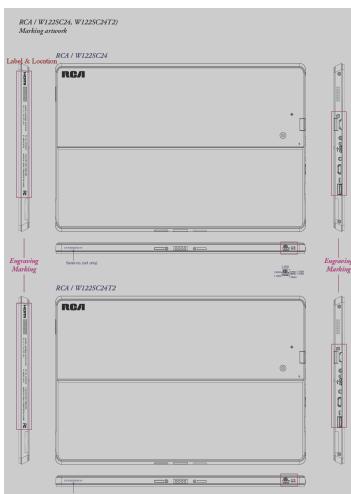

[pdf] Label

WT9S12C24T2 marking artwork application ID Label Location Info Alco Electronics Ltd W122 Tablet A2HW122 w122


RCA / W122SC24, **W122SC24T2** Marking artwork RCA / W122SC24 Label Location

MODEL / MODLE: W122SC24 DC / C.C. 12V 1.5A FCC ID: A2HW122 IC: 9903A-

W122 CAN ICES-3 B / NMB-3 B MADE IN CHINA / FABRIQU EN CHINE Engraving

Marking S/N: R3GDGZ0001H1 Serial no. ref. only RCA / **W122SC24T2** 5.2MM Eng...

lang:tl score:18 filesize: 1.96 M page_count: 2 document date: 2018-06-07

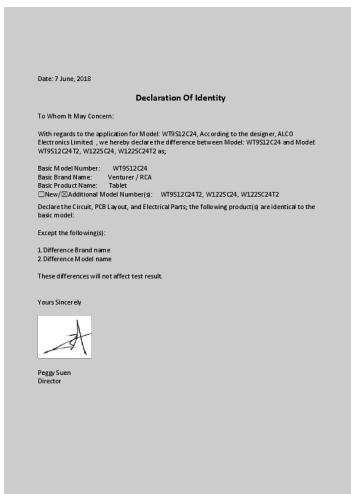

[pdf] Declaration of Conformity

Xu Yan Declaration of identity Alco Electronics Ltd W122 Tablet A2HW122 w122

Date: 7 June, 2018 Declaration Of Identity To Whom It May Concern: With regards to the application for Model: WT9S12C24, According to the designer, ALCO Electronics Limited, we hereby declare the difference between Model: WT9S12C24 and Model: WT9S12C24T2, W122SC24, **W122SC24T2** as; Basic Model N...

lang:en score:17 filesize: 75.79 K page_count: 1 document date: 2018-06-07

