

Doro 7060

Doro 7060 Mobile Phone User Manual

Model: 7060

INTRODUCTION

This user manual provides comprehensive instructions for the Doro 7060 SIM-Free 4G Mobile Phone. It covers essential information regarding the phone's setup, operation, maintenance, and troubleshooting. Please read this manual carefully to ensure proper use and to maximize the functionality of your device.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present: Doro 7060 mobile phone, UCS power adapter, USB detachable cable, and charging cradle.

2. Battery Installation and Charging

The Doro 7060 comes with a Lithium Ion battery included. Insert the battery into the designated compartment. To charge the device, connect the USB cable to the power adapter and then to the phone, or place the phone securely in the provided charging cradle. The phone can be easily inserted into the docking station for convenient charging on a table.





Image: Doro 7060 mobile phone placed in its charging cradle, displaying the time on its external screen.



Image: The standalone charging cradle for the Doro 7060, designed for easy phone placement.

3. SIM Card Insertion

Locate the SIM card slot, typically under the battery cover. Insert your SIM card into the slot, ensuring correct orientation as indicated by the phone's diagram. This phone is SIM-free, allowing use with any compatible network provider.

4. Initial Power On and Basic Settings

Press and hold the power button to turn on the phone. Follow the on-screen prompts to select your language, set the date and time, and connect to a Wi-Fi network if available. The phone features a 2.8-inch internal screen and an external display for quick information.

OPERATING INSTRUCTIONS

1. Making and Receiving Calls

Use the large, backlit keypad to dial numbers. Press the green call button to initiate a call and the red end call button to terminate it. The external display shows the caller's name and number, allowing you to identify incoming calls without opening the device.

2. Hearing Aid Compatibility (HAC) and Audio Boost

The Doro 7060 is Hearing Aid Compatible (HAC) with a T4/M4 rating, providing clear sound for users with hearing devices. During a call, you can increase the in-call volume by up to 20% using the 'boost' function, accessible through the 'I want to' menu.

3. GPS Localisation and SOS Button

The phone is equipped with built-in GPS functionality. In case of an emergency, press the assistance button located on the back of the phone. This action will automatically dial and send an SMS alarm to your 5 pre-set emergency contacts, providing them with your location.





Image: Rear view of the Doro 7060 mobile phone, highlighting the assistance button for emergency calls and GPS localisation.

4. Camera and Multimedia

The Doro 7060 features a 3MP interpolated camera with flash for capturing photos. You can also listen to FM radio. The phone supports email and internet access, and comes with pre-installed Google apps.





Image: The Doro 7060 phone in its open, clamshell position, showing the internal screen with a cloud background and the large, clear keypad.

5. Additional Features

- **Visual Ring Indicator:** Provides a visual alert for incoming calls.
- **Speakerphone:** Allows hands-free communication.
- **Predictive Text:** Assists with faster text entry.
- **Adjustable Font Sizes:** Customize text size for better readability.
- **Bluetooth and Wi-Fi:** For wireless connectivity and internet access.

MAINTENANCE

1. Cleaning Your Device

To clean the Doro 7060, use a soft, dry cloth. Avoid using liquid cleaners or aerosols, as these can damage the phone's components. Keep the charging ports and speaker grilles free from dust and debris.

2. Battery Care

To prolong battery life, avoid exposing the phone to extreme temperatures. Charge the phone regularly using the provided charger and cradle. The phone offers up to 11 hours of talk time and up to 500 hours of standby time on a full charge.

3. Software Updates

Periodically check for software updates through the phone's settings menu. Keeping your phone's software up-to-date ensures optimal performance and access to the latest features and security enhancements.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Phone does not turn on	Battery may be depleted. Connect the phone to the charger and allow it to charge for at least 30 minutes before attempting to power on. Ensure the battery is correctly installed.
Cannot make or receive calls	Check if the SIM card is properly inserted. Ensure you have network signal. Contact your service provider if the issue persists.
Poor call quality / Low volume	Ensure the speaker and microphone are not obstructed. Activate the 'boost' function during a call to increase in-call volume. If using a hearing aid, ensure HAC is enabled.
Battery drains quickly	Background apps or continuous Wi-Fi/Bluetooth usage can drain the battery. Close unused applications. Reduce screen brightness. If the issue is severe, consider a factory reset (back up data first) or contact support.
Keypad unresponsive or erratic	Restart the phone. Ensure the phone is clean and free of debris around the keys. If the problem persists after a software update, a factory reset might be necessary.
Cannot connect to Wi-Fi/Internet	Ensure Wi-Fi is enabled on the phone and the network is within range. Verify the Wi-Fi password. Restart your Wi-Fi router.

For more complex issues, refer to the Doro support website or contact their customer service.

SPECIFICATIONS

Brand	Doro
Model Name	7060
Item Model Number	7060
Colour	Black/White
Product Dimensions	0.95 x 0.7 x 1.4 cm; 171 g
Screen Size	2.8 Inches (internal)
Resolution	720p
Operating System	android
Memory Storage Capacity	4 GB
Cellular Technology	4G
Wireless Network Technology	LTE
Batteries	1 Lithium Ion batteries required (included)

Warranty Information

Specific warranty details for your Doro 7060 mobile phone are typically provided with your purchase documentation. Please refer to the warranty card or information included in your product packaging for terms and conditions, including warranty period and coverage.

Customer Support

For technical assistance, product inquiries, or further support, please visit the official Doro website or contact Doro customer service. You can also find more information and products from the Doro brand store: [Doro Official Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question