

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool AMW9615IXUK Combi Microwave Oven User Manual](#)

Whirlpool AMW 9615/IX UK

Whirlpool AMW9615IXUK Combi Microwave Oven User Manual

Model: AMW 9615/IX UK

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Whirlpool Combi Microwave Oven. Retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- **General Safety:** Do not operate the oven if it is damaged. Ensure proper ventilation around the appliance.
- **Food and Containers:** Do not heat sealed containers, as they may explode. Use only microwave-safe cookware. Avoid heating liquids in narrow-necked containers.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Cleaning and Maintenance:** Always disconnect the appliance from the power supply before cleaning or performing maintenance. Clean the oven regularly and remove any food deposits.
- **Installation:** Ensure the appliance is correctly installed and grounded by a qualified person in accordance with the provided installation instructions.

PRODUCT OVERVIEW

The Whirlpool AMW9615IXUK is a built-in combi microwave oven grill designed for versatile cooking. It features a spacious 40-litre capacity and a powerful 900 Watt microwave output, complemented by advanced cooking technologies.



Figure 1: Front view of the Whirlpool AMW9615IXUK Combi Microwave Oven, showing the control panel and door.



Figure 2: Interior view of the oven with the door open, revealing the cooking cavity, turntable, and rack supports.

Key Features

- **6TH SENSE Technology:** Automatically adjusts cooking time and power for superior results.
- **Crisp Technology:** Achieves oven-crisp results in a fraction of the time, ideal for pizzas and pies.
- **3D Wave System:** Ensures even heat distribution, eliminating the need to stop and stir food.
- **Jet Start:** Provides outstanding reheating speed for quick warm-ups.
- **Forced Air:** Offers conventional oven-like cooking results directly from your microwave.
- **Defrost Function:** Efficiently thaws food based on weight or time.
- **Child Lock:** Prevents accidental operation, enhancing safety.
- **Control Panel:** Intuitive touch and dial controls for easy setting adjustments.

SETUP AND INSTALLATION

The Whirlpool AMW9615IXUK is designed for built-in installation. Proper installation is crucial for the appliance's performance and safety. It is recommended that installation be carried out by a qualified technician.



Figure 3: Product dimensions for cabinet integration. Please ensure your cabinet opening matches these specifications.

Installation Steps (Summary)

1. **Unpacking:** Carefully remove the oven from its packaging. Inspect for any transit damage.
2. **Ventilation:** Ensure adequate ventilation space around the appliance as specified in the detailed installation guide (supplied separately with the product).
3. **Electrical Connection:** Connect the oven to a properly grounded electrical outlet. Ensure the voltage and frequency match the appliance's requirements.
4. **Cabinet Integration:** Slide the oven into the prepared cabinet opening. Secure it using the provided screws and brackets.
5. **Final Check:** Verify that the oven is level and securely installed before first use.

OPERATING INSTRUCTIONS

Your Whirlpool Combi Microwave Oven features an intuitive control panel with touch buttons and a central dial for easy program selection and setting adjustments.

Basic Microwave Cooking

1. Place food in a microwave-safe dish inside the oven.
2. Close the oven door securely.
3. Select the desired power level using the control panel.
4. Set the cooking time using the dial.
5. Press the 'Start' button to begin cooking.

Using Special Functions

- **6TH SENSE:** Select the 6TH SENSE function and choose the food category. The oven will automatically detect the food's moisture content and adjust cooking parameters.
- **Crisp Technology:** Use the dedicated Crisp plate (if supplied) for best results. Select the Crisp function and set the desired time.
- **Jet Start:** Press the Jet Start button for a quick burst of high-power microwave cooking, typically 30 seconds at full power. Press repeatedly to add more time.
- **Forced Air:** This function circulates hot air, similar to a conventional oven. Select 'Forced Air' and set the desired temperature and cooking time.
- **Defrost:** Choose between 'Speed Defrost' (time-based) or 'Weight Defrost' (weight-based). Follow the on-screen prompts to enter the weight or time.
- **Child Lock:** To activate, press and hold the designated child lock button (refer to your control panel diagram). Repeat the action to deactivate.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Whirlpool Combi Microwave Oven.

- **Interior Cleaning:** Wipe the interior cavity with a soft cloth and mild detergent after each use. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. For stainless steel surfaces, use a non-abrasive stainless steel cleaner.
- **Turntable and Accessories:** The glass turntable and any metal racks can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seal:** Regularly check and clean the door seal and surrounding areas to ensure a tight seal.
- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the oven's surfaces.

TROUBLESHOOTING

If you encounter issues with your oven, consult the table below for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Oven does not start	No power supply; Door not closed properly; Child lock activated.	Check power plug and circuit breaker; Ensure door is fully latched; Deactivate child lock.
Food not heating evenly	Food placed incorrectly; Turntable not rotating; Incorrect power level.	Ensure food is centered; Check turntable is correctly seated; Adjust power level as needed.
Unusual noises during operation	Turntable or accessories not correctly placed; Food container touching oven walls.	Reposition turntable and accessories; Use smaller or different shaped containers.
Oven light not working	Light bulb needs replacement.	Contact qualified service personnel for bulb replacement.

TECHNICAL SPECIFICATIONS

Brand	Whirlpool
Model Number	AMW 9615/IX UK
Capacity	40 litres
Microwave Power Output	900 Watts
Installation Type	Built-In
Colour	Inox (Stainless Steel)
Material Type	Stainless Steel
Product Dimensions (H x W x D)	45.5 x 59.5 x 56 cm
Item Weight	33.6 kg
Special Features	Defrost, 6TH SENSE, Crisp, 3D Wave, Jet Start, Forced Air

WARRANTY AND SUPPORT

Your Whirlpool AMW9615IXUK Combi Microwave Oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, service requests, or to purchase genuine spare parts, please contact Whirlpool Customer Service. You can find contact information on the Whirlpool official website or in the documentation provided with your appliance.