

[Manuals.plus](#) /

› [Toastermaster](#) /

› Toastermaster 1.7 Liter Cordless Electric Kettle TM-796KECB User Manual

Toastermaster TM-796KECB

Toastermaster 1.7 Liter Cordless Electric Kettle User Manual

Model: TM-796KECB

INTRODUCTION

Thank you for choosing the Toastermaster 1.7 Liter Cordless Electric Kettle. This manual provides important information regarding the safe operation, maintenance, and care of your new appliance. Please read all instructions thoroughly before first use and retain this manual for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the kettle.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse the cord, plugs, or the electric kettle in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.
12. Do not use the appliance for other than its intended use.

13. Scalding may occur if the lid is removed during the heating cycle.
14. This appliance is for household use only.

PRODUCT OVERVIEW

The Toastmaster Electric Kettle is designed for efficient and convenient water heating. Familiarize yourself with its components:

- **Kettle Body:** Contains the heating element and water reservoir.
- **Lid:** Hinged lid with a release button for easy filling and cleaning.
- **Handle:** Ergonomically designed for comfortable pouring.
- **Spout with Filter:** For controlled pouring and to prevent limescale from entering your cup.
- **Water Level Window:** Indicates the water volume inside the kettle.
- **Power Base:** Cordless base with 360° rotation for easy placement and lifting.
- **Illuminated Power Switch:** Indicates when the kettle is heating.



Figure 1: Toastmaster 1.7 Liter Cordless Electric Kettle (Model TM-796KECB)

1.7 Liter Electric Kettle



1.83 POUNDS



1000 WATTS



120 VOLTS

Figure 2: Kettle Dimensions and Capacity (1.7 Liters)

Thoughtful Design



Hinged lid



Filter in pour spout



Boil Dry Protection



360° rotating base

**CORDLESS
KETTLE**



Figure 3: Thoughtful Design Features

Heating Features

⏻ Illuminated power switch

⏻ Automatic shut off feature

🕒 Boils water in minutes



Figure 4: Heating Features and Lid Release Button

Heat Control Options

✓ Manual On

✓ Manual Off

✓ Auto Off



Figure 5: Heat Control Options

BEFORE FIRST USE

Before using your new electric kettle for the first time, it is recommended to clean it:

1. Fill the kettle with clean water to the MAX fill line.
2. Boil the water as described in the "Operating Instructions" section.
3. Discard the boiled water.
4. Repeat this process two to three times to remove any manufacturing residues.

SETUP

Setting up your Toastmaster Electric Kettle is simple:

1. Place the power base on a dry, flat, and stable surface.
2. Ensure the power cord is securely plugged into a standard 120V AC electrical outlet.

3. The kettle is now ready for use.

OPERATING INSTRUCTIONS

Boiling Water

1. Press the lid release button on the handle to open the hinged lid.
2. Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX (1.7L) mark on the water level window. Overfilling may cause boiling water to spill out.
3. Close the lid securely.
4. Place the kettle firmly onto the power base.
5. Press the illuminated power switch down to the "ON" position. The indicator light will illuminate, signifying that the kettle is heating.
6. Once the water has boiled, the kettle will automatically shut off, and the indicator light will extinguish.

Automatic Shut-off and Keep-Warm Feature

The kettle is equipped with an automatic shut-off function for safety and convenience. It will turn off once the water reaches a boil. Additionally, the kettle includes a keep-warm feature, allowing the water to maintain its temperature for a period after boiling. No manual activation is required for these features.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your kettle.

Cleaning the Exterior

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the kettle body or power base in water or any other liquid.

Descaling (Removing Mineral Deposits)

Mineral deposits (limescale) can build up inside the kettle over time, especially in hard water areas. This can affect boiling time and efficiency. Descale your kettle regularly:

1. Fill the kettle with 2 cups of white vinegar and 2 cups of water.
2. Bring the mixture to a boil and let it stand for 30 minutes.
3. Discard the mixture and rinse the kettle thoroughly with fresh water.
4. For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power switch not engaged; no power at outlet; kettle not properly seated on base.	Ensure the power cord is plugged in. Press the power switch down. Check the circuit breaker. Ensure the kettle is correctly placed on the power base.

Problem	Possible Cause	Solution
Water is not boiling.	Kettle has been descaled recently; boil-dry protection activated.	If the kettle has just been descaled, it may take a moment to reset. If boil-dry protection activated, allow the kettle to cool down before refilling and restarting.
Kettle leaks from the spout.	Kettle is overfilled.	Do not fill above the MAX fill line.
Kettle turns off before boiling.	Excessive mineral deposits.	Descal the kettle as described in the "Maintenance and Cleaning" section.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** TM-796KECB
- **Brand:** Toastmaster
- **Capacity:** 1.7 Liters
- **Power:** 1200 Watts
- **Voltage:** 120V
- **Dimensions (L x W x H):** 9.06" x 6.3" x 8.66"
- **Item Weight:** 1.83 Pounds
- **Special Features:** Cordless design, Automatic Shut-off, Keep-Warm, Water Level Indicator, 360° Rotating Base, Boil-Dry Protection
- **Material:** Stainless Steel or Plastic (as per product specifications)
- **UPC:** 655772017321

WARRANTY AND SUPPORT

Toastmaster products are designed for durability and quality. For specific warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Toastmaster website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07GL9XPG5>

More documents and user manuals: <https://manuals.plus/>