

[manuals.plus](#) /

- › [DASH](#) /
- › [DASH Deluxe 6-Quart Electric Air Fryer and Oven Cooker Instruction Manual](#)

DASH DFAF455GBAQ01

DASH Deluxe 6-Quart Electric Air Fryer and Oven Cooker Instruction Manual

Model: DFAF455GBAQ01

1. PRODUCT OVERVIEW

The DASH Deluxe 6-Quart Electric Air Fryer and Oven Cooker is designed to provide a healthier alternative to traditional frying methods. Utilizing AirCrisp technology, it circulates hot air to cook food, reducing added fat by up to 80% compared to deep frying. This appliance is suitable for preparing a variety of meals, from individual servings to larger family dinners.



Image 1.1: The DASH Deluxe Air Fryer in Aqua, showcasing its design and a basket filled with french fries.

Key Features:

- **6-Quart Capacity:** Generous capacity suitable for family meals and entertaining.
- **AirCrisp Technology:** Uses hot air circulation for crispy results with significantly less oil.
- **Temperature Control:** Adjustable temperature settings for precise cooking.
- **Auto Shut-Off Feature:** Enhances safety by preventing overcooking.
- **Non-stick Fry Basket:** Designed for easy food release and simplified cleaning.

6 QUART FRYING DRAWER



GREAT RECIPES INCLUDED



Image 1.2: The 6-quart frying drawer and included recipe guide highlight the appliance's capacity and versatility.

2. IMPORTANT SAFEGUARDS

Please read and understand all instructions before using this appliance to prevent property damage or personal injury. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

3. SETUP

Unpacking and Initial Cleaning:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wash the Crisper Basket and Crisper Drawer with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.

Placement:

- Place the air fryer on a stable, heat-resistant surface.
- Ensure there is adequate space around the appliance for proper ventilation.
- Do not place the appliance directly against a wall or other appliances.

4. OPERATING INSTRUCTIONS

The DASH Deluxe Air Fryer features simple controls for temperature and time, making it easy to achieve perfectly crispy results.

EASY TO USE!



Set your temp!



Set your time!

Image 4.1: The intuitive dials for setting cooking temperature and time.

Basic Operation:

- 1. Prepare Food:** Place your ingredients into the Crisper Basket. Do not overfill.
- 2. Insert Drawer:** Slide the Crisper Drawer back into the appliance until it clicks securely into place.
- 3. Set Temperature:** Use the temperature dial on the top of the appliance to select the desired cooking temperature (up to 400°F).
- 4. Set Timer:** Use the timer dial on the front of the appliance to set the cooking time (up to 30 minutes). The appliance will begin heating automatically.
- 5. Shaking Food:** For even results, some foods may require shaking halfway through the cooking process. Carefully pull out the Crisper Drawer, shake the contents, and then reinsert it. The appliance will resume cooking.
- 6. Auto Shut-Off:** The appliance will automatically shut off once the timer reaches zero. A bell will ring to indicate cooking is complete.
- 7. Remove Food:** Carefully pull out the Crisper Drawer. Press the Crisper Basket Release Button to separate the basket from the drawer. Empty food onto a plate.

FASTER & SAFER

AirCrisp® Technology circulates hot air to cook quickly, and includes a 30 minute timer with auto-shutoff for added safety.



Image 4.2: AirCrisp Technology ensures even cooking by circulating hot air around the food.

5. MAINTENANCE

Cleaning:

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The Crisper Basket and Crisper Drawer are **not dishwasher safe**. Hand wash them with warm, soapy water and a non-abrasive sponge.
- For stubborn food residue, soak the basket and drawer in warm, soapy water for about 10 minutes before cleaning.
- Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure all parts are thoroughly dry before reassembling and storing.

6. TROUBLESHOOTING

Common Issues:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working outlet. Verify the

Crisper Drawer is fully inserted and clicked into place.

- **Food is not crispy:** Do not overfill the basket. Cook in smaller batches if necessary. Shake the basket halfway through cooking to ensure even crisping. Increase cooking time or temperature if needed.
- **White smoke from appliance:** This may indicate fat or oil dripping onto the heating element. Ensure the basket and drawer are clean. For fatty foods, drain excess fat from the drawer periodically.
- **Unpleasant odor:** A new appliance may emit a slight odor during its first few uses. This is normal and will dissipate. Ensure proper ventilation.

7. SPECIFICATIONS

Feature	Specification
Brand	DASH
Model Name	Deluxe Electric Air Fryer + Oven Cooker
Model Number	DFAF455GBAQ01
Color	Aqua
Capacity	6 Quarts (6 Liters)
Wattage	1700 Watts
Voltage	110 Volts
Max Temperature	400 Degrees Fahrenheit
Control Method	Manual Dials (Temperature, Timer)
Nonstick Coating	Yes
Dishwasher Safe	No (Hand Wash Recommended)
Product Dimensions	12.5"D x 14.8"W x 14.8"H
Item Weight	15.81 pounds
UPC	850000706194



Image 7.1: Product dimensions for the DASH Deluxe Air Fryer.

8. WARRANTY AND SUPPORT

Warranty Information:

The DASH Deluxe Air Fryer is backed by a 1-year manufacturer warranty. Please refer to the warranty card included with your product for specific terms and conditions.

Additional Resources:

- A recipe book is included with your purchase to help you get started with various air frying recipes.
- Access to an online recipe database is also available for more culinary inspiration.

Related Documents - DFAF455GBAQ01

 <p>DELUXE AIR FRYER AirCrisp™ Technology 6 Quart Capacity 1700 Watts</p>	<p><u>Dash Deluxe Air Fryer: User Manual, Features, and Recipes</u> Comprehensive guide for the Dash Deluxe Air Fryer (DFAF455GB), including important safety instructions, parts and features, usage guide, cleaning tips, troubleshooting, and a collection of delicious recipes.</p>
 <p>DIGITAL TASTI-CRISP™ AIR FRYER Instruction Manual Recipe Guide</p>	<p><u>Dash Tasti-Crisp™ Digital Air Fryer Instruction Manual and Recipe Guide</u> Comprehensive guide for the Dash Tasti-Crisp™ Digital Air Fryer, including important safety information, parts and features, operating instructions, tips and tricks, temperature charts, cleaning and maintenance, troubleshooting, and a variety of recipes.</p>
<p>User Manual of Product 1: Dash Tasti-Crisp™ Digital Air Fryer with AirCrisp™ Technology, Digital Precision Temperature Control, and Auto Shut Off Fries, 2.6 Quart - Aqua User Manual of Product 2: Dash Mini Rice Cooker Steamer with Removable Nonstick Pot, Keep Warm Function & Recipe Guide, 5 Quart, for Soups, Stews, Grains & Oatmeal - Aqua</p>	<p><u>DASH Air Fryer & Rice Cooker User Manual and Recipe Guide</u> Comprehensive user manual and recipe guide for the DASH Tasti-Crisp™ Digital Air Fryer (DCAF260) and the DASH Mini Rice Cooker Steamer (DRCM200), featuring setup, operation, maintenance, troubleshooting, and recipes.</p>
<p>User Manual of Product 1: DASH Compact Air Fryer with Temperature Control, Nonstick Pot, Recipe Guide, 4 Quart, Oil Free Fries, 2 Quart - Aqua User Manual of Product 2: DASH Mini Rice Cooker Steamer with Removable Nonstick Pot, Keep Warm Function & Recipe Guide, 5 Quart, for Soups, Stews, Grains & Oatmeal - Aqua</p>	<p><u>DASH Compact Air Fryer & Mini Rice Cooker User Manuals and Recipe Guides</u> Comprehensive user manuals and recipe guides for DASH Compact Air Fryer (DCAF150) and DASH Mini Rice Cooker (DRCM200), offering cooking instructions, safety information, and culinary inspiration from StoreBound.</p>
 <p>EGG COOKER DELUXE INSTRUCTION MANUAL AND RECIPE GUIDE</p>	<p><u>Dash Egg Cooker Deluxe DXEC01: Instruction Manual and Recipe Guide</u> Comprehensive instruction manual and recipe guide for the Dash Egg Cooker Deluxe (Model DXEC01), covering safety guidelines, parts, usage, maintenance, troubleshooting, and delicious egg recipes.</p>
 <p>DELUXE EGG COOKER Instruction Manual & Recipe Guide</p>	<p><u>Dash Deluxe Egg Cooker Instruction Manual and Recipe Guide</u> Comprehensive instruction manual and recipe guide for the Dash Deluxe Egg Cooker (#DEC012), covering setup, usage, cleaning, troubleshooting, and various egg and other food recipes.</p>