

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CRAFTSMAN](#) /

› [CRAFTSMAN CMXLSBWP5 Rechargeable 500 Lumen Lithium Ion Waterproof LED Spotlight Flashlight User Manual](#)

## CRAFTSMAN CMXLSBWP5

# CRAFTSMAN CMXLSBWP5 Rechargeable LED Spotlight User Manual

Model: CMXLSBWP5

## INTRODUCTION

The CRAFTSMAN CMXLSBWP5 Rechargeable LED Spotlight is designed for robust performance in various conditions. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your spotlight. Please read these instructions thoroughly before operating the device.

## SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the spotlight.

- **Eye Safety:** Do not stare directly into the LED light beam. The intense light can cause temporary vision impairment or permanent eye damage.
- **Battery Safety:** This spotlight contains a Lithium-Ion battery. Do not attempt to open, disassemble, or replace the battery. Do not expose the battery to extreme temperatures, fire, or direct sunlight. Dispose of the battery according to local regulations.
- **Charging:** Use only the provided micro USB charging cord. Ensure the charging port is dry before connecting the cable.
- **Water Resistance:** The spotlight is waterproof and submersible up to 6 feet. Ensure the charging port cover is securely closed before exposing the device to water. Do not attempt to charge the device while wet.
- **Children:** Keep the spotlight out of reach of children.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- CRAFTSMAN CMXLSBWP5 LED Spotlight
- Micro USB Charging Cord



Image: The CRAFTSMAN CMXLSBWP5 LED Spotlight with its included micro USB charging cable.

## SETUP: CHARGING THE SPOTLIGHT

---

Before first use, fully charge the spotlight. A full charge typically takes several hours.

1. Locate the micro USB charging port, usually protected by a rubber cover, on the spotlight.
2. Open the rubber cover to expose the charging port.
3. Insert the small end of the micro USB charging cord into the spotlight's charging port.
4. Connect the larger end of the micro USB charging cord to a standard USB power adapter (not included) or a powered USB port.
5. The charging indicator light will illuminate, typically red, to show that charging is in progress.
6. Once fully charged, the indicator light will change color (e.g., green) or turn off.
7. Disconnect the charging cord and securely close the rubber cover over the charging port to maintain water resistance.

## OPERATING THE SPOTLIGHT

---

The spotlight features a pistol grip handle and a locking trigger for comfortable and continuous use.



Image: A person using the CRAFTSMAN spotlight to inspect an engine, demonstrating its practical application in dark or confined spaces.

1. **Power On/Off:** Press the trigger button on the handle to turn the spotlight on. Press it again to cycle through light modes or turn off, depending on the model's specific sequence.
2. **Light Modes:** The spotlight typically offers multiple brightness settings. Pressing the trigger button repeatedly will cycle through these modes (e.g., High, Low, Off).
3. **Locking Trigger:** To maintain continuous light without holding the trigger, engage the trigger lock

mechanism, usually a small switch or button near the trigger. Disengage the lock to turn off the light or change modes.

## WATERPROOF USE

The CMXLSBWP5 spotlight is designed to be waterproof and can be submerged up to 6 feet. It also floats upright for easy retrieval.



Image: The CRAFTSMAN spotlight floating on the surface of water, demonstrating its waterproof capability and ability to float upright.

- Ensure the charging port's rubber cover is completely sealed before submerging the spotlight in water.
- After use in water, wipe the spotlight dry with a clean cloth, paying special attention to the charging port area before opening it for charging.
- Do not attempt to charge the spotlight if the charging port or surrounding area is wet.

## MAINTENANCE

Proper maintenance ensures the longevity and performance of your spotlight.

- **Cleaning:** Clean the exterior of the spotlight with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Recharge the spotlight regularly, especially if it has not been used for an extended period. Store in a cool, dry place.
- **Storage:** Store the spotlight in a dry environment away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your spotlight, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Spotlight does not turn on.	Battery is discharged.	Charge the spotlight fully using the provided USB cable.
Spotlight does not charge.	Charging cable or adapter is faulty. Charging port is wet.	Try a different USB cable or power adapter. Ensure the charging port is completely dry before attempting to charge.
Light output is dim.	Battery is low. Spotlight is in a lower brightness mode.	Recharge the battery. Cycle through the light modes to select a brighter setting.
Water inside the spotlight.	Charging port cover was not securely closed.	Immediately discontinue use. Do not attempt to charge. Contact customer support for assistance.

## SPECIFICATIONS

Feature	Detail

Feature	Detail
Model	CMXLSBWP5
Light Source Type	LED
Brightness	Up to 450 Lumens
Power Source	Rechargeable Lithium-Ion Battery
Battery Runtime	Up to 7 hours (on a single charge)
Water Resistance Level	Waterproof (submersible up to 6 feet)
Material	Polymer
Color	Black, Red
Item Weight	1.2 pounds
Product Dimensions	10.75 x 3.63 x 8.5 inches
Special Features	Durable, Floats Upright

## WARRANTY AND SUPPORT

---

CRAFTSMAN products are designed for durability and performance. For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the official CRAFTSMAN website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

**Online Support:** Visit the official CRAFTSMAN website for FAQs and support resources.

**Customer Service:** Refer to your product packaging or the CRAFTSMAN website for contact information.