

DASH DEC012AQ

DASH Deluxe Rapid Egg Cooker Instruction Manual

Model: DEC012AQ

INTRODUCTION

The DASH Deluxe Rapid Egg Cooker is designed to simplify your cooking process, allowing you to prepare a variety of egg dishes and steamed foods quickly and efficiently. With a capacity for up to 12 eggs, this appliance offers versatility for hard-boiled, soft-boiled, poached, scrambled eggs, omelets, steamed vegetables, and dumplings. Its automatic shut-off feature ensures perfect results every time without the risk of overcooking.



Image: The DASH Deluxe Rapid Egg Cooker in Aqua, showcasing its two-tier design and clear lid.

PRODUCT COMPONENTS

Before first use, ensure all components are present and undamaged. The package includes:

- Main Heating Base
- Clear Lid
- Measuring Cup with Egg Piercer
- Boiling Trays (for up to 12 eggs)
- Poaching Trays (for up to 7 poached eggs)
- Omelette Tray



PERFECTLY POACHED

Cook eggs any style for delicious breakfast sandwiches and entrées.



PROTEIN-PACKED

Just add eggs for tasty, protein-packed meals to enjoy on-the-go.



DELICIOUSLY DEVEILED

Takes the the work out of large recipes, perfect for entertaining.

Image: An exploded view of the DASH Deluxe Rapid Egg Cooker components, including the main unit, clear lid, measuring cup, poaching trays, and omelette tray.

SETUP

1. **Unpack:** Carefully remove all packaging materials and stickers from the egg cooker.
2. **Clean:** Wash the clear lid, boiling trays, poaching trays, omelette tray, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the heating base with a damp cloth. Do not immerse the heating base in water.
3. **Placement:** Place the heating base on a stable, flat, heat-resistant surface near an electrical outlet.

OPERATION

The DASH Deluxe Rapid Egg Cooker features a simple one-touch operation. The cooking time is determined by the amount of water added to the heating plate, which corresponds to the desired egg consistency.

General Steps for Egg Cooking:

1. **Add Water:** Use the provided measuring cup to add the appropriate amount of water to the heating plate. The measuring cup has markings for different egg consistencies (soft, medium, hard) and quantities.
2. **Pierce Eggs (for boiled eggs):** Use the egg piercer located at the bottom of the measuring cup to gently pierce the large end of each egg. This prevents cracking during cooking.
3. **Load Eggs/Trays:**
 - For **Boiled Eggs:** Place eggs on the boiling tray(s) with the pierced end facing upwards. You can use one or two trays for up to 12 eggs.
 - For **Poached Eggs:** Lightly grease the poaching tray. Crack eggs into the poaching cups. Place the poaching tray on the boiling tray.
 - For **Omelets:** Lightly grease the omelette tray. Pour your egg mixture into the omelette tray. Place the omelette tray on the boiling tray.
4. **Cover:** Place the clear lid securely over the trays.
5. **Start Cooking:** Plug in the appliance and press the power button. The indicator light will illuminate.
6. **Completion:** The appliance will automatically shut off and a buzzer will sound when the water has evaporated and the eggs are cooked.
7. **Cool Down:** Carefully remove the lid (steam will be hot). For hard-boiled eggs, immediately transfer them to an ice bath to stop the cooking process and aid in peeling.

Steaming Vegetables and Dumplings:

The egg cooker can also function as a steamer for small portions of vegetables, dumplings, or other foods.

1. **Add Water:** Add water to the heating plate. The amount of water will depend on the desired steaming time and the food type.
2. **Load Food:** Place vegetables or dumplings directly onto the boiling tray(s).
3. **Cover and Cook:** Place the clear lid securely and press the power button.
4. **Monitor:** Monitor the food for desired tenderness. The unit will shut off when water evaporates.



Image: The DASH Deluxe Rapid Egg Cooker demonstrating its versatility by steaming vegetables, dumplings, and potatoes.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your egg cooker.

- **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Wash Removable Parts:** The clear lid, boiling trays, poaching trays, omelette tray, and measuring cup are top-rack dishwasher safe or can be washed by hand with warm, soapy water. Rinse thoroughly.

- **Clean Heating Plate:** Wipe the heating plate with a damp cloth. For mineral deposits or hard water spots (which may appear rust-colored or white), use a solution of 1 part white vinegar to 9 parts water. Pour the solution onto the heating plate (do not overfill) and let it sit for 5-10 minutes, or gently heat it for a few minutes without other components. Turn off, unplug, and carefully pour out the solution. Wipe clean with a damp cloth or a soft sponge/magic eraser. Rinse by wiping with a clean, damp cloth.
- **Dry:** Ensure all parts are completely dry before storing.

QUICK CLEANUP

All accessories go *right* into the dishwasher for a cleanup that's over easy!



Image: The removable accessories of the DASH Deluxe Rapid Egg Cooker placed in a dishwasher for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs not cooked to desired consistency.	Incorrect water amount; lid not sealed properly.	Ensure correct water level is used as per measuring cup. Check that the lid is securely placed.

Problem	Possible Cause	Solution
Eggs cracking during cooking.	Eggs not pierced; cold eggs used directly from refrigerator.	Always pierce the large end of each egg before cooking. Allow eggs to come to room temperature for 10-15 minutes before cooking, if possible.
Difficulty peeling hard-boiled eggs.	Eggs not immediately cooled after cooking.	Immediately transfer cooked hard-boiled eggs to an ice bath for several minutes. This helps the membrane separate from the egg white.
Mineral deposits/discoloration on heating plate.	Hard water residue.	Clean with a vinegar and water solution as described in the Maintenance section.

SPECIFICATIONS

- **Model Number:** DEC012AQ
- **Capacity:** 12 eggs (boiled), 7 eggs (poached)
- **Material:** Plastic
- **Color:** Aqua
- **Product Dimensions:** 8"L x 8"W x 9"H
- **Item Weight:** 2 Pounds
- **Power:** Electric
- **Manufacturer:** StoreBound
- **UPC:** 850000706064









Image: A diagram illustrating the dimensions of the DASH Deluxe Rapid Egg Cooker, showing its 8-inch length, 8-inch width, and 9-inch height.

WARRANTY AND SUPPORT

The DASH Deluxe Rapid Egg Cooker comes with a 2-year warranty upon registration. For product support, troubleshooting, or warranty claims, please contact DASH customer support.

DASH products are designed in NYC, with U.S. based Customer Support available for every product.

For more information, visit the official DASH website or refer to the contact details provided in your product packaging.

 <p>DASH RAPID EGG COOKER Instruction Manual Recipe Guide</p>	<p>Dash Rapid Egg Cooker DEC005: Instruction Manual and Recipe Guide</p> <p>Comprehensive instruction manual and recipe guide for the Dash Rapid Egg Cooker (Model DEC005), featuring safety instructions, parts identification, usage guides, cleaning tips, troubleshooting, and a variety of egg recipes.</p>												
 <p>DASH RAPID EGG COOKER</p> <p>GET COOKING</p> <p>Place the Dash Rapid Egg Cooker on a flat surface. Plug the power cord into a standard wall outlet. Fill the water reservoir with water up to the MAX line. Turn the power switch on. The indicator light will turn on. Place eggs into the egg slots. Close the lid. Press the power button. The indicator light will turn off when cooking is complete. Remove the eggs and enjoy!</p> <table><thead><tr><th>STYLE</th><th># OF EGGS</th><th>TIME</th></tr></thead><tbody><tr><td>Soft-Boiled</td><td>1-2</td><td>4-6</td></tr><tr><td>Hard-Boiled</td><td>1-2</td><td>10-12</td></tr><tr><td>Hard-Boiled</td><td>1-2</td><td>12-14</td></tr></tbody></table>	STYLE	# OF EGGS	TIME	Soft-Boiled	1-2	4-6	Hard-Boiled	1-2	10-12	Hard-Boiled	1-2	12-14	<p>Dash Rapid Egg Cooker: Quick Start Guide and Instructions</p> <p>Learn how to use your Dash Rapid Egg Cooker for perfect hard-boiled, poached, and omelette-style eggs. Includes cooking times, cleaning instructions, and auto-shutoff features.</p>
STYLE	# OF EGGS	TIME											
Soft-Boiled	1-2	4-6											
Hard-Boiled	1-2	10-12											
Hard-Boiled	1-2	12-14											
 <p>DASH RAPID EGG COOKER One Touch Cooking 6 Egg Capacity 1000 Watts</p>	<p>Dash Rapid Egg Cooker DEC005: User Manual, Safety, and Recipes</p> <p>Comprehensive guide for the Dash Rapid Egg Cooker (Model DEC005). Includes safety instructions, parts identification, usage guides for boiling, poaching, and omelets, cleaning tips, troubleshooting, and a variety of delicious egg recipes.</p>												
 <p>DASH PEEPS RAPID EGG COOKER Instruction Manual Recipe Guide</p>	<p>Dash PEEPS Rapid Egg Cooker Instruction Manual and Recipe Guide</p> <p>Comprehensive guide for the Dash PEEPS Rapid Egg Cooker, including setup, usage instructions, safety precautions, troubleshooting, and a variety of recipes for boiled eggs, deviled eggs, egg salad, frittatas, and more.</p>												
 <p>DASH DELUXE EGG COOKER Instruction Manual Recipe Guide</p>	<p>Dash Deluxe Egg Cooker Instruction Manual and Recipe Guide</p> <p>Comprehensive guide for the Dash Deluxe Egg Cooker, including important safeguards, parts and features, operating instructions, troubleshooting, and a variety of recipes.</p>												
 <p>DASH RAPID EGG COOKER One Touch Cooking 6 Egg Capacity 1000 Watts</p>	<p>Dash DEC005 Rapid Egg Cooker: User Manual, Features, and Recipes</p> <p>Comprehensive user manual and recipe guide for the Dash DEC005 Rapid Egg Cooker. Learn how to boil, poach, and make omelettes, plus find delicious recipes, troubleshooting tips, and warranty information.</p>												