

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HAND](#) /

› [User Manual for HAND® JX-633-TK Silver Tone 4-Part Plain Flat Top Press Stud Buttons](#)

HAND JX-633-TK

User Manual for HAND® JX-633-TK Press Stud Buttons

Model: JX-633-TK

1. INTRODUCTION

This manual provides instructions for the proper use, assembly, and maintenance of the HAND® JX-633-TK Silver Tone 4-Part Plain Flat Top Press Stud Buttons. These metal press studs are designed for various textile applications, including jeans, jackets, garments, and accessories. Each set consists of four distinct parts that combine to form a secure fastening.

2. PRODUCT COMPONENTS

Each HAND® JX-633-TK press stud set comprises four individual components, essential for its functionality. Understanding each part is key to proper assembly and use.

- **Button Top:** The decorative, visible part of the stud on the exterior of the fabric.
- **Top Cover:** The inner component that secures the button top to the fabric.
- **Button Base:** The receiving part of the stud, typically on the interior of the fabric.
- **Base Cover:** The inner component that secures the button base to the fabric.



Figure 2.1: Individual components of the HAND® JX-633-TK press stud button. From left to right, top row: Button Top, Top Cover. Bottom row: Button Base, Base Cover.



Figure 2.2: A collection of all four parts of the HAND@ JX-633-TK press stud buttons, showing the quantity provided in a set.

3. SETUP AND ASSEMBLY

Proper assembly of the press stud buttons requires a suitable setting tool (not included). Follow these steps for secure attachment to your fabric.

1. **Prepare Fabric:** Identify the exact location on your fabric where the button will be placed. Mark the spot.
2. **Attach Button Top Half:**
 - Place the *Button Top* on the exterior side of the fabric.
 - Align the *Top Cover* on the interior side of the fabric, directly beneath the Button Top.
 - Using a press stud setting tool, apply firm, even pressure to crimp the Button Top and Top Cover together through the fabric. Ensure a tight and secure fit.
3. **Attach Button Base Half:**
 - On the corresponding fabric piece, place the *Button Base* on the exterior side.
 - Align the *Base Cover* on the interior side, directly beneath the Button Base.
 - Using the setting tool, apply firm, even pressure to crimp the Button Base and Base Cover together through the fabric. Verify that this half is also securely attached.

4. **Test Connection:** Once both halves are attached, align them and press them together to ensure they snap securely. The connection should be firm and not easily disengage.



Figure 3.1: An assembled HAND@ JX-633-TK press stud button, demonstrating its final appearance and size relative to a hand.

4. OPERATING AND USAGE

These press stud buttons are designed for quick and reliable fastening. They are suitable for a wide range of applications where a durable and easy-to-use closure is desired.

- **Fastening:** To close, align the button top half with the button base half and press firmly until you hear or feel a distinct "snap."
- **Unfastening:** To open, gently pull the two fabric pieces apart at the button location. Avoid excessive force to prevent damage to the fabric or the button.

- **Applications:** Ideal for use on jeans, jackets, shirts, skirts, shorts, bags, and other fabric-based items. They can also be used for decorative purposes.

5. MAINTENANCE

To ensure the longevity and continued functionality of your HAND® press stud buttons, follow these simple maintenance guidelines:

- **Cleaning:** Clean the buttons with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the silver-tone finish.
- **Drying:** If the buttons become wet, dry them thoroughly to prevent tarnishing or corrosion, especially if exposed to saltwater or high humidity.
- **Storage:** Store unused buttons in a dry environment to maintain their condition.

6. TROUBLESHOOTING

If you encounter issues with your press stud buttons, consider the following common solutions:

- **Button Not Snapping Securely:**
 - Ensure both halves of the button are correctly aligned before pressing.
 - Verify that the setting tool was used with sufficient and even pressure during assembly. Re-crimp if necessary, or replace the button if damaged.
 - Check if the fabric is too thick or too thin for the button type.
- **Button Detaching from Fabric:**
 - This indicates insufficient crimping during assembly. Re-attach with more pressure or replace the button.
 - Excessive force when opening the button can also cause detachment over time.
- **Tarnishing or Discoloration:**
 - This can occur due to exposure to moisture, chemicals, or prolonged contact with skin oils. Clean as per maintenance instructions.

7. SPECIFICATIONS

Detailed specifications for the HAND® JX-633-TK Press Stud Buttons:

Attribute	Detail
Product Name	HAND® JX-633-TK Silver Tone 4-Part Plain Flat Top Press Stud Buttons
Model Number	JX-633-TK
Color	Silver Tone
Material	Metal
Diameter	12 mm
Number of Parts per Set	4
Quantity per Pack	20 Full Sets
Product Dimensions	0.47 x 0.47 x 0.35 inches

Attribute	Detail
Item Weight	1.2 ounces
Manufacturer	Well Made Tools
Head Style	Flat, Button

8. WARRANTY AND SUPPORT

Information regarding specific product warranty or dedicated customer support for the HAND® JX-633-TK Press Stud Buttons is not provided in this manual. For any inquiries or assistance, please refer to the retailer or point of purchase.