

[Manuals.plus](#) /

› [Portronics](#) /

› Portronics Sound Slick II 40W POR-936 Sound Bar User Manual

Portronics POR-936

Portronics Sound Slick II 40W POR-936 Sound Bar User Manual

Model: POR-936

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Portronics Sound Slick II 40W POR-936 Sound Bar. This sound bar delivers 40W of stereo sound and offers versatile connectivity options including Bluetooth 4.2, AUX-in, and USB playback. Please read this manual thoroughly before using the product to ensure proper function and longevity.

WHAT'S IN THE BOX

Carefully unpack all items and ensure you have received the following components:

- Portronics Sound Slick II Sound Bar
- Charging Adapter
- AV Cable
- Aux-in Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the sound bar's controls and connection ports.

Sound Bar Controls and Ports

The sound bar features conveniently located buttons and essential ports for various connections.

Connectivity Options like AUX-IN & USB (Pendrive).



Image: Rear view of the Sound Slick II sound bar showing the AUX-IN port, DC power input, and USB port, along with side panel buttons for power, volume, and playback.

- **Power On/Off/BT /Aux/USB/Mode Button:** Press and hold to power on/off. Short press to cycle through input modes (Bluetooth, AUX, USB).
- **Volume Up / Forward Song Button:** Short press to increase volume. Long press to skip to the next song in Bluetooth/USB mode.
- **Play/Pause Button:** Short press to play or pause audio.
- **Volume Down / Previous Song Button:** Short press to decrease volume. Long press to go to the previous song in Bluetooth/USB mode.
- **Indicator Light:** Displays current status (e.g., pairing mode, connected, charging).
- **AUX-IN Port:** For connecting external audio devices via a 3.5mm audio cable.
- **DC Power Input:** For connecting the power adapter.
- **USB Port:** For playing audio files directly from a USB flash drive.

Remote Control Functions

The included remote control provides convenient access to all sound bar functions.

Bluetooth 4.2

Enjoy a thriller on your smartphone, tab, laptop or computer.



Image: Diagram of the remote control for the Sound Slick II, showing buttons for power, mute, volume, track control, mode change, and 3D sound.

- **Power On/Off:** Turns the sound bar on or off.
- **Mute:** Mutes or unmutes the audio output.
- **Volume Up/Down:** Adjusts the sound volume.
- **Previous/Next Song:** Skips to the previous or next track in Bluetooth/USB mode.
- **Play/Pause:** Plays or pauses audio playback.
- **Mode Change (M):** Cycles through input modes (Bluetooth, AUX, USB).
- **3D Sound:** Activates or deactivates the 3D sound effect.

SETUP

Follow these steps to set up your Sound Slick II sound bar.

Placement

Position the sound bar for optimal audio experience.



Image: The Sound Slick II sound bar positioned horizontally below a television, demonstrating typical placement.

- Place the sound bar on a flat, stable surface directly in front of your television or display.
- Ensure there are no obstructions blocking the front of the sound bar for clear audio projection.

Wall Mounting

The sound bar can also be wall-mounted for a sleek setup.



You can easily place it with your TV or wall mount it.

Image: Detail of the keyhole slot on the back of the sound bar, indicating its wall-mounting capability.

- Identify the keyhole slots on the back of the sound bar.
- Measure the distance between the keyhole slots.
- Mark two corresponding points on the wall where you intend to mount the sound bar.
- Drill pilot holes and insert appropriate wall anchors (not included) if necessary.
- Insert screws (not included) into the wall, leaving a small gap between the screw head and the wall.
- Align the keyhole slots on the sound bar with the screws and gently slide the sound bar down to secure it.
- Ensure the sound bar is securely fastened before releasing it.

Power Connection

1. Connect the charging adapter to the DC Power Input port on the sound bar.
2. Plug the other end of the adapter into a standard wall outlet.
3. The sound bar will enter standby mode or power on automatically.

OPERATING INSTRUCTIONS

Learn how to use the various connectivity options and controls of your sound bar.

Bluetooth Connection

Connect your smartphone, tablet, or other Bluetooth-enabled device wirelessly.

Features & Functions

Buttons on its body are conveniently located and easy to operate.
It is available in elegant black color with great finish.

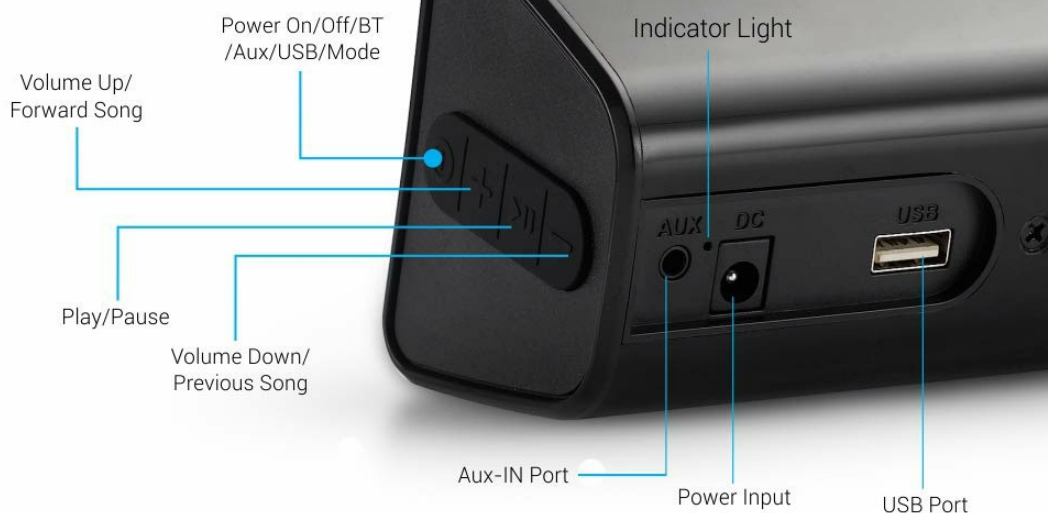


Image: A smartphone displaying a music player interface, with a Bluetooth icon indicating connection to the Sound Slick II sound bar.

1. Power on the sound bar.
2. Press the 'M' (Mode) button on the remote or the Mode button on the sound bar until the Bluetooth mode is selected. The indicator light will flash, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "Sound Slick II" from the list of devices.
5. Once paired, the indicator light will stop flashing and remain solid. You can now play audio from your device through the sound bar.

AUX-in Connection

Connect devices using the 3.5mm AUX cable.



Image: A close-up of the sound bar's side, showing an AUX cable connected to a smartphone and a USB pendrive inserted into the USB port.

1. Connect one end of the 3.5mm AUX cable to the AUX-IN port on the sound bar.
2. Connect the other end of the AUX cable to the audio output (headphone jack) of your device (e.g., TV, smartphone, laptop).
3. Press the 'M' (Mode) button on the remote or the Mode button on the sound bar until the AUX mode is selected.
4. Play audio from your connected device.

USB Playback

Play audio files directly from a USB flash drive.

1. Insert a USB flash drive containing audio files into the USB port on the sound bar.
2. Press the 'M' (Mode) button on the remote or the Mode button on the sound bar until the USB mode is selected.

- 3. The sound bar will automatically begin playing audio files from the USB drive.
- 4. Use the remote control or sound bar buttons to control playback (play/pause, next/previous track).

3D Sound Function

Enhance your audio experience with the 3D sound effect.

- Press the '3D Sound' button on the remote control to activate or deactivate the 3D sound effect.

MAINTENANCE

Proper care ensures the longevity of your sound bar.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the sound bar. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the sound bar in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Water:** This product is not waterproof. Keep it away from water and high humidity.

TROUBLESHOOTING

If you encounter issues with your sound bar, refer to the following solutions.

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to both the sound bar and a working power outlet.
No sound	Incorrect input mode, low volume, or faulty cable/Bluetooth connection.	Verify the correct input mode is selected. Increase the volume on both the sound bar and the connected device. Reconnect cables or re-pair Bluetooth.
Bluetooth pairing fails	Sound bar not in pairing mode, device too far, or interference.	Ensure the sound bar is in Bluetooth pairing mode (flashing indicator light). Move your device closer to the sound bar. Turn off other Bluetooth devices to reduce interference.
Remote control not responding after power off	Specific power state issue.	If the sound bar is switched off and the red indicator light is on, and the remote cannot switch it back on, disconnect the power plug from the wall socket. Wait for approximately 7 seconds until the red light completely extinguishes. Reinsert the power plug into the wall socket, then use the remote to switch the device on.

SPECIFICATIONS

Key technical details of the Portronics Sound Slick II 40W POR-936 Sound Bar.

Great Visual Appeal

Sound Slick II gives great visual appeal to your living room or bed room.



Image: The Sound Slick II sound bar with its dimensions (95.6cm x 7.3cm x 7.2cm) and weight (1.8 KG) clearly labeled.

Feature	Detail
Brand	Portronics
Model Number	POR-936
Speaker Maximum Output Power	40 Watts (2 x 20W)
Connectivity Technology	Auxiliary, Bluetooth, Wireless
Audio Output Mode	Stereo
Mounting Type	Wall Mount
Enclosure Material	Metal + Plastic
Speaker Type	Soundbar

Feature	Detail
Colour	Black
Control Method	Remote
Speaker Size	5 Inches
Tweeter Driver Diameter	1 Inches
Compatible Devices	Smartphone, Tablet, Laptop, Computer, TV
Power Source	AC
Item Weight	1800 Grams
Bluetooth Version	4.2 BLE

WARRANTY AND SUPPORT

Information regarding your product's warranty and how to obtain support.

Warranty

The Portronics Sound Slick II 40W POR-936 Sound Bar comes with a**1-Year Manufacturing Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your purchase receipt for warranty claims.

Customer Support

For technical assistance, warranty claims, or product inquiries, please contact Portronics customer support. You can find contact information on the official Portronics website or refer to the details below:

Manufacturer Address:

FLOOR-1st and 2nd, B-76, Wazirpur Industrial area,
Wazirpur, New Delhi, Delhi, 110052

