

Manuals.plus /

› Passion-Electro /

› Passion-Electro Replacement Remote Control User Manual for GRUNDIG LENARO 32LXW 82-8720 TV

## Passion-Electro GRUNDIG LENARO 32LXW 82-8720

# Passion-Electro Replacement Remote Control User Manual

For GRUNDIG LENARO 32LXW 82-8720 TV

## 1. INTRODUCTION

---

This manual provides instructions for the Passion-Electro replacement remote control, designed specifically for the GRUNDIG LENARO 32LXW 82-8720 TV model. This remote offers full functionality equivalent to the original remote control without requiring any programming.

Simply insert the batteries, and the remote is ready for use. The button layout may vary slightly from the original remote, but all functions are accessible.

## 2. SETUP

---

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA 1.5V batteries (not supplied) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Bottom view of the remote control, highlighting the battery compartment.



Image: Top view of the remote control, showing the battery compartment cover.

## 2.2 First Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Point the remote control towards your GRUNDIG LENARO 32LXW 82-8720 TV and press the desired function button.

## 3. OPERATING INSTRUCTIONS

---

This replacement remote control provides access to all standard functions of your GRUNDIG LENARO 32LXW 82-8720 TV. The buttons are intuitively laid out for ease of use.



Image: Front view of the remote control, displaying the main control buttons.



Image: Another front view of the remote control, showing the power button and numeric keypad.



Image: Side view of the remote control, illustrating its ergonomic design.

### Key Functions:

- **Power Button:** Turns the TV on or off.
- **Numeric Keypad (0-9):** For direct channel selection.

- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels.
- **Mute Button:** Silences the TV audio.
- **Navigation Pad (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Menu/Exit Buttons:** Accesses and exits TV menus.
- **Colored Function Keys (Red, Green, Yellow, Blue):** These keys correspond to specific functions within TV menus or smart features, as indicated on your TV screen.
- **Info/EPG/Smart Buttons:** Accesses information, Electronic Program Guide, or smart TV features.

Ensure there is a clear line of sight between the remote control and the TV's infrared receiver for optimal performance.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical wipes, as these may damage the surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote control's performance degrades or the LED indicator (if present) does not light up. Always replace both batteries simultaneously with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.

### 4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are correctly inserted with the correct polarity.
  - Replace the batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Confirm you are within the operational range (up to 10 meters).
- **Specific buttons not working:**
  - This remote is designed to replicate the original functionality. If a specific button does not work, ensure your TV model (GRUNDIG LENARO 32LXW 82-8720) supports that function with its original remote.
  - Clean the remote control, especially around the unresponsive button, to remove any debris.
- **LED indicator not lighting up:**
  - This indicates low or no battery power. Replace the batteries.

## 6. SPECIFICATIONS

---

<b>Brand:</b>	Passion-Electro
<b>Compatible Model:</b>	GRUNDIG LENARO 32LXW 82-8720 TV
<b>Battery Type:</b>	2 x AAA 1.5V (not included)
<b>Color:</b>	Black
<b>Maximum Range:</b>	10 Meters
<b>Programming Required:</b>	No
<b>Manufacturer:</b>	Passion-Electro
<b>Country of Origin:</b>	China

## 7. WARRANTY AND SUPPORT

---

### 7.1 Warranty Information

Specific warranty details for this product are not provided in the available product information. Please refer to your purchase documentation or contact the seller for warranty terms.

### 7.2 Customer Support

For any questions, issues, or technical assistance regarding your Passion-Electro replacement remote control, please contact the seller directly through the platform where the purchase was made. Ensure you have your order details readily available.