

[manuals.plus](#) /

› [Diswoe](#) /

› [Diswoe Wireless Switch Controller Instruction Manual \(Model B07GQMYP9F\)](#)

Diswoe B07GQMYP9F

Diswoe Wireless Switch Controller Instruction Manual

Model: B07GQMYP9F

1. INTRODUCTION

Thank you for choosing the Diswoe Wireless Switch Controller. This manual provides detailed instructions for setting up, operating, and maintaining your controller. Please read it thoroughly to ensure optimal performance and a satisfying gaming experience.



Figure 1: Front view of the Diswoe Wireless Switch Controller.

2. PRODUCT OVERVIEW

The Diswoe Wireless Switch Controller is designed for enhanced gaming across multiple platforms. It features an ergonomic design, programmable back buttons, vibrant LED lighting, and robust battery life.

2.1 Key Features

- Universal Compatibility:** Fully compatible with Nintendo Switch, Switch Lite, Switch OLED, Windows PC, and Android phones.
- Programmable Back Buttons:** Two customizable M1/M2 buttons for complex command sequences.
- Colorful Breathing LED:** 8 adjustable LED colors to enhance your gaming atmosphere.
- Long Battery Life:** Built-in 600mAh battery provides up to 10 hours of playtime on a single charge.
- Ergonomic Design:** Lightweight construction with non-slip grips for comfortable extended play.
- 6-Axis Gyro Sensor:** Provides precise motion control for immersive gameplay.
- Dual Motors Vibration:** Enhances game immersion with responsive haptic feedback.
- Turbo Function:** Adjustable turbo speed (5/12/20 shots/s) for rapid-fire actions.

2.2 Controller Layout



Figure 2: Front view highlighting programmable buttons (M1, M2) and standard controls.

- **Left Joystick:** Movement and camera control.
- **D-Pad:** Directional input.
- **Minus (-) Button:** System function.
- **Screenshot Button:** Capture screenshots or video clips.
- **Home Button:** Return to the home screen, power on/off.
- **Turbo (T) Button:** Activate/adjust turbo function.
- **LED Control Button:** Adjust LED lighting colors.
- **Plus (+) Button:** System function.
- **A/B/X/Y Buttons:** Action buttons.
- **Right Joystick:** Movement and camera control.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **M1/M2 Buttons:** Programmable back buttons.
- **USB-C Port:** Charging and wired connection.

- **Reset Button:** Small pinhole button for resetting the controller.

3. SETUP

3.1 Charging the Controller

Before first use, fully charge the controller. Connect the provided USB-C cable to the controller's USB-C port and the other end to a USB power source (e.g., Nintendo Switch dock, PC, USB wall adapter). The LED indicators will show charging status and turn off when fully charged. A full charge typically takes 2-3 hours.



Figure 3: Battery life and charging details.

3.2 Pairing with Nintendo Switch

1. On your Nintendo Switch Home Menu, select 'Controllers'.
2. Select 'Change Grip/Order'.
3. On the Diswoe controller, press and hold the **Home button** for 5 seconds until the LED indicators start flashing rapidly. This indicates pairing mode.
4. Once the controller appears on the Switch screen, press the **A button** on the Diswoe controller to confirm pairing.

5. The LED indicators will stop flashing and remain solid, indicating successful connection.

Video 1: Demonstration of connecting the wireless controller to a Nintendo Switch.

4. OPERATING INSTRUCTIONS

4.1 Programmable Back Buttons (M1/M2)

The M1 and M2 buttons on the back of the controller can be programmed to execute a sequence of up to 20 button presses, allowing for more comfortable and efficient gameplay.



Figure 4: Illustration of the programmable macro function.

4.2 Turbo Function

Activate the Turbo function for rapid-fire actions. The controller supports 3 turbo speeds: 5, 12, or 20 shots per second. This function can be assigned to A, B, X, Y, L, ZL, R, ZR, or the D-pad.

MANUAL & AUTO TURBO FUNCTION

With 5/12/20 shots/s, you can set TURBO+AB/X/Y/LR/ZL/ZR to meet your personalized gaming needs.



Figure 5: Turbo function settings and speed options.

4.3 Colorful Breathing LED

The controller features 8 different LED colors that can be adjusted using the dedicated LED control button. Cycle through colors to match your preference or game environment.

8 COLORS & 6 LED MODES RGB JOYSTICK



Figure 6: Available LED colors for the joysticks.

4.4 Motion Controls and Vibration

The integrated 6-axis gyro sensor provides precise motion control, enhancing gameplay in titles that utilize this feature. Dual motors deliver strong and responsive vibration feedback, immersing you further into the game world.



Figure 7: 6-axis gyro sensor and dual vibration motors.

5. COMPATIBILITY

The Diswoe Wireless Switch Controller offers broad compatibility:

MULTI-PLATFORM CONTROLLER

Supports wireless/wired connection Switch/Lite/OLED,
Windows 7/8/10/11 and above(Does not support Xbox games)



Figure 8: Multi-platform compatibility with PC and Nintendo Switch.

- **Nintendo Switch:** Compatible with Switch, Switch Lite, and Switch OLED models.
- **Windows PC:** Connects wirelessly or via USB-C cable.
- **Android Phones:** Connects wirelessly.

6. MAINTENANCE

To ensure the longevity and optimal performance of your controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.
- **Charging:** Do not overcharge the battery. Disconnect the charger once the battery is full.

7. TROUBLESHOOTING

If you encounter any issues with your Diswoe Wireless Switch Controller, please refer to the following common

solutions:

- **Controller not connecting:**

- Ensure the controller is charged.
- Verify the Switch is in 'Change Grip/Order' mode.
- Press and hold the Home button on the controller for 5 seconds to enter pairing mode.
- If issues persist, try resetting the controller using the small pinhole reset button on the back.

- **Buttons unresponsive or sticky:**

- Clean around the buttons with a soft, slightly damp cloth.
- Ensure no debris is lodged under the buttons.
- Try resetting the controller.

- **Battery not holding charge:**

- Ensure the USB-C cable and charging port are clean and undamaged.
- Try a different USB power source or cable.
- Avoid completely draining the battery frequently.

8. SPECIFICATIONS

Feature	Detail
Model Number	B07GQMYP9F
Connectivity	Wireless (Bluetooth), Wired (USB-C)
Compatibility	Nintendo Switch/Lite/OLED, Windows PC, Android Phone
Battery Capacity	600mAh
Playtime	Up to 10 hours (approx.)
Charging Time	2-3 hours (approx.)
Charging Port	USB-C
Motion Sensor	6-Axis Gyro
Vibration	Dual Motors
Programmable Buttons	M1, M2 (up to 20 steps)
Turbo Speeds	5, 12, 20 shots/s
LED Lighting	8 Colors (adjustable)
Item Weight	11.3 ounces
Package Dimensions	6.89 x 5.47 x 2.72 inches

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Diswoe customer service directly. Keep your purchase receipt for any warranty claims.

© 2025 Diswoe. All rights reserved.

Documents - Diswoe – B07GQMYP9F

no relevant documents