

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY BN59-00488A Remote Control User Manual](#)

## ALLIMITY BN59-00488A

# ALLIMITY BN59-00488A Remote Control User Manual

Model: BN59-00488A



## INTRODUCTION

This user manual provides detailed instructions for the ALLIMITY BN59-00488A replacement remote control. This remote is designed to function as a direct replacement for various Samsung TV models, ensuring seamless operation without the need for complex setup or programming. Please read this manual thoroughly to understand the features and proper use of your new remote control.

## PRODUCT OVERVIEW

The ALLIMITY BN59-00488A is an infrared remote control designed for ease of use. It features a standard layout with dedicated buttons for power, channel selection, volume control, menu navigation, and various special functions compatible with Samsung televisions.



Figure 1: Front view of the ALLIMITY BN59-00488A remote control. It features a black upper section with number keys and navigation, and

a silver lower section with additional function buttons. The power button is red and located at the top right.

## SETUP: BATTERY INSTALLATION

---

The remote control operates using standard batteries (not included). No programming or pairing is required; simply insert the batteries, and the remote will be ready for use with compatible Samsung TV models.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote control is now ready for immediate use with your compatible Samsung TV.

## OPERATING INSTRUCTIONS

---

This section describes the functions of the various buttons on your ALLIMITY BN59-00488A remote control.

- **POWER** (Red Button): Turns the TV on or off.
- **Number Pad (0-9)**: Directly select channels or input numerical values.
- **-/-**: Toggles between single-digit and double-digit channel input.
- **PRE-CH**: Returns to the previously viewed channel.
- **MUTE**: Mutes or unmutes the TV audio.
- **Volume Up/Down (P)**: Adjusts the volume level.
- **Channel Up/Down (P)**: Changes the TV channel.
- **MENU**: Opens the TV's main menu.
- **TTX/MIX**: Activates or deactivates Teletext mode, or mixes Teletext with TV picture.
- **SOURCE**: Selects the input source (e.g., HDMI, AV, Component).
- **INFO**: Displays information about the current program or input.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **ENTER**: Confirms a selection or enters a menu item.
- **EXIT**: Exits the current menu or function.
- **DUAL I-II**: Selects dual audio or stereo/mono sound options.
- **S.MODE**: Selects sound modes (e.g., Standard, Music, Movie).
- **AUTO PROG. ADD/DEL**: Initiates automatic channel programming or adds/deletes channels.
- **P.SIZE**: Adjusts the picture size or aspect ratio.
- **STILL**: Freezes the current image on screen.
- **SLEEP**: Sets the sleep timer for the TV.
- **TV**: Switches to TV mode.
- **PC**: Switches to PC input mode.
- **P.MODE**: Selects picture modes (e.g., Dynamic, Standard, Movie).
- **PIP**: Activates Picture-in-Picture function.

## TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**

- Ensure the batteries are inserted correctly with the proper polarity.
- Replace old batteries with new ones.
- Check for any obstructions between the remote control and the TV's infrared receiver.
- Ensure you are within the effective range (up to 10 meters) and pointing the remote directly at the TV.

- **Specific buttons not working:**

- Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or debris.
- If only certain buttons are unresponsive, it might indicate a hardware issue.

- **TV not compatible:**

- Verify that your TV model is listed as compatible with the BN59-00488A remote control. A list of compatible models is often provided with the product or on the product page.

## SPECIFICATIONS

<b>Brand</b>	ALLIMITY
<b>Model Number</b>	BN59-00488A
<b>Compatible Devices</b>	Samsung TVs including 910MP, 941MW, LE15S51BPXXEC, LE20S51BUXXEH, LE23R32B, LE23R32BX/XEC, LE23R71BXXEC, LE23R71W, LE23T5, LE23T51BX, LE23T51BX/XEH, LE26R31SUXXLEEC, LE26R32, LE26R74BDX, LE27T51BX/XEC, LE27T51BX/XEE, LE32R71BHXXEC, LE32T51BX, LW17M24CXEH, LW20M21C, LW20M21CP, LW20M21CPX, LW20M21CX/XEC, LW20M22C, LW20M22CPXXEC, PS42V6S, VE20EO
<b>Connectivity Technology</b>	Infrared
<b>Special Features</b>	Ergonomic design
<b>Maximum Range</b>	10 Meters
<b>Battery Type</b>	Alkaline (AAA, not included)
<b>Product Dimensions</b>	5 x 0.89 x 19 cm; 60 g

## WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your ALLIMITY BN59-00488A remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty terms and contact information.

