

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [REACHER](#) /

› [REACHER Mini Battery Operated Alarm Clock User Manual](#)

## REACHER Clock-Travel-Mini

# REACHER Mini Battery Operated Alarm Clock User Manual

Model: Clock-Travel-Mini | Brand: REACHER

## INTRODUCTION

Thank you for choosing the REACHER Mini Battery Operated Alarm Clock. This compact and user-friendly digital alarm clock is designed for simplicity and portability, making it ideal for travel, desks, shelves, or bedside tables. It features basic operation for setting time and alarm, a convenient snooze function, a backlight for night viewing, and a display ON/OFF switch to conserve battery life.

## PACKAGE CONTENTS

- REACHER Mini Battery Operated Alarm Clock
- User Manual

## PRODUCT OVERVIEW

Familiarize yourself with the clock's components and controls.

## Front View



Figure 1: Front view of the REACHER Mini Battery Operated Alarm Clock, showing the digital display and compact size.

### Top Controls

# Easy Snooze

## With Large Width Button



Figure 2: Top view of the clock, highlighting the 'H' (Hour), 'SNOOZE/LIGHT', and 'M' (Minute) buttons.

- **H Button:** Used to adjust the hour.
- **M Button:** Used to adjust the minute.
- **SNOOZE/LIGHT Button:** Press to activate backlight for 5 seconds or to snooze a sounding alarm.

### Rear Controls and Battery Compartment



## 2\*AAA Batteries Operated (Not included)

Figure 3: Rear view of the clock, showing the battery compartment and various setting buttons.

- **12/24HR Button:** Toggles between 12-hour and 24-hour time formats.
- **TIME Button:** Used to enter time setting mode.
- **ALARM Button:** Used to enter alarm setting mode.
- **DISPLAY ON/OFF Switch:** Slide switch to turn the display on or off to save battery.

### SETUP

#### Battery Installation

1. Open the battery compartment cover located on the back of the clock.
2. Insert 2 AAA batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

#### Initial Time Setting

1. Press and hold the **TIME** button on the back of the clock until the hour digits begin to flash.
2. Use the **H** button on the top to adjust the hour.
3. Press the **TIME** button again, and the minute digits will flash.
4. Use the **M** button on the top to adjust the minutes.

5. Press the **TIME** button once more to confirm and exit time setting mode.

## OPERATING INSTRUCTIONS

---

### Setting the Alarm

1. Press and hold the **ALARM** button on the back of the clock until the alarm hour digits begin to flash. An alarm icon will appear on the display.
2. Use the **H** button on the top to adjust the alarm hour.
3. Press the **ALARM** button again, and the alarm minute digits will flash.
4. Use the **M** button on the top to adjust the alarm minutes.
5. Press the **ALARM** button once more to confirm and exit alarm setting mode. The alarm is now set and active.

### Activating/Deactivating the Alarm

- To turn the alarm ON or OFF, simply press the **ALARM** button briefly. The alarm icon on the display indicates if the alarm is active.

### Snooze Function

- When the alarm sounds, press the large **SNOOZE/LIGHT** button on the top of the clock to activate the snooze function. The alarm will pause for approximately 5 minutes and then sound again.

### Backlight Activation

# Light for Night Energy saving and not disturbing you



Press to get 5 seconds backlight

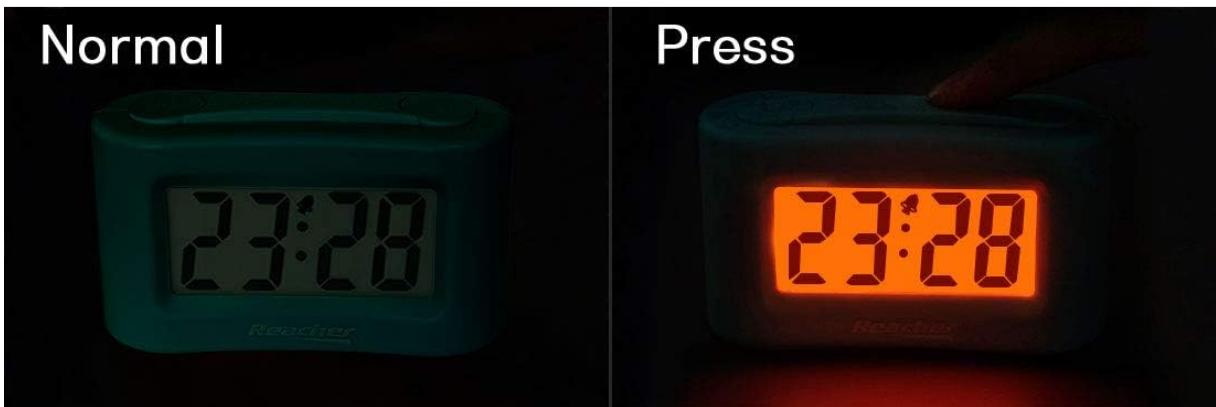


Figure 4: The clock display with its backlight activated for improved visibility in low light conditions.

- To temporarily illuminate the display, press the **SNOOZE/LIGHT** button on the top of the clock. The backlight will activate for approximately 5 seconds.

**Display ON/OFF**

# Save on battery/Avoid misoperation

Time is kept and hassle-free reset  
when arriving at destination

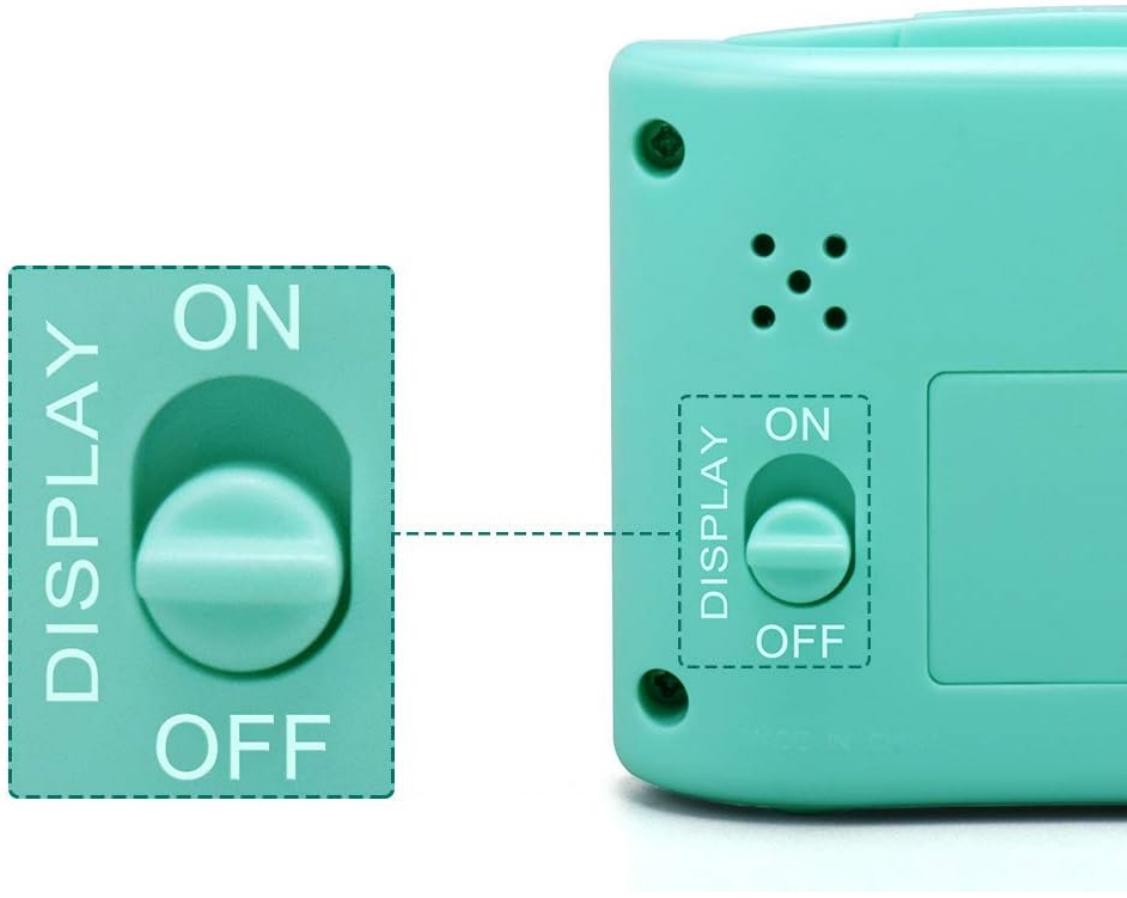


Figure 5: Side view of the clock, illustrating the physical switch to turn the display ON or OFF.

- To conserve battery power, slide the **DISPLAY ON/OFF** switch on the back of the clock to the 'OFF' position. The timekeeping will continue internally, but the display will be blank. Slide to 'ON' to reactivate the display.

## 12/24 Hour Format

- Press the **12/24HR** button on the back of the clock to switch between 12-hour (with AM/PM indicator) and 24-hour time formats.

## Maintenance

- Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Battery Replacement:** Replace batteries when the display dims or the clock functions become unreliable. Always replace both batteries at the same time.
- Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

- Display is blank:** Check if the DISPLAY ON/OFF switch on the back is in the 'ON' position. Ensure batteries are correctly installed and not depleted.
- Alarm not sounding:** Verify that the alarm is set and activated (alarm icon visible). Ensure batteries are not low.

- **Incorrect time:** Reset the time following the 'Initial Time Setting' instructions.

## SPECIFICATIONS



Figure 6: Image illustrating the compact dimensions of the alarm clock.

<b>Brand</b>	REACHER
<b>Model Number</b>	Clock-Travel-Mini
<b>Color</b>	Mint Green
<b>Display Type</b>	Digital
<b>Special Feature</b>	Alarm, Snooze, Backlight, Display ON/OFF
<b>Product Dimensions</b>	2.4"W x 4.1"H
<b>Item Weight</b>	0.8 ounces (22.68 g)
<b>Power Source</b>	Battery Powered (2 AAA batteries required, not included)
<b>Frame Material</b>	Acrylonitrile Butadiene Styrene

## WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact REACHER customer service directly. Contact details are typically provided on the product packaging or the manufacturer's official website.