

Snakebyte SB912726

Snakebyte Wireless Gamepad Controller for PlayStation PS4 Instruction Manual

Brand: Snakebyte | **Model:** SB912726

1. INTRODUCTION

The Snakebyte GAME:PAD 4S Wireless controller is designed to provide a seamless and immersive gaming experience on your PlayStation 4 console. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your new gamepad.



Figure 1: Front view of the Snakebyte GAME:PAD 4S Wireless Controller in blue camo.

2. KEY FEATURES

- **Lag-Free Wireless Connectivity:** Utilizes Bluetooth technology for a responsive and uninterrupted gaming experience on Sony PlayStation 4.
- **Immersive Dual Vibration:** Equipped with dual vibration motors that provide haptic feedback, making in-game actions feel more realistic.
- **Precise Control:** Features twin analog joysticks and responsive trigger buttons for accurate and precise gameplay.
- **Integrated Audio Jack:** Includes a 3.5mm headphone jack for connecting headsets, allowing for in-game audio and communication.
- **LED Status Home Button:** A central LED-illuminated home button indicates controller status.
- **Ergonomic Design:** Crafted for comfort during extended gaming sessions, reducing hand fatigue.
- **Motion Sensors:** Built-in accelerometer and gyroscope enable motion-sensing gameplay for enhanced immersion.

3. SETUP AND CONNECTION

3.1 Initial Pairing with PlayStation 4

1. Ensure your PlayStation 4 console is powered on.
2. Connect the Snakebyte GAME:PAD 4S Wireless controller to the PS4 using the supplied micro-USB cable.
3. Press the PS button (Home button) on the controller. The controller will automatically pair with the console.
4. Once paired, you can disconnect the USB cable, and the controller will maintain its wireless connection.



Figure 2: Controller connected via micro-USB for initial pairing and charging.

3.2 Charging the Controller

To charge the controller, connect it to your PlayStation 4 console or a USB power adapter using the provided micro-USB cable. The LED on the home button will indicate charging status. A full charge typically takes approximately 2 hours and provides about 7-8 hours of playtime.



4. OPERATING INSTRUCTIONS

4.1 Button Layout and Functions

The controller features a familiar layout with dual analog sticks, a D-pad, action buttons (Triangle, Square, Circle, Cross), Share, Options, and a Home button. The action buttons are labeled with their names rather than symbols, but are color-coded similarly to standard PlayStation controllers.



Figure 4: Angled view highlighting the button layout and ergonomic design.

4.2 Touchpad and Motion Sensors

The integrated touchpad is fully functional and can be used for navigation and specific in-game interactions. The highly sensitive built-in accelerometer and gyroscope detect motion, tilt, and rotation, providing an immersive gaming experience for titles that utilize motion controls.

4.3 Audio Jack

Connect any standard 3.5mm headset to the controller's audio jack for private listening of game audio and voice chat. Ensure your headset is properly inserted for optimal sound quality.

5. CARE AND MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.

- Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.
- Do not attempt to disassemble the controller, as this will void the warranty.

6. TROUBLESHOOTING

6.1 Connection Issues

- If the controller does not connect, ensure it is fully charged.
- Try re-pairing the controller by connecting it via USB cable and pressing the PS button.
- Ensure there are no strong interferences (e.g., other Bluetooth devices, Wi-Fi routers) nearby.

6.2 Button Unresponsiveness

- If buttons are unresponsive, try resetting the controller. Locate the small reset button on the back of the controller (often near the L2 shoulder button) and press it with a thin object like a paperclip.
- Ensure the controller's firmware is up to date (check the Snakebyte support website for updates).

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Snakebyte
Model Name	GAME:PAD 4 S WIRELESS
Item Model Number	SB912726
Compatible Devices	Playstation 4
Connectivity Technology	Wireless (Bluetooth)
Controller Type	Gamepad
Power Source	Battery Powered (1 Lithium Polymer battery included)
Voltage	3.7 Volts
Item Weight	11.2 ounces
Product Dimensions (LxWxH)	4.53 x 2.95 x 6.1 inches
Color	Blue Camo

8. WARRANTY AND SUPPORT

The Snakebyte GAME:PAD 4S Wireless controller is covered by a **5-Year Limited Manufacturer Warranty**. For warranty claims or technical support, please refer to the contact information provided on the product packaging or visit the official Snakebyte website.

