

[Manuals.plus](#) /

› [Trexonic](#) /

› Trexonic 14.1" Portable DVD Player User Manual

Trexonic TRX-1580

Trexonic 14.1" Portable DVD Player

USER MANUAL

Product Overview

The Trexonic 14.1" Portable DVD Player provides versatile entertainment on the go. Featuring a high-resolution TFT-LCD screen that swivels 2700 and tilts 1800, it offers optimal viewing angles. This device supports various media formats via DVD, USB, and SD card inputs, ensuring a wide range of compatibility for your digital files. Its built-in rechargeable battery allows for extended use without constant power connection, and the included car adapter enables convenient charging during travel.



Figure 1: Trexonic 14.1" Portable DVD Player with included remote control.

Package Contents

Verify that all items listed below are included in your package:

- Trexonic 14.1" Portable DVD Player
- Remote Control
- Earphone
- Car Charger
- AV Cable
- Power Adapter
- User Manual

PACKAGE CONTENT



DVD PLAYER



**REMOTE
CONTROL**



**USER
MANUAL**



EARPHONES



**CAR
CHARGER**



A/V CABLE



**POWER
ADAPTER**

Figure 2: Contents of the product package.

Product Features and Components

Familiarize yourself with the key features and input/output ports of your portable DVD player.



Figure 3: The screen swivels 180° and folds flat, allowing for versatile viewing angles or use as a tablet-like device.



Figure 4: Side view detailing the various input and output ports, including USB, SD card, earphone, AV, and DC power inputs.

Setup

Charging the Battery

Before first use, fully charge the portable DVD player's built-in Li-ion 7.4V/2000mAh battery. Connect the included power adapter to the DC input port on the device and plug it into a standard AC outlet (100-240V). The charging indicator light will typically illuminate during charging and turn off or change color when fully charged. For on-the-go charging, use the provided car adapter by plugging it into your vehicle's 12V power outlet.

Powering On/Off

Locate the Power Switch on the side of the device. Slide the switch to the 'ON' position to power on the player. To power off, slide the switch to the 'OFF' position.

Operating Instructions

Playing Discs (DVD/CD)

1. Open the disc cover gently.
2. Place a compatible disc (DVD, DVD1R, DVD1RW, VCD, CD1R, CD1RW) onto the spindle with the label side facing up.

3. Gently press the disc down until it clicks into place.
4. Close the disc cover. The player will automatically detect and begin playing the disc.
5. Use the control buttons on the player or the remote control for playback functions (Play, Pause, Stop, Skip, Fast Forward/Rewind).

Playing Media from USB/SD Card

1. Insert a USB flash drive into the USB Drive Slot or an SD card into the Memory Card Input.
2. The player should automatically detect the media. If not, navigate to the input selection menu using the 'MODE' button on the player or remote.
3. Select the desired media type (Music, Images, Videos) and browse your files.
4. Press 'Play' to start playback.



EBOOK



MUSIC



IMAGES



VIDEOS



SUPPORTS

**DVD/DVD±R/DVD±RW/
VCD/CD±R/CD±RW**



Figure 5: Supported media formats include DVD, VCD, CD, MP3, MP4, JPEG, DIVX, RM, and RMVB, playable from discs, USB drives, or SD cards.

Connecting to External Devices (TV, Speakers)

The player features AV Input and AV Output ports, allowing connection to external displays or audio systems.

- **To an External Display (TV/Projector):** Use the included AV cable. Connect one end to the AV Output port on the portable DVD player and the other end to the AV Input ports (typically yellow for video, red/white for audio) on your television or projector. Select the corresponding AV input on your external display.
- **To External Speakers:** Connect the AV Output audio cables (red/white) to the audio input of your external speakers or amplifier. Alternatively, use the Earphones Input for personal listening with headphones.



Figure 6: The portable DVD player can easily connect to external equipment like TVs, speakers, or projectors using the included A/V cable.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use liquid cleaners or abrasive materials.

- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the device for an extended period, charge it to about 50% and recharge every few months.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and excessive dust.

Troubleshooting

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; Power adapter not connected; Power switch is OFF.	Charge the battery; Connect the power adapter; Slide power switch to ON.
Disc does not play.	Disc is dirty or scratched; Disc is inserted incorrectly; Incompatible disc format.	Clean the disc; Reinsert disc correctly; Ensure disc format is supported (DVD, VCD, CD).
No sound.	Volume is too low; Mute is on; External speakers not connected properly.	Increase volume; Check mute setting; Verify external speaker connections.
No picture on external TV.	AV cable not connected properly; Incorrect TV input selected.	Check AV cable connections; Select correct AV input on TV.

Specifications

Feature	Detail
Model Number	TRX-1580
Screen Size	14.1" TFT-LCD
Screen Resolution	1280 x 800
Battery	Li-ion 7.4V/2000mAh
Power Source	AC 100-240V / DC 12V 1.5A
Supported Disc Formats	DVD/DVD1R/DVD1RW/VCD/CD1R/CD1RW
Supported Media Formats	MP3/MP4/JPEG/DIVX/RM/RMVB
Interface	SD / USB / Earphones Input / AV Input / AV Output / DC Input
Dimensions	16 x 11 x 3 inches
Weight	3.2 pounds

Warranty and Support

For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Trexonic website. Contact details for customer service are typically provided in the full user manual or on the manufacturer's support page.

© 2024 Trexonic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question