

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SHOPEE](#) /

› [SHOPEE SP-250 Umbrella Flash Light Stand User Manual](#)

## SHOPEE 9FT LIGHT STAND WITH BAG

# SHOPEE SP-250 Umbrella Flash Light Stand User Manual

Model: 9FT LIGHT STAND WITH BAG

## INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your SHOPEE SP-250 Umbrella Flash Light Stand. Please read this manual thoroughly before initial setup and operation to ensure proper functionality and longevity of the product. This light stand is designed for photography and video studio lighting applications, offering stable support for various lighting equipment.

## PRODUCT FEATURES

- Constructed from durable aluminum alloy for exceptional strength.
- Lightweight and easily collapsible for simple storage and transport.
- Adjustable height, with a folded height of 3 feet and a maximum height of 7.5 feet.
- Suitable for both studio and on-site photography and video use.
- Includes a convenient carry bag for portability.

## PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x SHOPEE SP-250 Light Stand
- 1 x Carry Bag



Image: The SHOPEE SP-250 Light Stand in its extended position, alongside its black carry bag.

## SETUP INSTRUCTIONS

- 1. Unpack the Stand:** Carefully remove the light stand and carry bag from its packaging.
- 2. Extend the Legs:** Place the stand on a flat, stable surface. Gently pull the legs outwards until they are fully extended and locked into position, forming a stable tripod base. Ensure the leg braces are fully spread.
- 3. Adjust Height:** Loosen the locking knobs on each section of the stand. Extend the desired sections to achieve the required height. Once the desired height is reached, securely tighten all locking knobs to prevent accidental collapse.

**4. Mount Equipment:** The top stud of the stand is designed to accept various lighting equipment such as flash units, continuous lights, or umbrella holders. Carefully attach your equipment to the stud and secure it.



Image: Detailed view showing the top mounting stud for equipment and the sturdy tripod base of the light stand.

## OPERATING THE LIGHT STAND

The SHOPEE SP-250 light stand is designed for straightforward operation. Follow these guidelines for safe and effective use:

- Stability First:** Always ensure the stand's legs are fully extended and locked before mounting any equipment. Uneven surfaces can compromise stability; use sandbags or weights on the legs if necessary, especially with heavy equipment or in windy conditions.
- Load Capacity:** Do not exceed the recommended load capacity of the stand. Overloading can lead to instability and damage.
- Height Adjustment:** When adjusting the height, always loosen the locking knobs sufficiently before extending or retracting sections. Re-tighten firmly once the desired height is set.
- Cable Management:** Route power cables and sync cords safely to prevent tripping hazards and accidental dislodging of

equipment.



Image: Multiple SHOPEE light stands set up with umbrellas and other lighting accessories, demonstrating typical usage.

## MAINTENANCE AND CARE

Proper maintenance will extend the life of your SHOPEE light stand:

- Cleaning:** Wipe the stand with a soft, dry cloth after each use to remove dust and dirt. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying.
- Lubrication:** Periodically apply a small amount of silicone-based lubricant to the moving parts and locking mechanisms to ensure smooth operation. Avoid oil-based lubricants as they can attract dust.
- Storage:** When not in use, collapse the stand fully and store it in its provided carry bag in a dry, cool place, away from direct sunlight and extreme temperatures.
- Inspection:** Regularly inspect the stand for any signs of wear, damage, or loose parts. Do not use the stand if any components are damaged.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable.	Legs not fully extended or locked; uneven surface; overloaded.	Ensure legs are fully extended and locking mechanisms are engaged. Move to a flat surface or use sandbags/weights. Reduce load.
Sections difficult to extend/retract.	Locking knobs too tight; dirt/grime in mechanism; lack of lubrication.	Loosen locking knobs completely. Clean sections and apply silicone lubricant.

Problem	Possible Cause	Solution
Equipment not securing properly to top stud.	Equipment not compatible; stud threads damaged.	Verify equipment compatibility. Inspect stud for damage. Contact customer support if damaged.

## SPECIFICATIONS

Feature	Detail
Model Number	9FT LIGHT STAND WITH BAG
Brand	SHOPEE
Material	Aluminum Alloy
Folded Height	Approx. 3 FT (91 cm)
Maximum Height	Approx. 7.5 FT (228 cm)
Product Dimensions (Packed)	10 x 10 x 10 cm
Item Weight	1 kg 830 g

## WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please contact SHOPEE customer service.

**Manufacturer:** SHOPEE, SHOPPE

**Customer Care:** [+91 9319770654](tel:+919319770654)

Please have your product model number (9FT LIGHT STAND WITH BAG) and purchase details ready when contacting support.

© 2024 SHOPEE. All rights reserved.

## Related Documents - 9FT LIGHT STAND WITH BAG

	<p><a href="#">Shopee Affiliate Program: Account Set-Up Guide</a></p> <p>A comprehensive guide detailing the steps to register and set up an account for the Shopee Affiliate Program, including personal information submission and social media integration.</p>
	<p><a href="#">Shopee Wireless Earbuds Price and Product Comparison</a></p> <p>Compare prices, discounts, and ratings for a variety of wireless earbuds available on Shopee. Includes product details, seller information, and direct links. Data compiled as of February 2025.</p>

