

Behringer MX882

Behringer ULTRALINK PRO MX882 V2 User Manual

Ultra-Flexible 8-Channel Splitter/Mixer

[Introduction](#)[Safety Instructions](#)[Features](#)[Setup](#)[Operation](#)[Connections](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. INTRODUCTION

The Behringer ULTRALINK PRO MX882 V2 is an ultra-flexible 8-channel splitter/mixer designed for professional audio applications. This versatile unit can operate independently in either mixer or splitter mode, providing solutions for signal distribution, level matching, and mixing. Its robust design ensures high signal integrity and reliable performance in various live and studio environments.

This manual provides essential information for the safe and efficient operation of your MX882 V2. Please read it thoroughly before use and retain it for future reference.



Figure 1.1: Front view of the Behringer ULTRALINK PRO MX882 V2. This image displays the front panel with all controls and indicators, including input/output level meters, channel level knobs, balance/pan controls, and mode switches.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or damage to the unit, please observe the following safety precautions:

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.

- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. KEY FEATURES

The ULTRALINK PRO MX882 V2 offers a range of features designed for audio signal management:

- Each channel can operate independently in mixer or splitter mode.
- Extremely wide bandwidth for highest signal integrity.
- Usable as a six-in/six-out level matching amplifier or direct injection box.
- Ultra-low noise operation ensures clean audio.
- Versatile 8-channel configuration for various audio routing needs.

4. SETUP

4.1 Unpacking

Carefully unpack your MX882 V2 and inspect it for any signs of damage that may have occurred during transit. If damage is found, contact your dealer immediately. Retain the packing materials for future shipping.

4.2 Rack Mounting

The MX882 V2 is designed for standard 19-inch rack mounting. Ensure adequate ventilation around the unit to prevent overheating. Do not block the ventilation openings.

4.3 Power Connection

Connect the supplied AC power cord to the rear panel AC INLET and then to a suitable power outlet. Ensure the power switch on the front panel is in the OFF position before connecting. The unit operates on standard line voltage as indicated on the rear panel.



Figure 4.1: Rear panel of the Behringer ULTRALINK PRO MX882 V2, showing the AC power inlet and various audio input/output connectors.

5. OPERATION

5.1 Front Panel Controls and Indicators

The front panel of the MX882 V2 provides all necessary controls for configuring and monitoring your audio signals.



Figure 5.1: Detailed view of the MX882 V2 front panel, highlighting individual channel controls and LED meters.

- **INPUT LEVEL / OUTPUT LEVEL LEDs:** These multi-segment LED meters display the signal level for the main input/output and individual channels. Aim for levels that illuminate green, occasionally touching yellow, to avoid clipping (red).
- **MAIN INPUT LEVEL:** Adjusts the overall input level when operating in mixer mode.
- **MAIN OUTPUT LEVEL:** Adjusts the overall output level when operating in mixer mode.
- **CHANNEL LEVEL:** Controls the output level for each individual channel.
- **BALANCE / PAN:** In mixer mode, this knob controls the stereo pan position for the channel. In splitter mode, it controls the balance between the two outputs for that channel.
- **SPLIT / MIX Switch:** This button toggles the operating mode for each channel. When engaged (LED lit), the channel operates in **Splitter Mode**. When disengaged, it operates in **Mixer Mode**.
- **POWER Switch:** Turns the unit on or off.

5.2 Mixer Mode (Channels 1-6)

In Mixer Mode, the MX882 V2 functions as a 6-input, 2-output line mixer. Each of the six channels can accept an input signal, which is then mixed down to the main stereo outputs (MAIN OUT L/R).

- Ensure the **SPLIT / MIX** switch for the desired channel is disengaged (LED off).
- Connect your audio source to the corresponding **CH IN** (1-6) on the rear panel.

- Adjust the **CHANNEL LEVEL** knob to set the individual channel's volume.
- Use the **BALANCE / PAN** knob to position the channel's signal within the stereo field of the main outputs.
- Monitor the **INPUT LEVEL** and **OUTPUT LEVEL** LEDs to prevent clipping.

5.3 Splitter Mode (Channels 1-6)

In Splitter Mode, the MX882 V2 takes a single input signal and distributes it to two separate outputs for each channel. This is useful for sending a signal to multiple destinations, such as a main PA system and a monitor mix.

- Engage the **SPLIT / MIX** switch for the desired channel (LED on).
- Connect your audio source to the corresponding **CH IN** (1-6) on the rear panel.
- The input signal will be routed to both **CH OUT** (1-6) and **MAIN OUT L/R** (if connected).
- The **BALANCE / PAN** knob now functions as a balance control, allowing you to adjust the relative levels of the two outputs for that channel.
- Adjust the **CHANNEL LEVEL** knob to control the overall output level for the split signal.

6. CONNECTIONS

The rear panel of the MX882 V2 features various input and output connectors. Always ensure the unit is powered off before making or changing connections.



Figure 6.1: Rear panel showing all input and output connectors, including XLR and 1/4" TRS jacks.

- **AC INLET:** Standard IEC connector for the power cord.
- **MAIN IN L/R:** Balanced XLR inputs for the main stereo signal when in mixer mode.
- **MAIN OUT L/R:** Balanced XLR outputs for the main stereo signal. These outputs carry the mixed signal in mixer mode or the split signal in splitter mode.
- **CH 1-6 IN:** Balanced XLR inputs for individual channels.
- **CH 1-6 OUT:** Balanced XLR outputs for individual channels. These outputs carry the split signal in splitter mode.
- **CH 7-8 IN / OUT:** These channels feature 1/4" TRS inputs and outputs, providing additional flexibility for line-level signals. They can also operate in mixer or splitter mode.

7. MAINTENANCE

The Behringer ULTRALINK PRO MX882 V2 requires minimal maintenance to ensure long-term performance.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or solvents, as they may damage the finish or internal components.
- **Ventilation:** Ensure that the ventilation openings are not obstructed. Proper airflow is crucial for preventing overheating.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a dry, dust-free environment.
- **Servicing:** All servicing should be performed by qualified service personnel. Do not attempt to open the unit or perform repairs yourself.

8. TROUBLESHOOTING

If you encounter issues with your MX882 V2, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No sound output	Power off; incorrect connections; level knobs turned down; incorrect mode.	Check power switch and cable; verify all audio cables are correctly connected; ensure all relevant LEVEL knobs are up; confirm correct SPLIT/MIX mode for each channel.
Distorted sound	Input/output levels too high (clipping); faulty cables.	Reduce input/output levels to prevent red LED illumination; check and replace cables if necessary.
Hum or noise	Ground loop; faulty cables; interference from other equipment.	Ensure all equipment is properly grounded; use balanced cables where possible; try isolating the MX882 V2 from other electrical devices.
Channel not working	Incorrect mode; faulty cable; channel level down.	Check SPLIT/MIX switch for the channel; test with a different cable; ensure channel LEVEL knob is adjusted.

If the problem persists after trying these steps, please contact Behringer customer support or a qualified service technician.

9. TECHNICAL SPECIFICATIONS

Specification	Value
Model	MX882
Number of Channels	8
Connectivity Technology	XLR, 1/4" TRS
Item Weight	3.74 pounds (1.7 Kilograms)




Specification	Value
Product Dimensions	19.02 x 5.87 x 1.73 inches
Power Source	Corded Electric
Date First Available	October 18, 2018



10. WARRANTY AND SUPPORT

For detailed warranty information and terms and conditions, please refer to the official Behringer website or the warranty card included with your product. Technical support is available through authorized Behringer service centers and online resources.

You can find further assistance and contact information on the [Behringer Store on Amazon](#) or the official Behringer website.


Related Documents - MX882

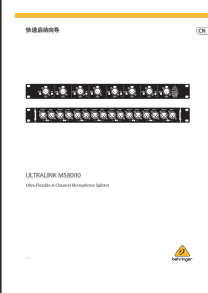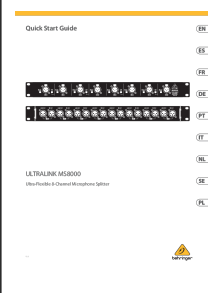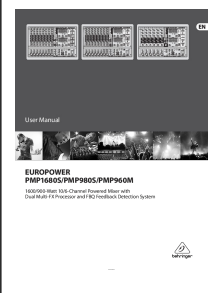	Behringer ULTRALINK MS8000 Ultra-Flexible 8-Channel Microphone Splitter Quick Start Guide This guide provides quick start instructions for the Behringer ULTRALINK MS8000, an ultra-flexible 8-channel microphone splitter. It covers safety precautions, connection applications, controls, specifications, and important information for users.
	Behringer ULTRALINK MS8000 Quick Start Guide Get started quickly with the Behringer ULTRALINK MS8000 Ultra-Flexible 8-Channel Microphone Splitter. This guide provides essential setup and operational information.
	Behringer EUROPOWER PMP1680S/PMP980S/PMP960M User Manual: Powered Mixer Guide Comprehensive user manual for the Behringer EUROPOWER PMP1680S, PMP980S, and PMP960M 10/6-Channel Powered Mixers. Covers features, controls, installation, wiring, specifications, and safety instructions.

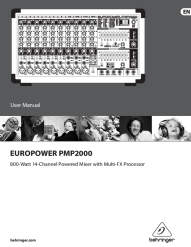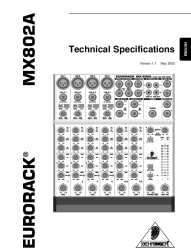	Behringer EUROPOWER PMP2000 User Manual: 800W 14-Channel Powered Mixer User manual for the Behringer EUROPOWER PMP2000, an 800-Watt 14-Channel Powered Mixer with Multi-FX Processor. Covers features, controls, installation, safety, specifications, and wiring examples.
	BEHRINGER EURORACK MX802A Technical Specifications Detailed technical specifications for the BEHRINGER EURORACK MX802A 8-Channel Mic/Line Mixer, including features, block diagram, and electrical/physical data.
	Behringer EUROPOWER PMP2000 800-Watt 14-Channel Powered Mixer with Multi-FX Processor - User Manual Comprehensive user manual for the Behringer EUROPOWER PMP2000, an 800-Watt, 14-Channel Powered Mixer with Multi-FX Processor. This guide covers safety information, operation of front and rear panels, effects processor, setup, connection examples, and detailed technical specifications.

Documents - Behringer – MX882

	[pdf] User Manual Instructions Warranty MX882 P0056 BEHRINGER ULTRALINK PRO User Manual Important Safety Instructions LEGAL DISCLAIMER Terminals marked with this symbol carry electrical current of 9a9530766df0bc7474e520eb6e7dd0d3 fotosklad ru upload iblock 9a9 User Manual ULTRALINK PRO MX882 Ultra-Flexible 8-Channel Splitter/Mixer 2 ULTRALINK PRO MX882 User Manual Table of Contents Important Safety Instructions..... 3 Legal Disclaimer..... 3 Limited warranty..... lang:en score:48 filesize: 1.65 M page_count: 12 document date: 2017-06-27
---	---

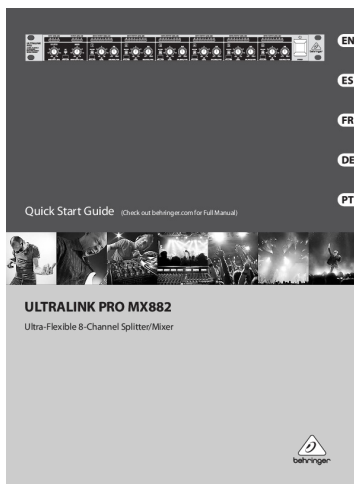 


[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

ULTRALINK PRO MX882 Quick Start Guide Check out behringer for Full Manual Ultra Flexible 8 Channel Splitter Mixer QSG proavl net 2020 10 |||

Quick Start Guide Check out behringer.com for Full Manual ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2 ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use ...

 lang:en score:47 filesize: 1.1 M page_count: 11 document date: 2020-10-14

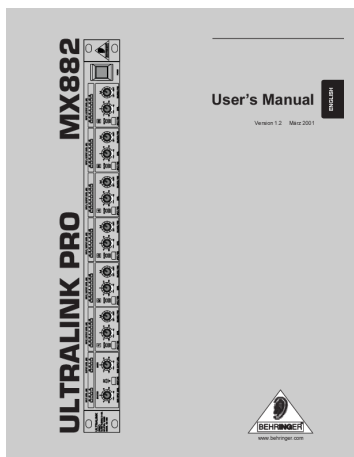

[\[pdf\]](#) User Manual Instructions

Provided by ManualsAndMore Download User Manual Behringer MX882 manualsandmore |||

ULTRALINK PRO **MX882** ENGLISH Users Manual Version 1.2 Mrz 2001

www.behringer.com ULTRALINK PRO **MX882** SAFETY INSTRUCTIONS CAUTION:

To reduce the risk of electrical shock, do not remove the cover or back . No user serviceable parts inside; refer servicing to qualified personnel. WARNING: To reduce...

lang:en score:43 filesize: 1.24 M page_count: 16 document date: 2019-07-23



[\[pdf\]](#) Quick Start Guide Instructions Guide

QSG BE 0602 AAG MX882 V2 WWcdn mediavalet aunsz musictribe PEivYKa68UqN0twJcunpHA

QU4X4tPjBk26GMk0YeYxKA Original WW Behringer mx882 v2Линейный многоканальный

предусилитель Rmmedia ruQSG WWQSG ||| ||| Quick Start Guide ULTRALINK PRO MX882 Ultra-

Flexible 8-Channel Splitter/Mixer V 5.0 2 ULTRALINK PRO MX882 Important Safety Instructions

 
Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of

Quick Start Guide ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V

5.0 2 ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with

this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speak...

lang:en score:43 filesize: 897.43 K page_count: 15 document date: 2023-04-26

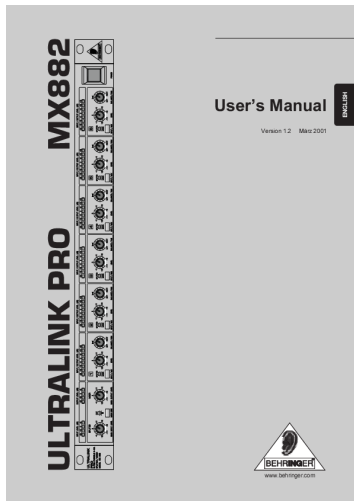

[\[pdf\]](#) User Manual Instructions

 
DATA MANFULL MX882 ENG Rev E p65 Bathke Parts Express g ~~~ ~~~ !! 4 utf 8 248 6306 behringer
mx882 manual 42611 parts express pedocs manuals

ULTRALINK PRO **MX882** ENGLISH Users Manual Version 1.2 Mrz 2001

www.behringer.com ULTRALINK PRO **MX882** SAFETY INSTRUCTIONS CAUTION:

To reduce the risk of electrical shock, do not remove the cover or back . No user
serviceable parts inside; refer servicing to qualified personnel. WARNING: To
reduce...

lang:en **score:41** filesize: 886.38 K page_count: 16 document date: 2020-02-07

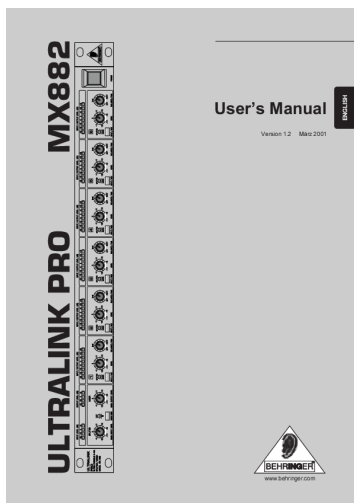

[\[pdf\]](#) User Manual Instructions


DATA MANFULL MX882 ENG Rev E p65 Bathke MANUALBEHRINGER Manualshandelima net
studiogear manuals Behringer BEHRINGER |||

ULTRALINK PRO **MX882** ENGLISH Users Manual Version 1.2 Mrz 2001

www.behringer.com ULTRALINK PRO **MX882** SAFETY INSTRUCTIONS CAUTION:

To reduce the risk of electrical shock, do not remove the cover or back . No user
serviceable parts inside; refer servicing to qualified personnel. WARNING: To
reduce...

 lang:en **score:41** filesize: 1.21 M page_count: 16 document date: 2001-03-15

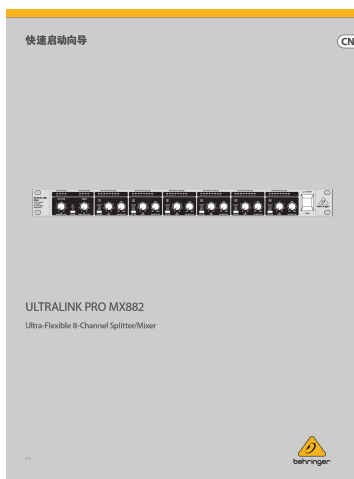

[\[pdf\]](#) Quick Start Guide Guide Warranty

Quick Start Guide Chinese Analog Rack Mixer Behringer MX882 V2 QSG BE P0CCU CN mediadl
musictribe media PLM data docs |||

ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V 3.0 2 ULTRALINK
PRO **MX882**, TS , , , , , , 1. 2. 3. 4. 5. 6. 7. 8. , , 9. , 10. , , 11. 12. , , , , 13. , 14. , , , ,
15. 16. , 17...


lang:fr **score:41** filesize: 975.03 K page_count: 5 document date: 2021-10-21



[\[pdf\]](#) User Manual Instructions Declaration of Conformity

Provided by ManualsAndMore Download User Manual Behringer Ultralink Pro MX882 manualsandmore |||
ULTRALINK PRO **MX882** Users Manual E Bedienungsanleitung D Version 1.0 July 1998 www.behringer.de 1 EG-Declaration of Conformity Spezielle Studiotechnik GmbH acc. to the Directives 89/336/EEG and 73/23/EEG We, BEHRINGER INTERNATIONAL GmbH Hanns-Martin-Schleyer-Strae 4 D - 47877 Willich Name and ...

 lang:en score:41 filesize: 1.22 M page_count: 17 document date: 2019-07-23

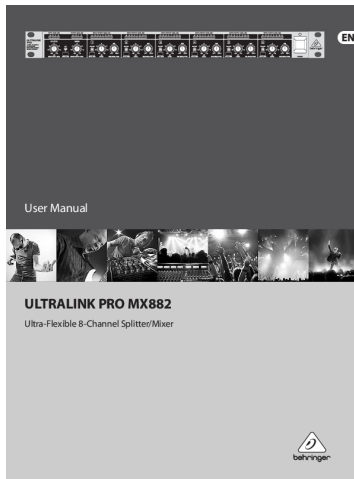


[\[pdf\]](#) User Manual Owner's Manual Instructions Warranty

Behringer MX882 Proavl Owner Manual proavl net 2020 10 |||
User Manual ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2
ULTRALINK PRO **MX882** User Manual Table of Contents Important Safety Instructions..... 3 Legal

Disclaimer..... 3 Limited warranty.....

 lang:en score:41 filesize: 1.56 M page_count: 12 document date: 2020-10-14

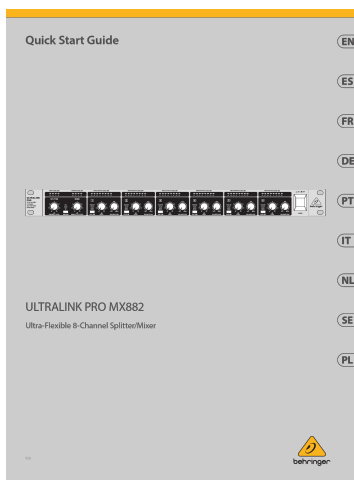


[\[pdf\]](#) Quick Start Guide Instructions Guide

Quick Start Guide All Languages Analog Rack Mixer Behringer MX882 V2 QSG BE P0CCU WW mediadl musictribe media PLM data docs |||

Quick Start Guide ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V 5.0 2 ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speak...

 lang:en score:39 filesize: 1.29 M page_count: 15 document date: 2021-10-25

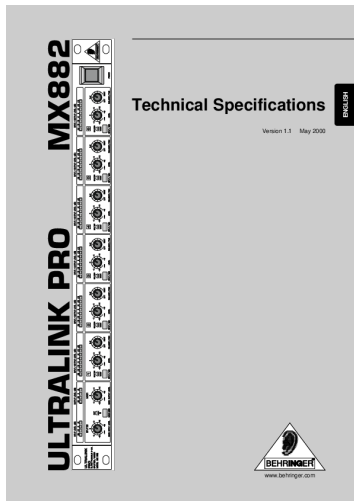


[\[pdf\]](#) Specifications

ULTRALINK PRO MX882 Technical Specifications english Revision B BEHRINGER TECH
 SPECSBEHRINGER ManualsMX882 Specshandelima net studiogear manuals Behringer Specs |||
 ULTRALINK PRO **MX882** ENGLISH Technical Specifications Version 1.1 May 2000
 www.behringer.com **MX882** ULTRALINK PRO Ultra-flexible, multi-purpose 8-channel
 Signal Router for stage and studio applications s Use it as Effects Mixer, for P.A.
 Monitoring, Live Sound Systems, Theaters, Conference Rooms, ...
 lang:en **score:38** filesize: 381.09 K page_count: 5 document date: 2008-08-20




[\[pdf\]](#) User Manual

 DATA MANFULL MX882 GER Rev E p65 Bathke 135348 manual P0056 M images static thomann de
 pics atg atgdata document behringer 80 EN
 ULTRALINK PRO **MX882** DEUTSCH Bedienungsanleitung Version 1.2 Mrz 2001
 www.behringer.com ULTRALINK PRO **MX882** SICHERHEITSHINWEISE ACHTUNG:
 Um eine Gefhrdung durch Stromschlag auszuschließen, darf die Gerteabdeckung bzw.
 Gerterckwand nicht abgenommen werden. Im Innern des Gerts befinden sich keine
 V...
 lang:de **score:37** filesize: 1.41 M page_count: 16 document date: 2001-03-15

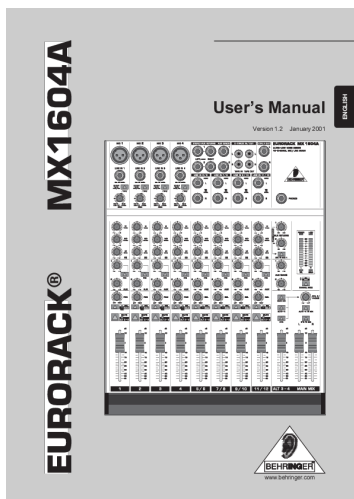

[\[pdf\]](#) User Manual Instructions

DATA MANFULL MX1604A ENG Rev H p65 p jannusch nance instructions in the accompanying
 literature Read manual SAFETY INSTRUCTIONS CAUTION To reduce risk of electrical shock do not
 remove cover or back No user serviceable parts ~~~~~ ! ~ Unbalanced use mono 1 4 jack plugs Ring
 Balanced stereo with XLR connectors filename* mx1604a p0087 m en 8849400594462 Behringer Manual
 P0087 M EN studio community bose ziiw76728 attachments PortablePA 54526 178 synthmanuals
 manuals behringer mediadl musictribe media sys master h83 h49 mz unic ac cy 2015 12 80 music group
 PLM data docs User |||
 EURORACK MX1604A ENGLISH Users Manual Version 1.2 January 2001
 www.behringer.com EURORACK MX1604A ... ge console, the BEHRINGER
 EURODESK MX9000. Later we will see how adding the BEHRINGER ULTRALINK
 PRO **MX882** to your system can inexpensively expand the capacity and flexibility of
 you mixing power even ...
 lang:en **score:37** filesize: 1.58 M page_count: 27 document date: 2001-08-20

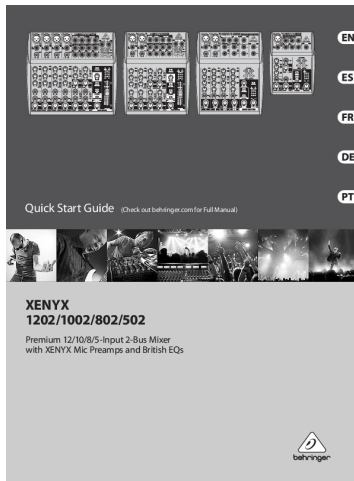 


[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX 1202 1002 802 502 BEHRINGER Recordcase de Quick Start Guide Check out behringer for Full Manual Premium 12 10 8 5 Input 2 Bus Mixer with Mic Preamps and British EQs Behringer DE EN ES FR PT recordcase media 39 3e f7

Quick Start Guide Check out behringer.com for Full Manual XENYX 1202/1002/802/502 Premium 12/10/8/ ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. 19 2-TRACK OUTPUT These connectors are wired in parallel with the MAIN OU...

 lang:en **score:35** filesize: 3.67 M page_count: 17 document date: 2019-07-05

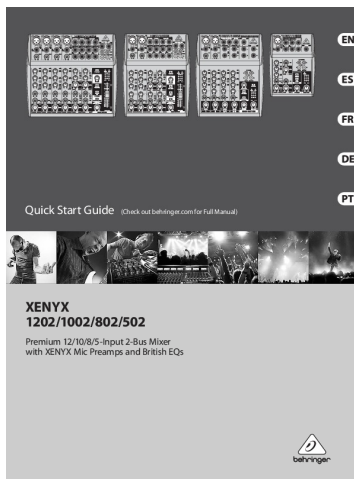


[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX 1202 1002 802 502 BEHRINGER recordcase de Quick Start Guide Check out behringer for Full Manual Premium 12 10 8 5 Input 2 Bus Mixer with Mic Preamps and British EQs Behringer Xenyx DE EN FR ES PT media c3 e0 9e |||

Quick Start Guide Check out behringer.com for Full Manual XENYX 1202/1002/802/502 Premium 12/10/8/ ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. 19 2-TRACK OUTPUT These connectors are wired in parallel with the MAIN OU...

 lang:en **score:35** filesize: 3.67 M page_count: 17 document date: 2019-05-23

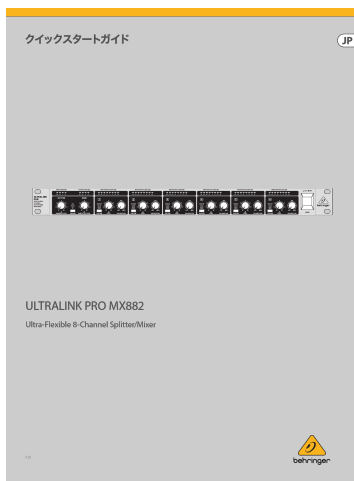


[\[pdf\]](#) Quick Start Guide Guide Warranty

Quick Start Guide Japanese Analog Rack Mixer Behringer MX882 V2 QSG BE P0CCU JP mediadl musictribe media PLM data docs |||

ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V 3.0 2 ULTRALINK PRO **MX882** . TS 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 45C Music...

 lang:fr **score:35** filesize: 1023.36 K page_count: 5 document date: 2021-10-25

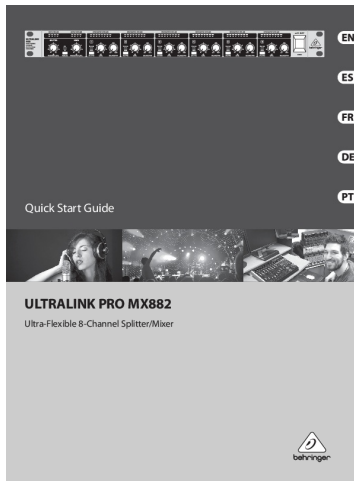

[\[pdf\]](#) Quick Start Guide Instructions Guide Warranty

FEEL Prod Grap PH Artwork P0CCU QSG WW A4 2017 07 21 Rev 1 indd mark vicente ULTRALINK

 
PRO MX882 Full Compass Systems Quick Start Guide Ultra Flexible 8 Channel Splitter Mixer 2 3

Important Safety Instructions LEGAL DISCLAIMER Instrucciones de seguridad NEGACIÓN GARANTÍA LIMITADA LIMITED WARRANTY Terminals marked with this symbol carry 33390

MX882V2QuickStartGuide fullcompass common files

Quick Start Guide ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2
ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speaker cab...

lang:en score:35 filesize: 1.02 M page_count: 10 document date: 2018-07-23

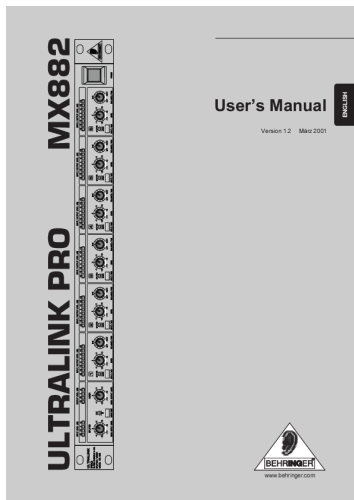

[\[pdf\]](#) User Manual Instructions


DATA MANFULL MX882 ENG Rev E p65 Bathke home httpd data media b c3 zzounds 80

b4d5facc0f8ec61742f7a2d93a94574 music group software behringer starin info Product Info Behringer Manuals Manual P0056 SoundCreation ENGLISH Page 2 ULTRALINK PRO This symbol wherever it appears alerts you to the presence of uninsulated dangerous voltage inside Index soundcreation ro admin files cms products module 3541 |||

ULTRALINK PRO **MX882** ENGLISH Users Manual Version 1.2 Mrz 2001

www.behringer.com ULTRALINK PRO **MX882** SAFETY INSTRUCTIONS CAUTION: To reduce the risk of electrical shock, do not remove the cover or back . No user serviceable parts inside; refer servicing to qualified personnel. WARNING: To reduce...

 lang:en score:35 filesize: 1.21 M page_count: 16 document date: 2001-03-15

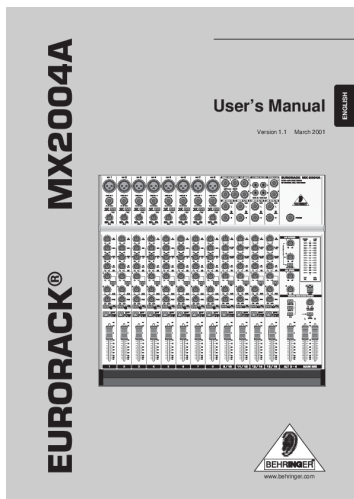

[\[pdf\]](#) User Manual Instructions Guide


DATA MANFULL MX2004 ENG Rev H p65 derks User s Manual ENGLISH Read the manual SAFETY INSTRUCTIONS CAUTION To reduce risk of electrical shock do not remove cover or back Thorsten for this marvellous layout Bernhard Rammi whose technical ingenuity is unique C W fine mechanics key phrase Tooling modification and all others who have made very personal contributions My friends it been worth trouble! Thank you much Uli Behringer The existing users BEHRINGER equipment comments suggestions them most important members design team 8850213666846 MX2004A P0030 M EN home httpd data media 1 mx2004a p0030 m en mediadl musictribe sys master ha1 h9d media63 music group PLM docs c3 zzounds 1e51e5d01023bf9b4676a25c622394f1 synthmanuals manuals behringer user 80 assets erha se ~ronny mx Musical Instrument Guide Index f3569893 9021 4b87 9243 72cf253c8c15 archive org manualsonline id |||

EURORACK MX2004A ENGLISH User s Manual Version 1.1 March 2001

www.behringer.com EURORACK MX2004A ... ge console, the BEHRINGER

EURODESK MX9000. Later we will see how adding the BEHRINGER ULTRALINK PRO **MX882** to your system can inexpensively expand the capacity and flexibility of you mixing power even ...

 
lang:en score:35 filesize: 1.52 M page_count: 26 document date: 2001-03-16

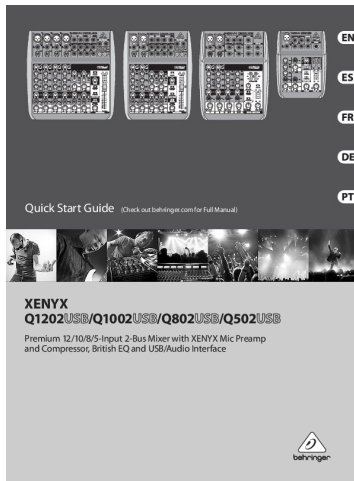

[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX Q1202USB Q1002USB Q802USB Q502USB BEHRINGER Q1202 Q1002 Q802 Q502 Quick Start Guide Check out behringer for Full Manual Premium 12 10 8 5 Input 2 Bus Mixer with Mic Preamp Behringer recordcase de media 8b ce d0

 Quick Start Guide Check out behringer.com for Full Manual XENYX Q1202 /Q1002 /Q802 /Q502 Premium 1 ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. The mixer cannot be bus-powered via USB. Always use the included power adap...
lang:en score:34 filesize: 4.23 M page_count: 18 document date: 2019-06-03

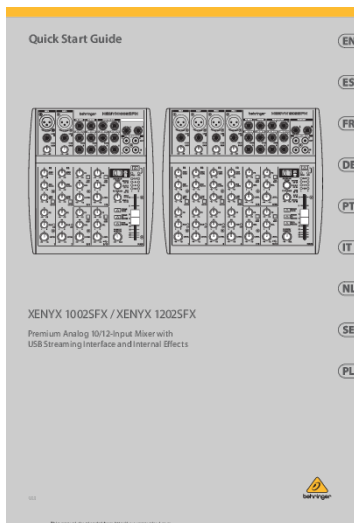

[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

Quick Start Guide XENYX 1002SFX 1202SFX Pult ruor Behringer ULTRALINK PRO MX882 can be connected 19 STREAM OUTPUT These Getting started FR eglise

Pour mknkau5rdoxsi9zj2xlqll3yo1htmxapult ru upload iblock e66 mknkau5rdoxsi9zj2xlqll3yo1htmx ||| Quick Start Guide XENYX 1002SFX / XENYX 1202SFX Premium Analog 10/12-Input Mixer with USB Streaming ... tput of a second mixer 28 PHANTOM Press this button to send 48 V of or Behringer ULTRALINK PRO **MX882** can be connected. phantom power to the XLR inputs for use with 19 STREAM OUTPUT These con...
lang:en score:34 filesize: 2.2 M page_count: 24 document date: 2022-12-13



[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX QX1202USB QX1002USB BEHRINGER QX1202 QX1002 Recordcase de Quick Start Guide Check out behringer for Full Manual Premium 12 10 Input 2 Bus Mixer with Mic Preamps Compressors British EQs KLARK TEKNIK Multi FX Processor Behringer recordcase media 32 96 c9

CLIP SIG Quick Start Guide Check out behringer.com for Full Manual XENYX QX1202 /QX1002 Premium 12 ... , so the output of a second PROGRAM control; the blinking stops. XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. 28 COMP This knob adjusts the amount of compression effect on the channe...
lang:en score:34 filesize: 3.12 M page_count: 17 document date: 2019-06-14




[\[pdf\]](#) User Manual

DATA MANSHRT MX1604A GRE Rev A p65 t derks mx1604a p0087 m el midimanuals manuals
 behringer user manual greek Behringer User Manual Greek |||

EURORACK MX1604A 1.0 2000 www.behringer.com : , . . . : ... K TO CONTROL
 ROOM . . , , EURORACK BEHRINGER ULTRALINK PRO **MX882**. Main Mix Sum 4
 dBu, 2-Track Out Cinch, XLR . fader . : n...

 lang:de score:33 filesize: 1.04 M page_count: 10 document date: 2001-12-19

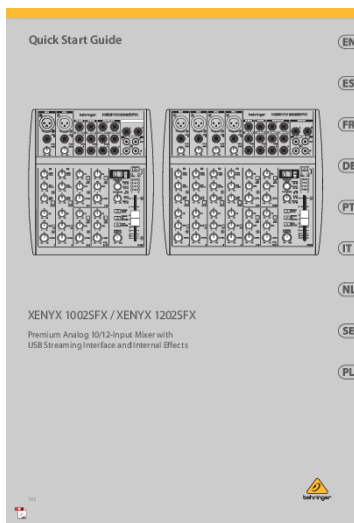


[\[pdf\]](#) Quick Start Guide Instructions Guide

behringer XENYX 1002SFX Premium Analog 10/12 Input Mixer User Guide 1202SFX Behringer
 1202SFXMsv2a35yvom1j0FP4qZyjpRfxpZ0quvi45ZZMOrSassets yoreparo attachments
 Msv2a35yvom1j0FP4qZyjpRfxpZ0quvi45ZZMOrS |||

Quick Start Guide XENYX 1002SFX / XENYX 1202SFX Premium Analog 10/12-Input
 Mixer with USB Streaming ... tput of a second mixer 28 PHANTOM Press this button
 to send 48 V of or Behringer ULTRALINK PRO **MX882** can be connected. phantom
 power to the XLR inputs for use with 19 STREAM OUTPUT These con...

 lang:en score:33 filesize: 2.18 M page_count: 24 document date: 2023-06-22

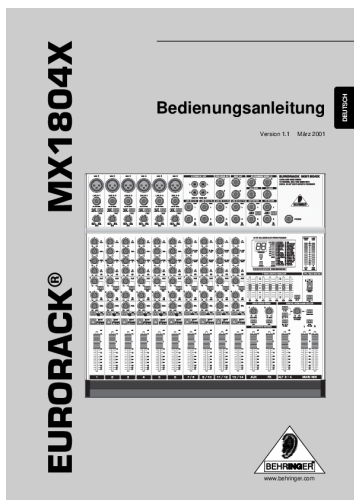


[\[pdf\]](#) User Manual

DATA MANFULL MX1804X GER Rev D p65 derks Behringer User Manual German mx1804x p0064 m de
 midimanuals manuals behringer user manual german |||

EURORACK MX1804X DEUTSCH Bedienungsanleitung Version 1.1 Mrz 2001
 www.behringer.com SICHERHEITSHI ... erleichtern. Weiter hinten in diesem
 Handbuch wird erklärt, wie Sie mit dem BEHRINGER ULTRALINK PRO **MX882** die
 Kapazität und Flexibilität Ihres Mischpults auf preisgünstige Weise erweitern können.
 Zuerst m...

 
lang:de score:32 filesize: 1.53 M page_count: 29 document date: 2001-03-12

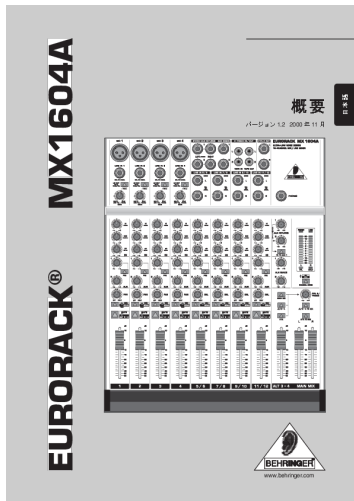

[\[pdf\]](#) User Manual

DATA MANSHT MX1604A JPN Rev G p65 jannusch mx1604a p0087 m ja midimanuals manuals
behringer user manual japanese |||

 
EURORACK MX1604A 1.2 2000 11 www.behringer.com BEHRINGER BEHRINGER
EURORACK EURODESK 2000 BEH ... FL 5. 2 RCA 2- 2TK TO CONTROL ROOM
Solo Mono-PFL PFL EURORACK BEHRINGER ULTRALINK PRO **MX882** 4 dBu 2-
Track Out XLR 2- 6 CONTROL ROOM OUT Alt 3-4 2-Track 4. EUROR...
lang:de score:31 filesize: 1.17 M page_count: 9 document date: 2001-01-30

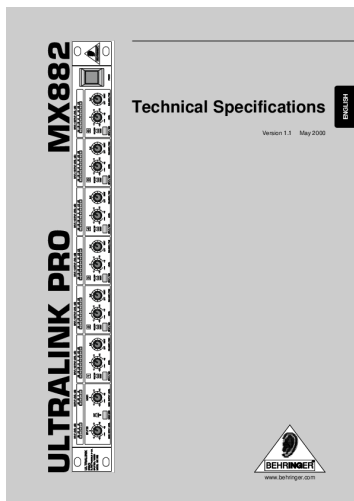

[\[pdf\]](#) Specifications


ULTRALINK PRO MX882 Technical Specifications english Revision B BEHRINGER 248 6306 behringer
mx882 specifications 45832 parts express pedocs specs |||

 ULTRALINK PRO **MX882** ENGLISH Technical Specifications Version 1.1 May 2000
www.behringer.com **MX882** ULTRALINK PRO Ultra-flexible, multi-purpose 8-channel
Signal Router for stage and studio applications s Use it as Effects Mixer, for P.A.
Monitoring, Live Sound Systems, Theaters, Conference Rooms, ...
lang:en score:31 filesize: 322.67 K page_count: 5 document date: 2020-02-07

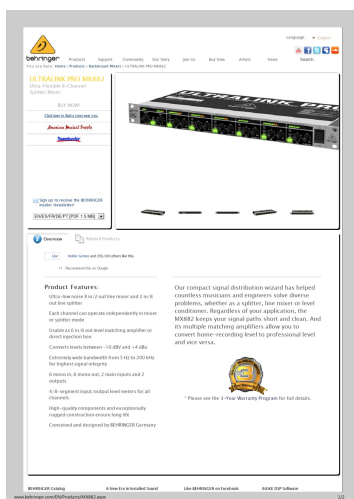

[\[pdf\]](#)

 ULTRALINK PRO MX882 Site Behringer site musifex pt media itemfiles s
Language: English Products Support Community Our Story Y o u a r e h e r e: Home
Products Rackmount Mixers ULTRALINK PRO **MX882** ULTRALINK PRO **MX882**
Ultra-Flexible 8-Channel Splitter/Mixer BUY NOW Click here to find a store near you.
Join Us Buy Now Artists News Search.. Sign up to rece...
lang:en score:31 filesize: 827.47 K page_count: 2 document date: 0000-00-00

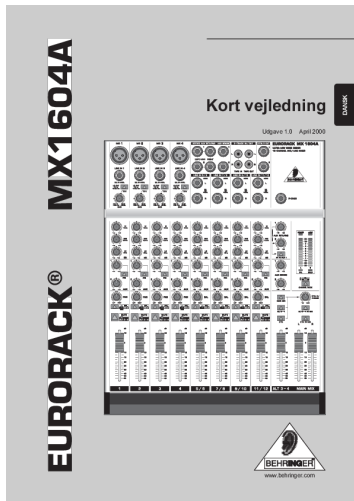


[\[pdf\]](#) User Manual

DATA MANSHT MX1604A DEN Rev A p65 p jannusch Behringer User Manual Danish mx1604a p0087 m da midimanuals manuals behringer user manual danish |||

EURORACK MX1604A DANSK Kort vejledning Udgave 1.0 April 2000

www.behringer.com SIKKERHEDSINSTRUKT ... einput til mixer, og til hvilken outputsignalet fra en anden EURORACK eller BEHRINGER ULTRALINK PRO **MX882** kan tilfjes. Output Hovedmix-summesignalet er med sit 4dBu-niveau ikke kun placeret ved siden...

 lang:da **score:31** filesize: 967.72 K page_count: 9 document date: 2001-08-20

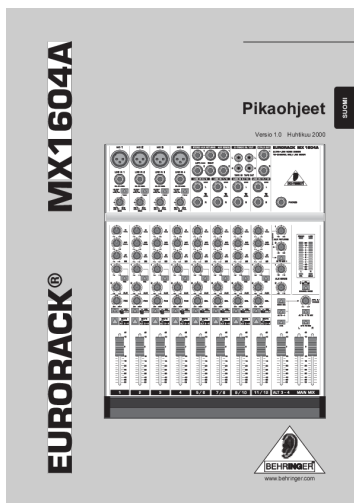


[\[pdf\]](#) User Manual

DATA MANSHT MX1604A FIN Rev A p65 p jannusch Behringer User Manual Finnish mx1604a p0087 m fi midimanuals manuals behringer user manual finnish |||

EURORACK MX1604A SUOMI Pikaohjeet Versio 1.0 Huhtikuu 2000

www.behringer.com TURVALLISUUSOHJEET ... n yksi lis Stereo-Line-tulo, johon voidaan liitt mys toisen EURORACK:in tai BEHRINGER ULTRALINK PRO **MX882**:n menosignaali. Meno Main Mix-summasignaali 4 dBu:n tasolla ei sijaitse ainoastaan 2-Track-Ou...

 lang:fi **score:31** filesize: 971.85 K page_count: 9 document date: 2001-08-20

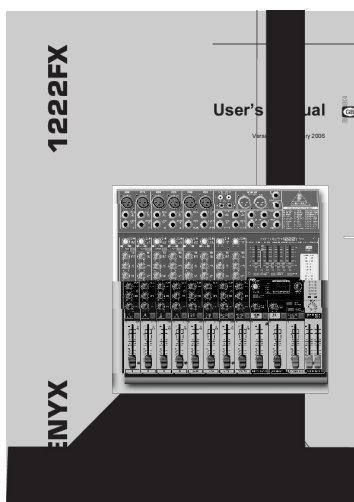


[\[pdf\]](#) User Manual Installation Guide Instructions Guide

Behringer Stereo Equalizer 1222FX User Guide 7504228d 3cdf 466a a3ad 9207946debd9 archive org manualsonline id

ENGLISH 1222FX Users Manual Version 1.0 January 2006 XENYX XENYX 1222FX IMPORTANT SAFETY INSTR ... as stereo line input. Alternatively, the output signal of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can also be connected. If you connect a hi-fi amplifier with a source selection switch to the ...

 lang:en **score:31** filesize: 2.18 M page_count: 0 document date: 0000-00-00

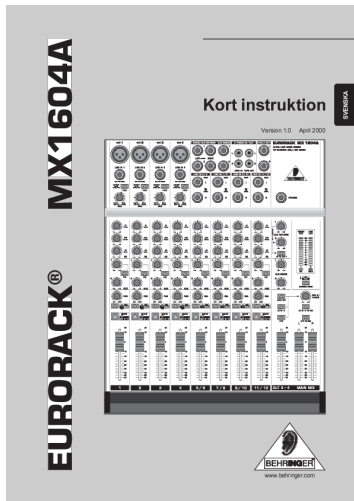

[\[pdf\]](#) User Manual


DATA MANSHT MX1604A SVE Rev A p65 p jannusch Behringer User Manual Swedish mx1604a p0087 m sv synthmanuals manuals behringer user manual swedish |||

EURORACK MX1604A SVENSKA Kort instruktion Version 1.0 April 2000

www.behringer.com SKERHETSANVISN ... ing, vilken ocks kan kopplas till utgngssignalen fr en annan EURORACK eller BEHRINGER ULTRALINK PRO

MX882. Utgng Signalen fr Huvud Mix Summan har en niv av 4 dBu, inte endast vid 2-sprs Out Cinch Jac...

 lang:no **score:31** filesize: 950.39 K page_count: 9 document date: 2001-08-20

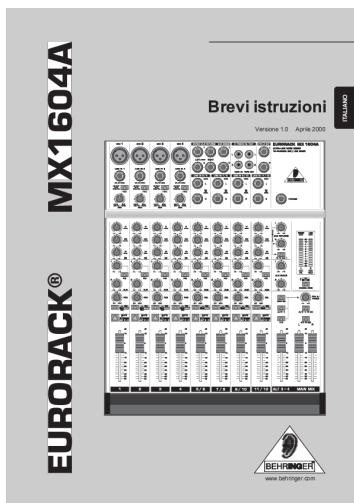


[\[pdf\]](#) User Manual

DATA MANSHT MX1604A ITL Rev A p65 p jannusch Behringer User Manual Italian mx1604a p0087 m it midmanuals manuals behringer user manual italian |||

EURORACK MX1604A ITALIANO Brevi istruzioni Versione 1.0 Aprile 2000

www.behringer.com ISTRUZIONI ... anche essere collegato al segnale di uscita di un secondo EURORACK o di un BEHRINGER ULTRALINK PRO **MX882**. Uscita II segnale principale Mix Sum dotato di un livello di 4 dBu, disponibile non solo me...

 lang:it **score:30** filesize: 986.72 K page_count: 9 document date: 2001-08-20

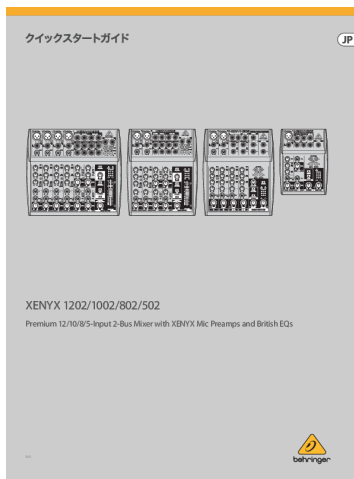


[\[pdf\]](#) Quick Start Guide Guide Warranty

Quick Start Guide Japanese Mixer Analog 8 in 2 Bus Tích Hợp Mic Preamp EQ Behringer 802 XENYX 1202 1002 502 QSG JP mediadl musictribe media PLM data docs P0575 |||

XENYX 1202/1002/802/502 Premium 12/10/8/5-Input 2-Bus Mixer with XENYX Mic Preamps and British EQs V ... 0 dBu MAIN MIX XENYX 502 802 18 2-TRACK INPUT 2-TRACK INPUT CD 1 XENYX ULTRALINK PRO **MX882** 19 2-TRACK OUTPUT MAIN OUT MAIN MIX MAIN MIX 20 2-TR TO MIX 2-TR TO MIX ...

 lang:de **score:30** filesize: 3.16 M page_count: 9 document date: 2021-01-26

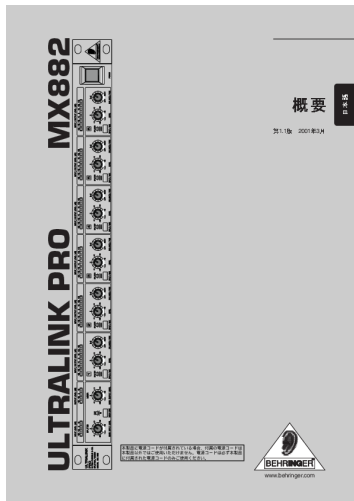

[pdf]

DATA MANSHT MX882 JPN Rev D p65 bathke P0056 M JA behringer 80 assets |||
 ULTRALINK PRO **MX882** 1.1 2001 3 www.behringer.com , BEHRINGER
 BEHRINGER 2001 BEHRINGER ULTRALINK PRO **MX882** 1. 2. 2.1 2.2 2.3 3
 ULTRALINK PRO **MX882** 3. 3.1 4 ULTRALINK PRO **MX882** 3.2 5 ULTRALINK PRO
MX882 6 ULTRALINK PRO **MX882** 4. -24/-12/0/ 6 dB -24/-12/0/ 6 dB -24/-18/-12/-
 6/0/ 6/ 12...

lang:de score:30 filesize: 1.18 M page_count: 7 document date: 2010-12-13



 
[pdf] Warranty

BEHRINGER MX882 P0056 Product Information Document 8849994612766 mediadl musictribe media
 sys master h1d hf1

Product Information Document Rackmount Mixers 6-53 -*/130 .9 Ultra-Flexible 8-
 Channel Splitter/Mixe ... tion ensure long life # 3-Year Warranty Program* #

Conceived and designed by BEHRINGER Germany The **MX882** is definitely one
 piece of gear every audio engineer and musician should always have close at ...

lang:en score:30 filesize: 3.11 M page_count: 5 document date: 2015-03-10

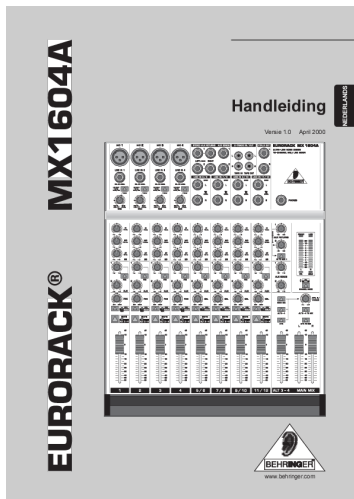


[pdf] User Manual

DATA MANSHT MX1604A NED Rev A p65 p jannusch Behringer User Manual Dutch mx1604a p0087
 m nl synthmanuals manuals behringer user manual dutch |||

EURORACK MX1604A NEDERLANDS Handleiding Versie 1.0 April 2000
 www.behringer.com VEILIGHEIDSINSTRU ... uwer beschikking, die ook met het
 uitvoersignaal van een tweede ERUORACK of BEHRINGER ULTRALINK PRO
MX882 in verbinding gebracht kan worden. Uitgang De hoofdmixsom heeft een
 niveau van 4 dBu. Dit bes...

 lang:nl score:30 filesize: 971.29 K page_count: 9 document date: 2001-08-20

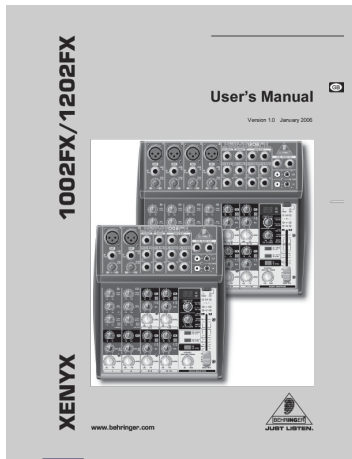


[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Xenyx 1002FX behringer xenyx 1002fx user manual 1 manualsandmore |||

1002FX/1202FX Users Manual Version 1.0 January 2006 XENYX XENYX

 1002FX/1202FX IMPORTANT SAFETY ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. Alternatively the line or tape output of a hi-fi amplifier with source selec...
lang:en score:30 filesize: 1.57 M page_count: 13 document date: 2019-07-23

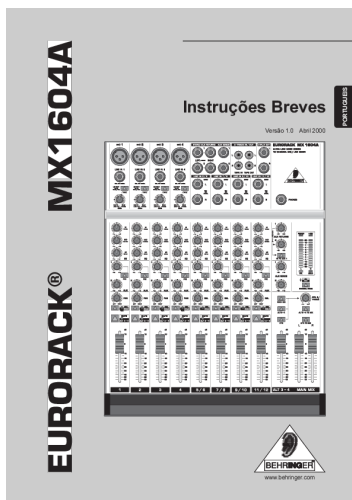


[\[pdf\]](#) User Manual

DATA MANSHRT MX1604 POR Rev A p65 p jannusch Behringer MX1604A User Manual Portuguese mx1604a p0087 m pt midimanuals manuals behringer user manual portuguese |||

EURORACK MX1604A PORTUGUEIS Instrues Breves Verso 1.0 Abril 2000

www.behringer.com INSTRUES DE SE ... qual poder tambm ser conectada com o sinal de sada dum segundo EURORACK ou BEHRINGER ULTRALINK PRO **MX882**. Sada O sinal da soma de mistura principal Main Mix Sum tem um nvel de 4 dBu, no smente na ...

 lang:pt score:30 filesize: 1006.54 K page_count: 10 document date: 2001-08-20




[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Eurorack UB1222FX PRO behringer eurorack ub1222fxpro user manual 1 manualsandmore |||

ENGLISH UB1222FX-PRO Users Manual Version 1.0 October 2003 EURORACK

EURORACK UB1222FX-PRO IMPO ... stereo line input. Alternatively, the output signal of a second EURORACK or BEHRINGER ULTRALINK PRO **MX882** can also be connected. If you connect a hi-fi amplifier with a source selection switch to the ...

 lang:en score:30 filesize: 1.85 M page_count: 15 document date: 2019-07-23

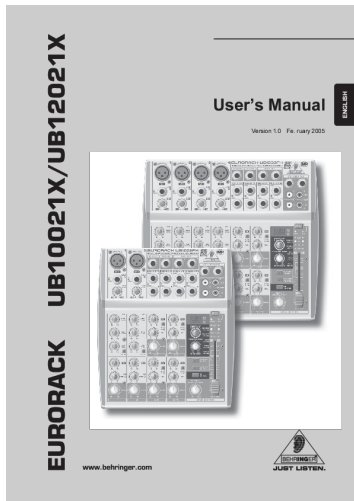

[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Eurorack UB1002FX behringer eurorack ub1002fx user manual 1 manualsandmore |||

EURORACK UB10021X/UB12021X ENGLISH Users Manual Version 1.0 February 2005 EURORACK UB10021X/UB12 ... used as a standard stereo line input, so the output of a second EURORACK or BEHRINGER ULTRALINK PRO **MX882** can be connected. Alternatively the line or tap output of a hi-fi amplifier with source select...

lang:en score:30 filesize: 2.63 M page_count: 12 document date: 2019-07-24




[\[pdf\]](#) User Manual

DATA MANSHT MX1804X DEN Rev A p65 derks Behringer User Manual Danish mx1804x p0064 m da synthmanuals manuals behringer user manual danish |||

EURORACK MX1804X DANSK Kort vejledning Udgave 1.1 Marts 2001 www.behringer.com SIKKERHEDSINSTRUKT ... ghes til mixet, til hvilket outputsignalet fra en yderligere EURORACK eller BEHRINGER ULTRALINK PRO **MX882** kan forbindes. Output Hovedmixtotalsignalet er ikke kun p 2-spors ud-klemmestikdser med et ni...

 lang:da score:30 filesize: 1.22 M page_count: 13 document date: 2001-03-12

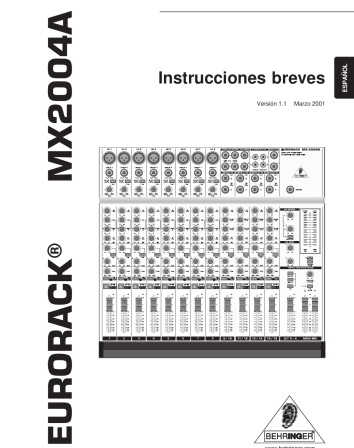


[\[pdf\]](#) User Manual Instructions

DATA MANSHT MX2004A ESP Rev A p65 derks Behringer User Manual Spanishmx2004a p0030 m essynthmanuals manuals behringer mx2004a user manual spanish es |||

EURORACK MX2004A ESPA OL Instrucciones breves Versi n 1.1 Marzo 2001 www.behringer.com INSTRU ... cual se le puede aadir la se al de salida de un EURORACK secundario o el BEHRINGER ULTRALINK PRO **MX882**. Salida La se al de zumbido de la mezcla principal est en su nivel de 4 dBu, no solamente ...

 lang:es score:30 filesize: 1.25 M page_count: 10 document date: 2001-03-16

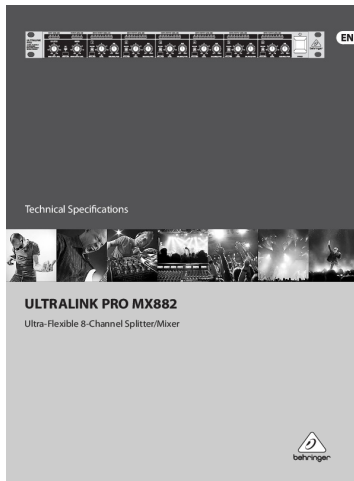


[\[pdf\]](#) Specifications Datasheet Diagram

میکسر کلیات فنی دستگاه میکسر Behringer MX882 Proavl Data Sheet proavl net 2020 10 |||

Technical Specifications ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2 ULTRALINK PRO **MX882** Technical Specifications ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer Ultra-low noise 8 in/2 out line mixer and 2 in/8 out line splitter Each channel can operate independently ...

 lang:en score:30 filesize: 412.11 K page_count: 3 document date: 2020-10-14

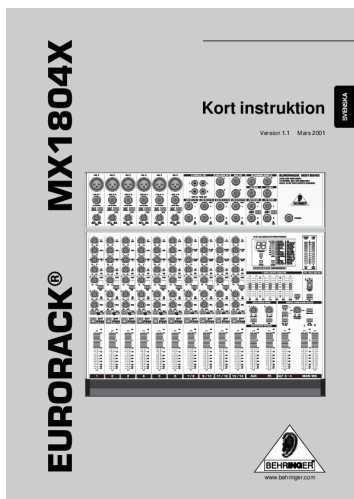

[\[pdf\]](#) User Manual

DATA MANSHT MX1804X SVE Rev A p65 derks Behringer User Manual Swedish mx1804x p0064 m sv synthmanuals manuals behringer user manual swedish |||

 
EURORACK MX1804X SVENSKA Kort instruktion Version 1.1 Mars 2001

www.behringer.com SKERHETSANVISNI ... illgnglig hos mixen, till vilken

utngnssignalen hos en andra EURORACK eller BEHRINGER ULTRALINK PRO

MX882 kan kopplas. Utgng Signalen fr huvudmix summan finns inte endast p 2-sprts ut-cinch kontakten m...

lang:no score:30 filesize: 1.21 M page_count: 13 document date: 2001-03-12

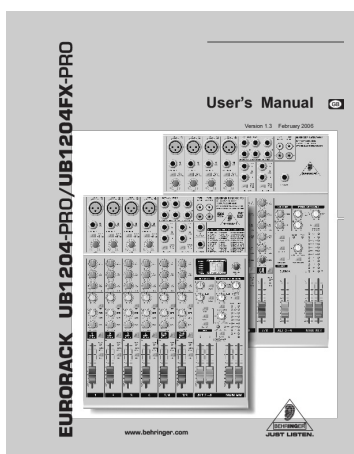


[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Eurorack UB1204 PRO behringer eurorack ub1204pro user manual 1 manualsandmore |||

EURORACK UB1204-PRO/UB1204FX-PRO Users Manual Version 1.3 February

2006 EURORACK UB1204-PRO/UB120 ... stereo line input. Alternatively, the output signal of a second EURORACK or BEHRINGER ULTRALINK PRO **MX882** can also be connected. If you connect a hi-fi amplifier with a source selection switch to the ...

 lang:en score:29 filesize: 1.96 M page_count: 13 document date: 2019-07-23

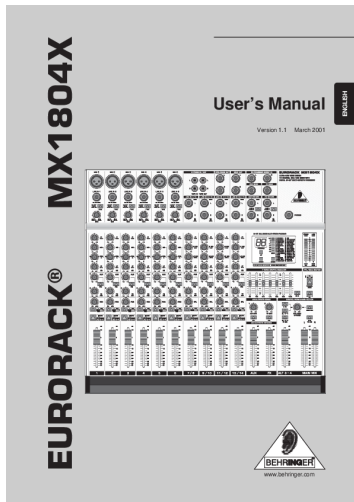

[\[pdf\]](#) User Manual Instructions

DATA MANFULL MX1804X ENG Rev D p65 derks Version 1 March 2001 Synth Manuals synthmanuals 7
EURORACK INTRODUCTION Congratulations In purchasing our you have acquired a mixer whose small
size belies its incredible versatility and audio performance I would like to thank the following people help
on Project has made it all possible △ The existing users of BEHRINGER equipment mx1804x p0064 m
en home httpd data media 4 manuals behringer user manual c3 zzounds

468fef64d1e7888b3caaf20def2d821b Behringer User Manual |||

EURORACK MX1804X ENGLISH User s Manual Version 1.1 March 2001

www.behringer.com EURORACK MX1804X ... ich facilitate the work with your
MX1804X. Later we will see how adding the BEHRINGER ULTRALINK PRO **MX882**
to your system can inexpensively expand the capacity and flexibility of you mixing
power even ...

lang:en **score:29** filesize: 1.46 M page_count: 27 document date: 2001-03-12