

## Smart Steps WK37C18A

# Smart Steps Trend Walker, Zoo-ometry Instruction Manual

MODEL: WK37C18A

## 1. Introduction

The Smart Steps Trend Walker is designed to provide a supportive environment for your child's early mobility development. This manual contains important information for the proper assembly, safe use, and maintenance of your walker. Please read all instructions carefully before use and retain this manual for future reference.

## 2. Safety Information

**WARNING:** Failure to follow these instructions could result in serious injury or death.

- Always supervise your child while using the walker. Never leave a child unattended.
- This walker is intended for children who can sit up unassisted, weigh between 15 and 30 pounds (6.8 to 13.6 kg), and are between 6 to 12 months of age.
- Ensure all locking mechanisms are securely engaged before each use.
- Do not use the walker near stairs, steps, or uneven surfaces.
- Keep the walker away from hot liquids, electrical cords, stoves, heaters, and other potential hazards.
- Discontinue use if any part of the walker is damaged, broken, or missing.
- Periodically check all fasteners and components to ensure they are secure.

## 3. Package Contents

Verify that all components are present before assembly:

- Walker Frame (Base and Legs)
- Padded Seat
- Large Surround Tray
- Removable Toy Bar with Toys (Lion, Monkey, Rings)

## 4. Setup Instructions

The Smart Steps Trend Walker is designed for straightforward assembly. Follow these steps to prepare the walker for use.

### 4.1 Unfolding the Walker

Carefully unfold the walker frame until it locks into its open position. Ensure all support legs are fully extended and locked.



Figure 1: The Smart Steps Trend Walker in its fully assembled and open position.

### 4.2 Attaching the Seat and Tray

Place the padded seat into the designated opening on the walker frame. Ensure the seat is securely fastened according to the instructions provided with the product. The large surround tray is integrated into the walker's design.



Figure 2: Front view of the assembled walker, highlighting the seat and tray.

#### 4.3 Attaching the Toy Bar

The removable toy bar can be attached to the front of the walker's tray. Align the connectors on the toy bar with the corresponding slots on the tray and press firmly until it clicks into place.



Figure 3: Close-up of the toy bar with interactive toys.

## 5. Operating Instructions

### 5.1 Height Adjustment

The walker features a three-position height adjustment mechanism to accommodate your child's growth. Locate the adjustment levers beneath the tray and follow the product-specific instructions to raise or lower the walker to the appropriate height, ensuring your child's feet can comfortably touch the floor.

### 5.2 Using the Tray and Toy Bar

The large surround tray provides space for snacks or additional toys. The removable toy bar with its attached toys offers entertainment for your child. The toy bar can be easily removed if not desired or for cleaning.



Figure 4: Child using the walker with the tray and toy bar.

## 6. Maintenance

Regular cleaning and inspection will help maintain the walker's condition and ensure continued safe use.

### 6.1 Cleaning Instructions

- **Seat Pad:** The padded seat is removable for cleaning. Spot clean or wipe clean with a damp cloth and mild soap. Allow to air dry completely before reattaching.





Figure 5: Cleaning the walker's seat pad.

- **Frame and Tray:** Wipe down the plastic and metal components of the frame and tray with a damp cloth and mild soap. Dry thoroughly.
- **Toys:** The toys on the toy bar can be wiped clean with a damp cloth.

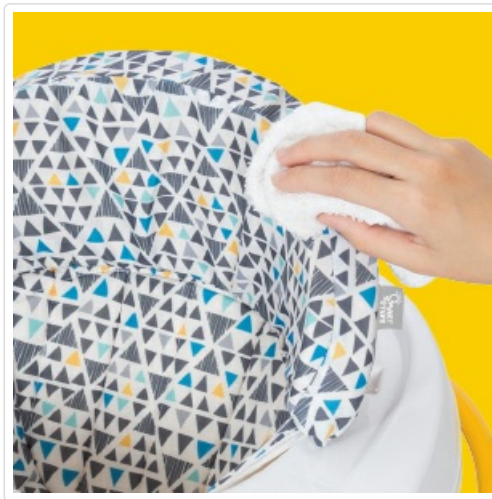


Figure 6: Cleaning the walker's toy bar accessories.

- **Wheels:** The wheels are sealed and can accumulate debris. While they are difficult to clean internally, ensure the exterior of the wheels is free from hair, lint, or other obstructions that may hinder smooth movement.

## 7. Storage

The Smart Steps Trend Walker is designed to fold flat for convenient transport and storage.

### 7.1 Folding the Walker

Refer to the product-specific folding mechanism instructions. Typically, this involves releasing a latch or button to collapse the frame. Once folded, store the walker in a dry, safe place away from direct sunlight and extreme temperatures.



Figure 7: The walker shown in its open and folded configurations for storage.

## 8. Troubleshooting

- **Walker does not move smoothly:** Check the wheels for any obstructions such as hair, lint, or debris. Ensure the floor surface is clean and even.
- **Height adjustment is stiff:** Ensure no debris is blocking the height adjustment tracks. Apply gentle, even pressure when adjusting.
- **Walker feels unstable:** Verify that all locking mechanisms are fully engaged and the frame is properly extended. Ensure the walker is used on a flat, level surface.

## 9. Specifications

Feature	Detail
Model Number	WK37C18A
Brand	Smart Steps
Product Dimensions	25.39 x 23.82 x 16.34 inches
Item Weight	8.07 pounds
Material Type	Metal, Plastic, Polyester
Target Gender	Unisex
Minimum Weight Recommendation	15 Pounds
Maximum Weight Recommendation	30 Pounds
Age Range (Description)	6-12 Months

Is Portable	Yes
Batteries Required	No

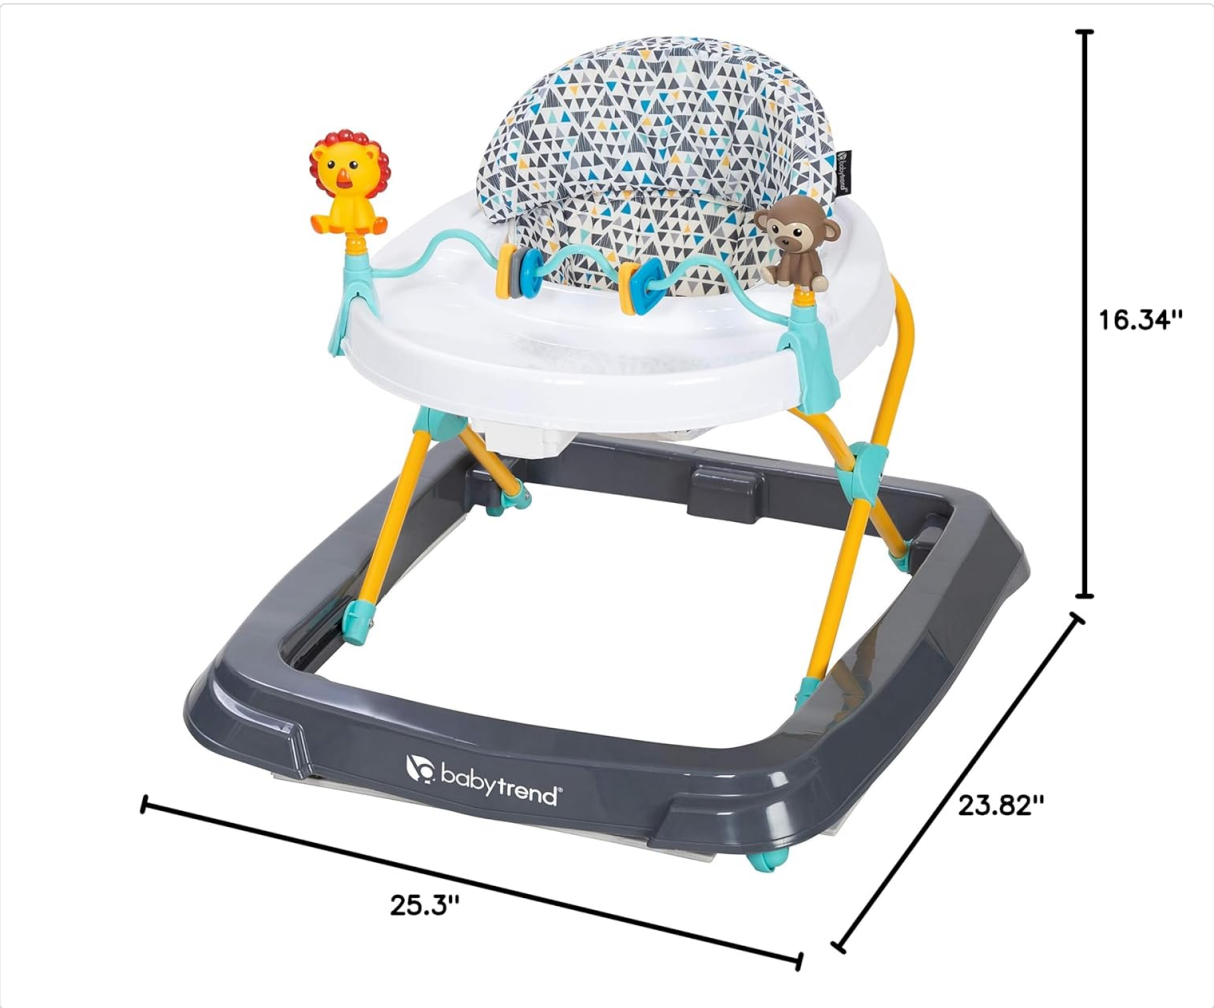 


Figure 8: Product dimensions of the Smart Steps Trend Walker.

## 10. Warranty and Support

 




 
For detailed warranty information, please refer to the official warranty document:

- [Official Warranty Document \(PDF\)](#)

For further assistance or inquiries, please contact Smart Steps customer service. You may also refer to the comprehensive user manual:

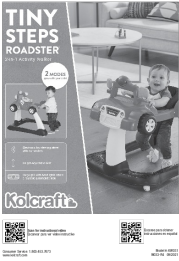- [Full User Manual \(PDF\)](#)

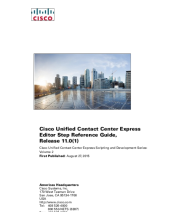

	<p><a href="#">Kolcraft Tiny Steps Roadster 2-in-1 Activity Walker: Assembly, Safety, and Use Guide</a></p> <p>This guide provides comprehensive instructions for the Kolcraft Tiny Steps Roadster 2-in-1 Activity Walker. It covers important safety information, assembly steps, parts list, care and maintenance, seat height adjustment, and conversion to a walk-behind walker.</p>
	<p><a href="#">Baby Trend Buddy Bot 2-in-1 Push Walker: Assembly and Safety Guide</a></p> <p>Comprehensive guide for the Baby Trend Buddy Bot 2-in-1 Push Walker, including safety warnings, battery information, FCC compliance, care instructions, and assembly steps.</p>
	<p><a href="#">Baby Trend Smart Steps Bounce N' Play Jumper Instruction Manual</a></p> <p>Comprehensive instruction manual for the Baby Trend Smart Steps Bounce N' Play Jumper (Model JP01E45A), including safety guidelines, parts list, assembly instructions, and warranty information.</p>
	<p><a href="#">Baby Trend Bounce N' Play 3-in-1 Activity Center AC01XXXA Instruction Manual</a></p> <p>Instruction manual for the Baby Trend Bounce N' Play 3-in-1 Activity Center (Model AC01XXXA). Provides detailed guidance on assembly, safety precautions, parts identification, usage, and maintenance. Includes warnings for strangulation and fall hazards, FCC compliance information, and customer service contact details.</p>
	<p><a href="#">Baby Trend Smart Steps Sensory Activity Play Mat Instruction Manual</a></p> <p>This manual provides detailed instructions for assembling, using, and caring for the Baby Trend Smart Steps Sensory Activity Play Mat (Model PT02XXXA). It includes safety warnings, parts list, and warranty information.</p>
	<p><a href="#">Cisco Unified Contact Center Express Editor Step Reference Guide, Release 11.0(1)</a></p> <p>A comprehensive guide detailing the steps available within the Cisco Unified Contact Center Express Editor for developing interactive scripts. This volume covers individual steps, their functionalities, and usage within various palettes, including General, Trigger, Session, Contact, Call, eMail, HTTP, Media, User, Prompt, Grammar, Document, Database, and ACD steps.</p>