

Nintendo Original System Console Tablet Only

Nintendo Switch Console Tablet User Manual

Model: Original System Console Tablet Only
Brand: Nintendo

1. INTRODUCTION

This document serves as a comprehensive guide for the Replacement Nintendo Switch 32GB Original System Console Tablet. It is designed to assist users in understanding the console's features, proper setup, operation, and basic maintenance. Please read this manual thoroughly before using your device to ensure safe and efficient operation.

2. PRODUCT OVERVIEW

The Nintendo Switch console tablet is the central component of the Nintendo Switch system, designed for both handheld and docked gameplay. This replacement unit includes the tablet only, without Joy-Cons, dock, or other accessories.

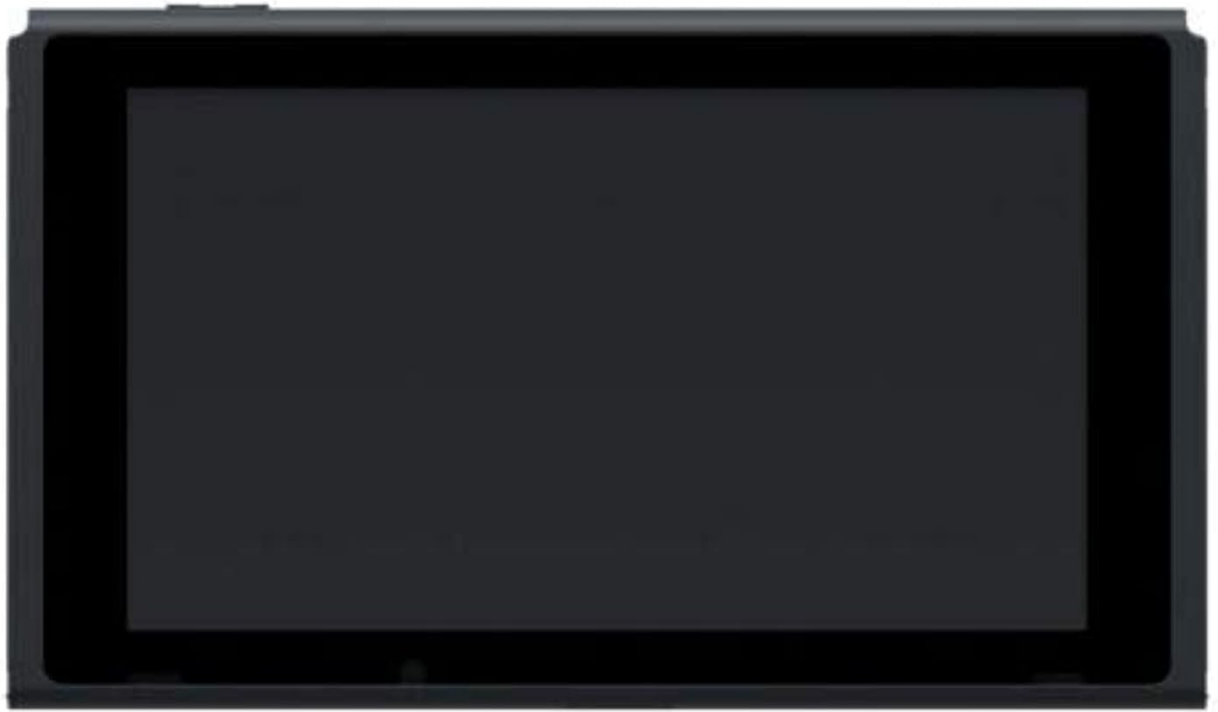


Figure 2.1: Front view of the Nintendo Switch console tablet, showing the main screen.

Key Components:

- **Screen:** A 6.2-inch capacitive touch screen.
- **Power Button:** Located on the top edge, used to power on/off or put the console to sleep.
- **Volume Buttons:** Located on the top edge, used to adjust audio output.
- **Game Card Slot:** Located under a flap on the top edge, for inserting Nintendo Switch game cards.
- **Headphone Jack:** A 3.5mm audio jack on the top edge for connecting headphones.
- **Joy-Con Rails:** Slots on either side of the tablet for attaching Joy-Con controllers (not included).
- **Kickstand:** A retractable stand on the back of the tablet for tabletop mode.
- **Speakers:** Integrated speakers located on the bottom rear of the tablet.
- **USB-C Port:** Located on the bottom edge, used for charging and connecting to the Nintendo Switch Dock.

3. SETUP

3.1 Initial Charge

Before first use, ensure the console tablet is fully charged. Connect a compatible Nintendo Switch AC adapter (sold separately) to the USB-C port on the bottom of the tablet and plug it into a wall outlet.

3.2 Attaching Joy-Cons

To use the console in handheld mode, slide your Joy-Con controllers (sold separately) down the rails on either side of the tablet until they click into place. Ensure they are oriented correctly (L for left, R for right).

3.3 Inserting a Game Card

1. Open the game card slot cover located on the top edge of the console.
2. Insert a Nintendo Switch game card with the label facing the same direction as the console's screen.
3. Push the game card firmly until it clicks into place.
4. Close the game card slot cover.

3.4 Powering On

Press and hold the Power button on the top edge of the console for a few seconds until the Nintendo logo appears on the screen.

4. OPERATING THE CONSOLE

4.1 Basic Navigation

Use the attached Joy-Cons or the touch screen to navigate the HOME Menu. Select game icons to launch software, or access system settings and other features.

4.2 Adjusting Volume

Press the (+) or (-) Volume buttons on the top edge of the console to increase or decrease the audio volume.

4.3 Using the Kickstand

To use the console in tabletop mode, pull out the kickstand located on the back of the tablet. Place the console on a flat surface. This mode is ideal for playing with detached Joy-Cons.

4.4 Powering Off / Sleep Mode

- **Sleep Mode:** Briefly press the Power button to put the console into sleep mode. The screen will turn off, but the console will remain powered on in a low-power state.
- **Power Off:** Hold the Power button for at least three seconds, then select 'Power Options' > 'Power Off' from the on-screen menu.

5. MAINTENANCE

5.1 Cleaning the Console

Use a soft, dry cloth to clean the console's screen and exterior. For stubborn smudges, a slightly damp cloth with water can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

5.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the console for an extended period, charge it to about 50% and store it in a cool, dry place. Recharge it every six months to prevent deep discharge.

5.3 Storage

Store the console in a clean, dry environment away from extreme temperatures, direct sunlight, and excessive dust. When not in use, consider a protective case to prevent scratches and damage.

6. TROUBLESHOOTING

If you encounter issues with your Nintendo Switch console tablet, refer to the following common problems and solutions:

6.1 Console Not Powering On

- Ensure the console is fully charged. Connect it to a power source and wait a few minutes before attempting to power on again.
- Try holding the Power button for 12-15 seconds to force a shutdown, then press it again to restart.

6.2 Screen Not Responding to Touch

- Clean the screen thoroughly to remove any smudges or debris.
- Restart the console (see 4.4 Powering Off / Sleep Mode).
- Ensure your fingers are clean and dry when using the touch screen.

6.3 Game Card Not Reading

- Remove the game card and reinsert it, ensuring it clicks into place.
- Check the game card and the slot for any visible dust or damage.
- Try a different game card to determine if the issue is with the console or the specific card.

For more complex issues or if troubleshooting steps do not resolve the problem, please contact the seller or Nintendo's official support channels.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	HAC-001 (Original System Console Tablet)
Internal Storage	32GB
Dimensions	7.52 x 5.35 x 1.26 inches
Item Weight	12.3 ounces
Battery	1 Lithium Ion battery (included)
Manufacturer	Nintendo
First Available	August 24, 2018

8. WARRANTY AND SUPPORT

This product is a replacement console tablet. For specific warranty information, please refer to the terms provided by your authorized seller at the time of purchase. Protection plans may be available for extended coverage. For technical support or service inquiries, please contact the seller directly or visit the official Nintendo support website for general product information and assistance.

© 2024 Nintendo. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07GT9MZST>

More documents and user manuals: <https://manuals.plus/>