

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [iBall](#) /
- › [iBall Slide Elan 3x32 Tablet User Manual](#)

iBall iBall Slide Elan 3x32

iBall Slide Elan 3x32 Tablet User Manual

Model: iBall Slide Elan 3x32

1. PRODUCT OVERVIEW

The iBall Slide Elan 3x32 is a 10.1-inch tablet designed for versatile use, featuring Wi-Fi, 4G LTE, and voice calling capabilities. It comes with 32GB of internal storage and a Micro HDMI port for enhanced connectivity. This manual will guide you through its features and operation.



Image 1.1: Front view of the iBall Slide Elan 3x32 Tablet displaying a vibrant beach scene.

Key Features:

- **Display:** 25.654 cm (10.1-inch) IPS display with 1280 x 800 pixels resolution.
- **Processor:** 1.3GHz Cortex A53 quad-core processor.
- **Memory & Storage:** 3GB RAM, 32GB internal memory.
- **Operating System:** Android v8.1 Oreo.
- **Cameras:** 5MP rear camera with LED flash, 2MP front camera.
- **Connectivity:** Wi-Fi a/b/g/n, 4G LTE, Voice Calling, Bluetooth Ver. 4.0, Micro HDMI, USB OTG Function.
- **Battery:** 7000mAH lithium-polymer battery (26.6 Watt Hours).
- **Additional Features:** FM Radio with FM Recording, Additional DC pin Charging port, 22 Indian regional system language support.

2. WHAT'S IN THE BOX

Upon opening your iBall Slide Elan 3x32 Tablet package, you should find the following items:

- iBall Slide Elan 3x32 Tablet
- Charger
- DC Round Pin Cable
- USB Cable
- OTG Cable
- Stereo Headsets
- User Manual (this document)
- Warranty Card
- Carry Pouch

Your browser does not support the video tag.

Video 2.1: An official overview video demonstrating the iBall 10.1-inch 4G Tablet and its included accessories.

3. INITIAL SETUP

3.1. Charging the Tablet

Before first use, fully charge your tablet. Connect the charger to the DC pin charging port or the USB port on the tablet, then plug it into a power outlet. The battery indicator on the screen will show charging status.

3.2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) until the iBall logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power Off" and confirm.

3.3. Inserting SIM and SD Card

Locate the SIM/SD card slot on the side of the tablet. Carefully open the cover. Insert your 4G LTE SIM card and/or a microSD card (for expandable storage) into the designated slots, ensuring correct orientation. Close the cover securely.



Image 3.1: Side view of the tablet highlighting the Micro HDMI port, microphone, and power/volume buttons.

4. OPERATING INSTRUCTIONS

4.1. Basic Navigation

- **Touchscreen Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps, widgets, and notifications.
- **Settings:** Customize your tablet via the Settings app.

4.2. Connecting to Wi-Fi

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.

4.3. Using 4G LTE and Voice Calling

With a valid 4G LTE SIM card inserted, your tablet can access mobile data and make/receive calls.

- **Mobile Data:** Enable mobile data in **Settings > Network & Internet > Mobile network**.
- **Voice Calling:** Use the pre-installed Phone app to dial numbers or access contacts.

4.4. Micro HDMI Connectivity

Connect your tablet to an external display (TV, monitor, projector) using a Micro HDMI to HDMI cable. This allows you to mirror your tablet's screen or extend your display for presentations or media consumption.

4.5. Camera Operation

The tablet features a 5MP rear camera with LED flash and a 2MP front camera.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera toggle icon.
4. Access settings within the app for flash control, modes, and other options.

4.6. FM Radio

The tablet includes an FM Radio with recording functionality. Connect your stereo headsets (included) to act as an antenna for optimal reception. Open the FM Radio app to scan for stations and enjoy.

5. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not let the battery fully discharge frequently. Use only the provided charger.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security.
- **Storage Management:** Periodically clear unnecessary files and apps to maintain sufficient free storage space.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your iBall Slide Elan 3x32 Tablet.

Issue	Possible Solution
Tablet does not power on.	Ensure the tablet is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, perform a soft reset by holding the power button for 10-15 seconds.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.

Issue	Possible Solution
Slow performance or apps crashing.	Close unused apps. Clear app caches. Free up storage space. Restart the tablet. If issues persist, consider a factory reset (back up your data first).
No sound from speakers.	Check volume levels. Ensure headphones are not connected. Restart the tablet.
SIM card not detected.	Ensure the SIM card is correctly inserted. Restart the tablet. Check if the SIM card is active with your service provider.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	iBall
Model Name	iBall Slide Elan 3x32
Display Size	10.1 Inches (25.654 cm)
Screen Resolution	1280 x 800 pixels
Processor Brand	Cortex A53
Processor Speed	1.3 GHz
Processor Count	4
RAM Size	3 GB (DDR3)
Memory Storage Capacity	32 GB
Operating System	Android v8.1 Oreo
Rear Webcam Resolution	5 MP (with LED flash)
Front Webcam Resolution	2 MP
Connectivity Type	Bluetooth, Wi-Fi, 4G LTE
Battery Type	Lithium Polymer
Battery Energy Content	26.6 Watt Hours (7000mAH)
Product Dimensions (LxWxH)	26 x 1.1 x 16.8 cm
Item Weight	593 g

8. WARRANTY AND SUPPORT

8.1. Warranty Information

The iBall Slide Elan 3x32 Tablet comes with a **1-year manufacturer warranty** for the device from the date of purchase. In-box accessories, including batteries, are covered by a **6-month manufacturer warranty**.

Please retain your purchase receipt and warranty card for any warranty claims.

8.2. Customer Support

For technical assistance, service, or further inquiries, please refer to the contact information provided on your warranty card or visit the official iBall support website.