

Baby Trend ST28C14A

Baby Trend Jetaway Plus Compact Stroller - Parker (Model: ST28C14A) Instruction Manual

Your guide to safe and effective use of your Baby Trend stroller.

[Introduction](#)

[Safety Information](#)

[Parts List](#)

[Setup & Assembly](#)

[Operating](#)

[Instructions](#)

[Maintenance](#)

[Specifications](#)

[Support](#)

1. INTRODUCTION

Thank you for choosing the Baby Trend Jetaway Plus Compact Stroller. This lightweight and durable stroller is designed for convenience and comfort, making it an ideal companion for parents on the go. This manual provides essential information for the safe assembly, operation, and maintenance of your stroller. Please read it thoroughly before use and keep it for future reference.

2. IMPORTANT SAFETY INFORMATION

- Always secure your child with the 5-point safety harness.
- Never leave your child unattended in the stroller.
- Ensure the stroller is fully open and locked before placing a child inside.
- Do not overload the storage basket or attach items to the handle that could cause the stroller to tip.
- The stroller is designed for children up to 45 pounds. Do not exceed this weight limit.
- Always engage the brakes when the stroller is stationary.
- Keep fingers clear of moving parts when folding or unfolding the stroller.
- This stroller is not compatible with car seats.

3. PARTS LIST

Ensure all components are present before assembly:

- Jetaway Plus Compact Stroller Frame with Seat and Canopy
- 5-Point Safety Harness with Harness Covers
- Removable Cup Holder
- Large Storage Basket
- Tote Bag (for transport when folded)

4. SETUP & ASSEMBLY

4.1 Unfolding the Stroller

1. Place the folded stroller on a flat surface.
2. Release any locking mechanisms that keep the stroller folded.
3. Pull the handles upwards until the frame clicks into place, indicating it is fully open and locked. Verify all locking mechanisms are engaged.



Figure 1: Front view of the Baby Trend Jetaway Plus Compact Stroller in its unfolded state.

4.2 Attaching the Canopy and Accessories

- The ratcheting canopy is pre-attached. Adjust it to the desired position for sun protection.
- Attach the removable cup holder to the easy-grip handle.



Figure 2: Side view of the stroller showing the adjustable canopy and handle.

5. OPERATING INSTRUCTIONS

5.1 Securing Your Child

- Place your child in the seat.
- Fasten the 5-point safety harness, ensuring it is snug but comfortable. Adjust the harness covers for comfort.

5.2 Adjusting the Seat and Canopy

- The multi-position reclining seat can be adjusted for your child's comfort, suitable for naps or upright seating.
- The canopy can be ratcheted to various positions to provide optimal shade. It includes a rear roll-up airflow panel and a peek-a-boo window.
- The leg support is adjustable for added comfort.



Figure 3: Top-down view of the stroller seat with the 5-point harness visible.

5.3 Using the Wheels and Brakes

- The dual front wheels provide a smooth ride and enhanced maneuverability.
- Engage the rear wheel brakes by pressing down on the brake levers located near the rear wheels when the stroller is stationary. Lift the levers to release.

5.4 Folding the Stroller for Transport

1. Ensure your child is removed from the stroller.
2. Locate the folding mechanism (usually a latch or button) on the frame.
3. Follow the instructions to collapse the stroller into a compact size.
4. Once folded, the telescoping handle allows you to roll the stroller like luggage.
5. For ultimate portability, place the folded stroller into the included tote bag.



Figure 4: The stroller in its folded state, being pulled by its telescoping handle.



Figure 5: Side view of the stroller when compactly folded.

6. MAINTENANCE

- **Cleaning:** Wipe clean with a damp cloth. Do not use abrasive cleaners.
- **Storage:** Store the stroller in a dry, cool place away from direct sunlight when not in use.
- **Inspection:** Regularly check all parts for wear, tear, or damage. Ensure all fasteners are secure.

7. TROUBLESHOOTING

If you encounter any issues with your stroller, please refer to the following general advice:

- **Stroller not folding/unfolding smoothly:** Ensure all locking mechanisms are disengaged before folding and that no fabric is caught in the frame. Apply a silicone-based lubricant to moving parts if necessary.
- **Wheels not rolling smoothly:** Check for debris caught in the wheels. Clean and lubricate axles if needed.
- **Harness issues:** Ensure straps are correctly threaded and buckles are free of obstructions.

8. SPECIFICATIONS

Brand	Baby Trend
Model Number	ST28C14A
Color	Parker
Item Weight	14.88 Pounds
Folded Size	26.56"L x 19.88"W x 41.31"H
Item Dimensions (L x W x H)	26.56"L x 19.88"W x 41.31"H
Maximum Weight Recommendation	45 Pounds
Harness Type	5 Point
Stroller Type	Umbrella Stroller
Is Car Seat Compatible	No
Number of Wheels	4
Material Type	Plastic, Polyester, Cotton
Frame Material	Aluminium
Care Instructions	Wipe clean with a damp cloth
Included Components	Carry bag



Figure 6: Visual representation of the stroller's dimensions.

9. WARRANTY & SUPPORT

For warranty information, replacement parts, or further assistance, please contact Baby Trend customer service

directly. Visit the official Baby Trend website or refer to the product packaging for contact details. You can also visit the [Baby Trend Store on Amazon](#) for more products and information.

10. ADDITIONAL RESOURCES

About Baby Trend

Your browser does not support the video tag.

Video 1: An overview of the Baby Trend brand, highlighting their commitment to quality, comfort, and style in baby products.