

[manuals.plus](#) /

- › [TechniSat](#) /
- › [TechniSat DIGITRADIO 1 S Portable DAB+ FM Stereo Radio User Manual](#)

TechniSat DIGITRADIO 1 S

TechniSat DIGITRADIO 1 S Portable DAB+ FM Stereo Radio User Manual

Model: DIGITRADIO 1 S (0000/3916)

INTRODUCTION

The TechniSat DIGITRADIO 1 S is a portable stereo DAB+ and FM radio designed for high-quality audio enjoyment both at home and on the go. Featuring a clear OLED display, intuitive controls, and a powerful, replaceable battery, this device offers access to a wide range of digital and analog radio stations. Its compact design and robust stereo speakers with passive bass membrane deliver excellent sound performance.



DAB+ und UKW

Bundesweite und regionale Radio-Programmvielfalt in digitaler Qualität.

Front view of the TechniSat DIGITRADIO 1 S, highlighting the DAB+ and UKW (FM) capabilities.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before use.
- Keep the device away from water and moisture.
- Do not expose to direct sunlight or extreme temperatures.
- Use only the provided power adapter and USB cable for charging.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the device during operation.

PACKAGE CONTENTS

Verify that all items are present in the package:

- TechniSat DIGITRADIO 1 S Unit
- Battery pack (Lithium-ion, 3.7 V, 1050 mAh)
- Power Adapter
- USB Cable

- Owner's Manual (this document)

SETUP

1. Battery Installation and Charging

1. Locate the battery compartment on the back of the radio.
2. Insert the provided battery pack, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. Connect the power adapter to the radio's charging port and plug it into a wall outlet.
5. Allow the battery to fully charge before first use (approximately 10 hours of battery life when fully charged). The OLED display will indicate charging status.



Rear view of the radio, indicating the location of the battery compartment.

2. Powering On and Initial Scan

1. Extend the telescopic antenna for optimal reception.
2. Press and hold the **Power** button (usually integrated with the 'OK' button or a dedicated button) to turn on the radio.
3. Upon first power-on, the radio may prompt you to select a language. Use the < and > buttons to navigate and **OK** to confirm.
4. The radio will automatically perform a scan for available DAB+ stations. This process may take a few minutes.
5. Once the scan is complete, the radio will tune to the first available station.

OPERATING INSTRUCTIONS

Controls Overview



Detailed view of the OLED display and control panel, showing buttons for DAB/FM, FAV, MENU, OK, and navigation.

- **DAB/FM Button:** Switches between DAB+ and FM radio modes.
- **OK Button:** Confirms selections and acts as the power button (press and hold).
- **< / > Buttons:** Navigates through menus or stations.
- **+ / - Buttons:** Adjusts volume.
- **MENU Button:** Accesses the main menu for settings and options.
- **FAV Button:** Accesses or saves favorite stations.
- **Star Button:** A freely assignable direct dial button for a favorite station.

1. Switching Between DAB+ and FM

Press the **DAB/FM** button to toggle between DAB+ (Digital Audio Broadcasting) and FM (Frequency Modulation) radio modes.

2. Tuning Stations

- **DAB+ Mode:** Use the < and > buttons to scroll through the list of available DAB+ stations. Press **OK** to select a station.
- **FM Mode:** Press the < or > buttons to manually tune the frequency. Press and hold these buttons for automatic scanning to the next available station.

3. Saving and Recalling Favorite Stations

The radio allows you to store up to 20 favorite stations for both DAB+ and FM modes.

1. Tune to the desired station you wish to save.
2. Press and hold the **FAV** button until the display shows a "Save Preset" option.
3. Use the < and > buttons to select a preset number (1-20).
4. Press **OK** to confirm and save the station.
5. To recall a favorite station, press the **FAV** button briefly. Use < and > to select the desired preset, then press **OK**.
6. The **Star Button** can be assigned to a specific favorite station for quick access. Refer to the menu settings for assigning this button.

4. Volume Adjustment

Use the + and - buttons to increase or decrease the volume level.

5. Headphone Use

Connect standard 3.5mm headphones to the headphone jack located on the side of the radio for private listening. The internal speakers will automatically mute when headphones are connected.



Integrierter wechselbarer Akku für bis zu 8 Stunden Musikgenuss

The DIGITRADIO 1 S is ideal for outdoor use, offering up to 10 hours of battery life.

MAINTENANCE

Cleaning

- Disconnect the radio from the power source before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol-based cleaning agents, as these can damage the finish.
- Avoid getting moisture into any openings.

Battery Care

- To maximize battery life, avoid fully discharging the battery frequently.
- If the radio will not be used for an extended period, charge the battery to approximately 50% and store it in a cool, dry place.
- The battery is replaceable. If battery performance significantly degrades, contact customer support for replacement options.


TROUBLESHOOTING

Problem	Possible Cause	Solution
No power / Radio does not turn on	Battery is discharged or not properly installed. Power adapter not connected or faulty.	Ensure battery is correctly installed and charged. Connect the power adapter and check the power outlet.
Poor DAB+ / FM reception	Antenna not extended. Weak signal in the area. Interference from other electronic devices.	Fully extend the telescopic antenna. Try repositioning the radio. Move away from other electronics. Perform a full scan for DAB+ stations.
No sound	Volume is too low or muted. Headphones are connected.	Increase the volume using the + button. Disconnect headphones if not desired.
Display is blank or frozen	Temporary software glitch.	Press and hold the Power/OK button for 10 seconds to perform a reset. If the issue persists, contact support.

SPECIFICATIONS

- **Model:** DIGITRADIO 1 S
- **Item Model Number:** 0000/3916
- **Brand:** TechniSat
- **Tuner Technology:** DAB+, FM (UKW) with RDS and PLL
- **Speakers:** 2 x 1 Watt Stereo speakers with passive bass membrane
- **Display:** High-quality OLED display
- **Connectivity:** Auxiliary (Headphone Jack 3.5 mm)
- **Power Source:** Battery Powered (Lithium-ion 3.7 V, 1050 mAh) / Power Adapter
- **Battery Life:** Up to 10 hours (approximate)
- **Favorite Memory:** 20 for DAB+, 20 for FM
- **Product Dimensions:** 22.9 cm (L) x 3.2 cm (W) x 9.2 cm (H)
- **Weight:** 392 g

- **Included Components:** DIGITRADIO 1 S unit, Battery pack, Power Adapter, USB cable, Owner's Manual

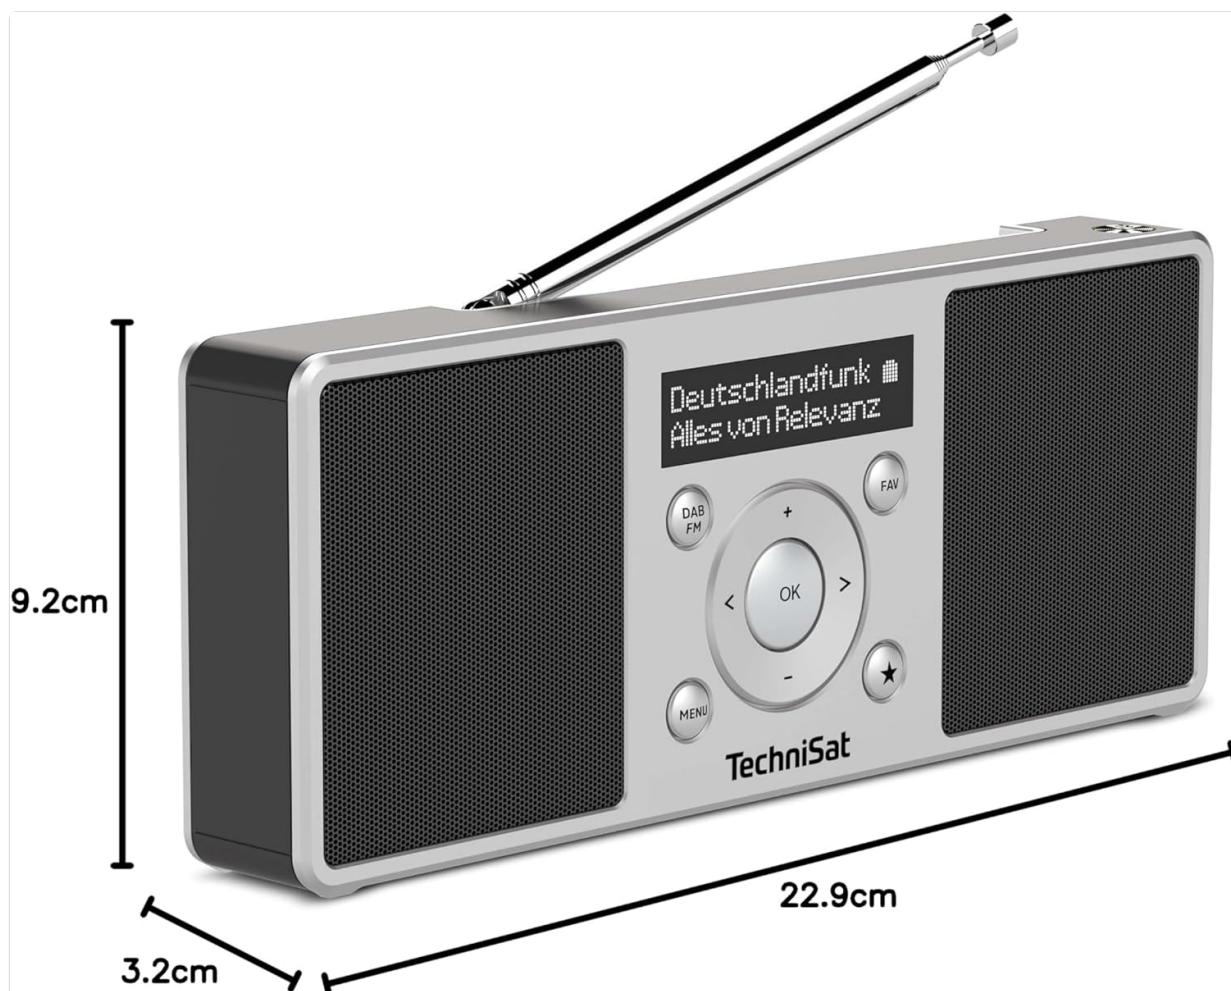

Dimensional overview of the TechniSat DIGITRADIO 1 S.

WARRANTY INFORMATION

TechniSat products are manufactured to high-quality standards. This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package or visit the official TechniSat website for detailed warranty terms and conditions specific to your region. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or inquiries regarding spare parts and accessories, please contact TechniSat customer support. You can find contact information on the official TechniSat website or through the retailer where you purchased the product.

Online Resources: Visit the official TechniSat website for FAQs, software updates, and additional product information.