

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [RUIZU](#) /

› [RUIZU D05 MP3 Player User Manual](#)

RUIZU D05

RUIZU D05 MP3 Player User Manual

Model: D05

INTRODUCTION

Welcome to your RUIZU D05 MP3 Player. This manual provides essential instructions for the setup, operation, and maintenance of your device. Please read this manual thoroughly to ensure proper use and to maximize your player's features.

The RUIZU D05 is a portable music player featuring Bluetooth 4.0 connectivity, an integrated FM radio, a built-in speaker, and expandable memory up to 128GB, designed for high-quality audio on the go.

PACKAGE CONTENTS

Before proceeding, please verify that all the following items are present in your package:

- 1 x RUIZU D05 MP3 Player
- 1 x USB Cable
- 1 x Earphone
- 1 x User Manual (this document)



Image: The RUIZU D05 MP3 Player, USB charging cable, and earphones laid out on a surface, representing the typical package contents.

DEVICE OVERVIEW

Familiarize yourself with the physical layout, buttons, and ports of your RUIZU D05 MP3 Player.



Image: A close-up view of the RUIZU D05 MP3 Player, highlighting its 1.8-inch color screen and touch buttons. The device has a metallic finish.

Controls and Ports

- **Power Button:** Press and hold to turn the device on or off. A short press will lock or unlock the screen.
- **Volume Buttons:** Adjust the audio output volume.
- **Navigation Buttons:** Used for moving up, down, left, and right within menus and lists.
- **Menu Button:** Confirms selections or accesses options within a specific menu.
- **Back Button:** Returns to the previous screen or menu level.
- **Play/Pause Button:** Initiates or pauses audio playback. Holding this button for 5 seconds can also turn the device on or off.
- **USB Port:** Used for charging the device and transferring data (music, videos, photos, text files) to and from a computer.
- **Headphone Jack:** Standard 3.5mm audio output for connecting earphones or headphones.
- **Micro SD Card Slot:** Allows for the insertion of a Micro SD card to expand the device's storage capacity.

Screen Display

The 1.8-inch color screen provides a clear interface for navigating menus, viewing track information, and adjusting settings.

SETUP

Charging the Device

Before first use, fully charge your RUIZU D05 MP3 Player.

1. Connect the smaller end of the provided USB cable to the USB port on your player.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a powered USB port on your computer.
3. The battery indicator on the screen will display the charging status.
4. A full charge typically takes approximately 2-3 hours.

Inserting a Micro SD Card (Optional)

To expand the storage capacity of your player:

1. Locate the Micro SD card slot on the side of the player.
2. Gently insert the Micro SD card with the gold contacts facing down until it clicks securely into place.
3. To remove the card, gently push it in again until it springs out, then pull it free.

Note: The RUIZU D05 supports Micro SD cards up to 128GB.

OPERATING INSTRUCTIONS

Power On/Off

- **To turn on:** Press and hold the **Power Button** until the screen illuminates.
- **To turn off:** Press and hold the **Power Button** until the "Power Off" option appears on the screen, then select it. Alternatively, you can hold the **Play/Pause Button** for 5 seconds.

Basic Navigation

- Use the **Navigation Buttons** (Up, Down, Left, Right) to move through menu options and lists.

- Press the **Menu Button** (typically the center button) to confirm a selection or enter a submenu.
- Press the **Back Button** to return to the previous screen or menu.

Music Playback

1. From the main menu, select "Music".
2. Browse your music collection by Artist, Album, Songs, or Playlists.
3. Select a song to begin playback.
4. Use the **Play/Pause Button** to pause or resume playback.
5. Adjust the volume using the **Volume Buttons**.
6. Short press the Left/Right navigation buttons to skip to the previous or next track.
7. Long press the Left/Right navigation buttons to fast forward or rewind within a track.

Supported audio formats include MP3, WAV, APE, WMA, and FLAC.

Bluetooth Connection

To connect your RUIZU D05 to Bluetooth headphones or speakers:

1. From the main menu, select "Bluetooth".
2. Turn on the Bluetooth function on the player.
3. The player will automatically search for nearby Bluetooth devices.
4. Ensure your Bluetooth headphones or speaker are in pairing mode.
5. Select your desired device from the list displayed on the player's screen to establish a connection.

Bluetooth version: 4.0. For optimal connection, keep devices within close proximity during pairing.

FM Radio

To use the FM radio function:

1. Connect the provided earphones to the player's headphone jack. The earphones act as the FM antenna.
2. From the main menu, select "FM Radio".
3. Choose "Auto Search" to scan and save available radio stations.
4. Use the navigation buttons to switch between saved stations or manually tune to a specific frequency.

FM receiving frequency range: 87 MHz~108 MHz.

Other Functions

- **Audio Book:** The player supports resuming audio book playback from the last stopped point.
- **Video:** Supports video files in 160 x 128 AMV format.
- **Picture:** View images in JPG, JPEG, or BMP formats.
- **Text:** Read text files in TXT format.

For video playback, ensure your video files are converted to the supported AMV format for compatibility.

MAINTENANCE

Cleaning

To keep your player in good condition, wipe the device with a soft, dry, lint-free cloth. Avoid using liquid cleaners, abrasive materials, or chemical solvents, as these can damage the device's surface and internal

components.

Storage

Store the RUIZU D05 MP3 Player in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity. Protect it from dust and impacts.

Battery Care

To prolong the lifespan of the built-in Lithium Polymer battery, avoid fully discharging the battery frequently. It is recommended to charge the device regularly, even if it is not in use for extended periods, to maintain battery health.

TROUBLESHOOTING

If you encounter issues with your RUIZU D05 MP3 Player, refer to the following common problems and solutions:

Device does not turn on.

- Ensure the battery is sufficiently charged. Connect the player to a power source and allow it to charge for at least 15-30 minutes before attempting to turn it on again.
- If the device is unresponsive, try performing a hard reset by holding the Power Button for 10-15 seconds.

Cannot connect to Bluetooth headphones.

- Verify that Bluetooth is enabled on both your RUIZU D05 player and your Bluetooth headphones/speaker.
- Ensure your headphones/speaker are in pairing mode (refer to their respective manuals).
- Move the devices closer to each other to ensure they are within range.
- Try unpairing and then re-pairing the devices from the Bluetooth menu.

No sound from earphones.

- Check if the earphones are fully and correctly plugged into the 3.5mm headphone jack.
- Adjust the volume level on the player.
- Test with a different pair of earphones to determine if the issue is with the earphones or the player.
- Ensure that Bluetooth is not active and routing audio to a connected Bluetooth device.

Files not playing or recognized.

- Verify that the file format is supported by the RUIZU D05 (e.g., MP3, WAV, APE, WMA, FLAC for audio; AMV for video; JPG/JPEG/BMP for pictures; TXT for text).
- Ensure that the files were transferred correctly to the device's internal memory or the Micro SD card. Corrupted files may not play.

SPECIFICATIONS

Feature	Detail
Model	D05

Screen	1.8 inch Color Screen (128 x 160 resolution)
Internal Memory	8GB
Expandable Memory	Micro SD Card up to 128GB (not included)
Bluetooth Version	4.0
FM Radio Frequency	87 MHz~108 MHz
Supported Audio Formats	MP3, WAV, APE, WMA, FLAC
Supported Video Format	160 x 128 AMV
Supported Picture Formats	JPG, JPEG, BMP
Supported Text Format	TXT
Battery Life	Up to 80 hours (audio playback)
Dimensions	9.7 x 3.91 x 0.89 cm
Weight	181 g

WARRANTY AND SUPPORT

Warranty Information

The RUIZU D05 MP3 Player is covered by a 12-month warranty from the date of purchase. This warranty specifically covers manufacturing defects. Please retain your proof of purchase for any warranty claims.

The warranty does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For technical assistance, troubleshooting, or to inquire about warranty claims, please contact RUIZU customer support. Refer to the official RUIZU website for the most current contact details.

You can also visit the [RUIZU Store on Amazon](#) for additional product information and support resources.