

[Manuals.plus](#) /

› [Fresh 'n Rebel](#) /

› Fresh 'n Rebel Clam ANC Headphones User Manual

Fresh 'n Rebel 3HP400PB

Fresh 'n Rebel Clam ANC Headphones User Manual

Model: 3HP400PB

INTRODUCTION

Welcome to your Fresh 'n Rebel Clam ANC Headphones. These over-ear Bluetooth headphones are designed to provide an immersive audio experience with the added benefit of Active Noise Cancellation (ANC). This manual will guide you through the setup, operation, maintenance, and troubleshooting of your headphones, ensuring you get the most out of your device.



Image: Fresh 'n Rebel Clam ANC Headphones, showcasing the over-ear design in Petrol Blue.

PACKAGE CONTENTS

Before you begin, please ensure all items are present in your package:

- 1 Fresh 'n Rebel Clam ANC Headphones (Petrol Blue)
- 1 Micro-USB Charging Cable
- 1 Audio Cable (3.5 mm jack)

- 1 Storage Pouch
- Quick Start Guide (not included in this digital manual)



Image: An illustration showing the Clam ANC headphones, charging cable, audio cable, and storage pouch, representing the package contents.

SETUP

1. Charging the Headphones

Before first use, fully charge your Clam ANC headphones.

1. Connect the Micro-USB charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will show the charging status. A full charge takes approximately 3 hours.
4. Once fully charged, the headphones provide up to 35 hours of playtime, or 30 hours with Active Noise Cancellation (ANC) activated.



Image: An icon representing battery life, indicating 35 hours of playtime.

2. Powering On/Off

- To power on, press and hold the power button until the LED indicator lights up.
- To power off, press and hold the power button until the LED indicator turns off.

3. Bluetooth Pairing

Pair your headphones with a Bluetooth-enabled device such as a smartphone, tablet, or laptop.

1. Ensure the headphones are powered off.
2. Press and hold the power button for approximately 5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.

4. Select "Clam ANC" from the list of found devices.
5. Once paired, the LED indicator on the headphones will turn solid blue.
6. The headphones support Bluetooth 5 for a stable connection.

OPERATING INSTRUCTIONS

1. Active Noise Cancellation (ANC)

The Clam ANC headphones feature Active Noise Cancellation to reduce ambient noise and enhance your listening experience.

- To activate ANC, locate the ANC button (usually a dedicated switch or button) and press it. The LED indicator for ANC will light up.
- To deactivate ANC, press the ANC button again.
- Note that using ANC will slightly reduce battery life.



Image: A person wearing Clam ANC headphones, illustrating the Active Noise Cancellation feature.

2. Music Playback and Call Control

The headphones are equipped with integrated controls for managing your audio and phone calls.

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Double-press the multi-function button.
- **Previous Track:** Triple-press the multi-function button.
- **Volume Up/Down:** Use the volume buttons (+/-).
- **Answer/End Call:** Press the multi-function button once during an incoming call.
- **Reject Call:** Press and hold the multi-function button during an incoming call.
- **Voice Assistant:** Press and hold the multi-function button for 2 seconds to activate your device's voice assistant.

3. Wired Connection (AUX)

You can use your Clam ANC headphones with the included 3.5mm audio cable when Bluetooth is not available or when the battery is depleted.

1. Connect one end of the 3.5mm audio cable to the AUX port on the headphones.
2. Connect the other end to the 3.5mm audio jack of your device.
3. In wired mode, the headphones function passively, and ANC may still be used if the battery has charge.

MAINTENANCE

Proper care will extend the life and performance of your headphones.

- **Cleaning:** Wipe the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents. The earcups are made of leather, so avoid excessive moisture.
- **Storage:** When not in use, store the headphones in the provided storage pouch to protect them from dust and scratches. The foldable design allows for compact storage.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in constant use.
- **Water Resistance:** The headphones are resistant to water, but are not waterproof. Avoid submerging them in water or exposing them to heavy rain.



Image: Fresh 'n Rebel Clam ANC Headphones shown in their folded position, ideal for compact storage and travel.

TROUBLESHOOTING

If you encounter any issues with your headphones, refer to the following common problems and solutions.

Problem	Solution
---------	----------

Problem	Solution
Headphones do not power on.	Ensure the headphones are charged. Connect them to a power source using the Micro-USB cable.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"> • Ensure headphones are in pairing mode (flashing blue/red LED). • Make sure Bluetooth is enabled on your device. • Move headphones closer to your device. • Forget "Clam ANC" from your device's Bluetooth list and try pairing again. • Restart both the headphones and your device.
No sound or low volume.	<ul style="list-style-type: none"> • Check volume levels on both headphones and your connected device. • Ensure headphones are properly paired or the audio cable is fully inserted. • Try playing different audio sources.
Active Noise Cancellation (ANC) is not working.	<ul style="list-style-type: none"> • Ensure the ANC feature is activated (check ANC LED indicator). • ANC is most effective against low-frequency, constant noise. It may not completely eliminate all sounds. • Ensure the headphones have sufficient battery charge.
Call quality is poor (microphone issues).	<ul style="list-style-type: none"> • Ensure the microphone is not obstructed. • Move to a quieter environment. • Ensure your device's microphone input is set to the headphones.

SPECIFICATIONS

Detailed technical specifications for the Fresh 'n Rebel Clam ANC Headphones:

Feature	Detail
Model Number	3HP400PB
Style	Clam ANC, Over-ear (Circumaural)
Color	Petrol Blue
Material	Leather
Connectivity Technology	Bluetooth, Wireless and Wired (3.5mm AUX)
Bluetooth Version	Bluetooth 5
Noise Control	Active Noise Cancellation (ANC)
Microphone Form Factor	Built-in
Control Type	Remote Control, Touch
Charging Time	Approximately 3 hours
Average Battery Life	Up to 35 hours (30 hours with ANC)
Battery Type	1 Lithium Ion battery (included)

Feature	Detail
Product Dimensions	16 x 7.2 x 17.8 cm
Product Weight	260 g
Water Resistance Level	Water Resistant
Compatible Devices	Bluetooth devices: smartphones, tablets, laptops, PCs, Apple iPhone/iPod/iPad
Year of Model	2018

WARRANTY AND SUPPORT

Your Fresh 'n Rebel Clam ANC Headphones come with a standard manufacturer's warranty. Please refer to the warranty card included in your original packaging or visit the official Fresh 'n Rebel website for detailed warranty terms and conditions.

For technical support, product inquiries, or warranty claims, please contact Fresh 'n Rebel customer service through their official website or the contact information provided in your product documentation.