

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EXTOL](#) /

› [EXTOL 8851112 4-Function Stapling Gun User Manual](#)

EXTOL 8851112

# EXTOL 8851112 4-Function Stapling Gun User Manual

## 1. INTRODUCTION

---

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your EXTOL 8851112 4-function stapling gun. This tool is designed for fastening various materials using staples or nails ranging from 6mm to 14mm. Please read this manual thoroughly before first use and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

---

Always observe the following safety precautions to prevent injury and damage to the tool.

- **Wear Eye Protection:** Always wear safety glasses to protect your eyes from flying debris.
- **Keep Hands Clear:** Never place your hands or fingers near the stapling mechanism during operation.
- **Point Away from Body:** Always point the stapling gun away from yourself and others.
- **Unload When Not in Use:** Always unload fasteners from the tool when not in use, before maintenance, or when clearing a jam.
- **Use Correct Fasteners:** Only use fasteners (staples or nails) within the specified range of 6-14mm and compatible with the 4-function mechanism.
- **Inspect Before Use:** Check the tool for any damage or loose parts before each use. Do not use if damaged.
- **Keep Work Area Clear:** Ensure your work area is well-lit and free from obstructions.
- **Store Safely:** Store the tool in a dry, secure place out of reach of children.

## 3. SETUP

---

### 3.1 Unpacking

Carefully remove the stapling gun from its packaging. Inspect the tool for any signs of damage that may have occurred during transit. Retain the packaging for storage or future transport.

### 3.2 Loading Fasteners

To load staples or nails:

1. Ensure the stapling gun is unloaded and pointed in a safe direction.
2. Locate the pusher rod at the rear of the magazine. Press the release button or lever to open the magazine.
3. Pull the pusher rod completely out until the magazine is open.
4. Insert a strip of compatible staples or nails into the magazine with the points facing forward. Ensure they are seated correctly.
5. Push the pusher rod back into the magazine until it locks securely. Do not force it.

*Note: Product images demonstrating the loading process would typically be included here.*

## 4. OPERATION

---

### 4.1 Selecting Fastener Type (4-Function)

The EXTOL 8851112 is a 4-function stapling gun, meaning it can typically accommodate four types of fasteners: standard staples, U-shaped staples, brad nails, and pin nails. Refer to the markings on the tool or the specific fastener packaging to ensure compatibility and proper loading for your desired application.

### 4.2 Using the Stapling Gun

Follow these steps for safe and effective operation:

1. **Prepare Workpiece:** Ensure the material you are fastening is stable and properly supported.
2. **Position Tool:** Place the nose of the stapling gun firmly against the workpiece where you intend to drive the fastener. Apply even pressure.
3. **Actuate:** Squeeze the handle firmly and completely to drive the fastener. A distinct click or thud indicates successful fastening.
4. **Release:** Release the handle and lift the tool from the workpiece.
5. **Check Fastener:** Verify that the fastener is properly seated. If not, adjust pressure or technique.

*Note: Product images illustrating proper grip and positioning would typically be included here.*

## 5. MAINTENANCE

---

### 5.1 Cleaning

Regular cleaning helps maintain the tool's performance and extends its lifespan.

- **Unload First:** Always unload all fasteners before cleaning.
- **Wipe Down:** Use a clean, dry cloth to wipe down the exterior of the tool.
- **Clear Debris:** Periodically check the magazine and firing mechanism for dust, debris, or small fastener fragments. Use compressed air or a small brush to clear these areas.
- **Avoid Solvents:** Do not use harsh solvents or abrasive cleaners, as these can damage the tool's finish or internal components.

### 5.2 Storage

When not in use, store the stapling gun in a dry, cool place. Ensure it is unloaded and stored in its original packaging or a suitable toolbox to protect it from damage and moisture. Keep out of reach of children and

unauthorized users.

## 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your stapling gun.

Problem	Possible Cause	Solution
Fastener not firing	Empty magazine; Fastener jam; Pusher rod not fully engaged.	Reload fasteners; Clear jam (see below); Ensure pusher rod is locked.
Fastener jam	Incorrect fastener size; Damaged fasteners; Debris in magazine.	<b>Unload tool first.</b> Open magazine, remove jammed fasteners, clear debris, reload with correct fasteners.
Fastener not fully driven	Insufficient pressure on workpiece; Hard material; Worn spring.	Apply more firm pressure to the tool; Ensure material is suitable for tool; If persistent, tool may require service.
Tool feels loose or wobbly	Loose screws or components.	Inspect for loose screws and tighten them. Do not overtighten.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	8851112
Fastener Type	4-function (Standard staples, U-shaped staples, Brad nails, Pin nails)
Fastener Length Range	6mm - 14mm
Brand	EXTOL
ASIN	B07GVKBN3L