

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PRV AUDIO](#) /

› [PRV AUDIO 8MR600X 8-Inch Midrange Speaker Instruction Manual](#)

PRV AUDIO 8MR600X

PRV AUDIO 8MR600X 8-Inch Midrange Speaker Instruction Manual

Model: 8MR600X | Brand: PRV AUDIO

1. INTRODUCTION

Thank you for choosing the PRV AUDIO 8MR600X 8-Inch Midrange Speaker. This manual provides essential information for the proper installation, operation, and maintenance of your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your product.

Key Features:

- 2-inch Dual Layer CCAW Voice Coil wound on polyimide former, 8 ohms impedance.
- Ventilated voice coil gap designed to reduce power compression.
- High Xmax for enhanced mid-bass output.
- 600 watts continuous program power rating for high acoustical output.
- Optimized for excellent performance in 2-way or 3-way audio systems.
- Unique double roll dimple suspension design.

X SERIES

98dB
SENSITIVITY

600
WATTS **8Ω**



2"
VOICE COIL

8MR600X

Image 1.1: Front and side view of the PRV AUDIO 8MR600X 8-Inch Midrange Speaker, highlighting its robust construction.

2. WHAT'S IN THE BOX

Upon opening the product packaging, please ensure all items are present and in good condition.

- 1 x PRV AUDIO 8 Inch Midrange Speaker 8MR600X



Image 2.1: The PRV AUDIO 8MR600X speaker as packaged for retail, showing the model and key specifications on the box.

3. SPECIFICATIONS

Detailed technical specifications for the PRV AUDIO 8MR600X speaker:

Feature	Specification
Model Name	8MR600X
Speaker Type	Midrange Speaker
Speaker Size	8 Inches
Impedance	8 Ohms
Continuous Program Power	600 Watts
Maximum Output Power	1200 Watts
Voice Coil	2-inch Dual Layer CCAW

Feature	Specification
Frequency Response	200Hz to 2500Hz (optimized for flat response)
Sensitivity	98 dB
Material	Non-pressed paper cone
Product Dimensions (D x W x H)	3.75"D x 7.29"W x 7.29"H
Item Weight	7 Pounds (approx. 3.17 kg)
Mounting Type	Flush Mount
Recommended Uses	Professional audio, Musical instrument speaker systems

4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your speaker. If you are unsure about any steps, it is recommended to seek professional installation.

4.1 Mounting Considerations

The 8MR600X speaker is designed for flush mounting. Ensure the mounting surface is sturdy and provides adequate clearance for the speaker's depth. Refer to the dimensions below for precise cutout requirements.

- **Overall Diameter:** 8.21 inches
- **Mounting Depth:** 3.75 inches
- **Front Mount Baffle Cutout:** 7.29 inches



Image 4.1: Dimensional diagram of the 8MR600X speaker, essential for proper mounting.

4.2 Wiring

Connect the speaker to a suitable amplifier. The 8MR600X has an 8-ohm impedance. Ensure your amplifier is stable at this impedance and can provide sufficient power (600W continuous program power) without clipping. Use appropriate gauge speaker wire for your installation to minimize power loss.



Image 4.2: Rear view of the 8MR600X speaker, illustrating the positive (red) and negative (black) terminals for wiring.

4.3 System Integration

This speaker is designed for integration into 2-way or 3-way systems. Proper crossover settings are essential to protect the speaker and optimize sound quality. Consult your amplifier or digital signal processor (DSP) manual for recommended crossover frequencies. For midrange speakers, a typical high-pass filter setting might be around 200-300 Hz, and a low-pass filter around 2000-2500 Hz, but this can vary based on your specific system components.

Your browser does not support the video tag.

Video 4.3: An official PRV Audio Group video demonstrating a motorcycle audio system setup, which may provide insights into integrating PRV Audio components.

5. OPERATING INSTRUCTIONS

5.1 Initial Use and Break-in

Like many high-performance speakers, the 8MR600X benefits from a break-in period. During the first 20-30 hours of use, operate the speaker at moderate volume levels. This allows the suspension components to loosen and settle, leading to improved sound quality and performance over time.

5.2 Volume and Power Management

Always ensure your amplifier's gain settings are properly matched to your head unit's output to prevent clipping, which can damage the speaker. Listen for signs of distortion; if you hear any, reduce the volume immediately. While the speaker has a high power handling capacity, exceeding its limits or feeding it a distorted signal can cause permanent damage.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your PRV AUDIO 8MR600X speaker.

- **Cleaning:** Gently wipe the speaker cone and surround with a soft, dry cloth. Avoid using harsh chemicals or excessive moisture, which can damage the non-pressed paper cone material.
- **Inspection:** Periodically check the speaker for any signs of damage, such as tears in the cone or surround, loose connections, or corrosion on the terminals.
- **Environmental Conditions:** Avoid exposing the speaker to extreme temperatures, direct sunlight for prolonged periods, or high humidity. While robust, these conditions can degrade materials over time. The speaker is not waterproof.

7. TROUBLESHOOTING

If you encounter issues with your PRV AUDIO 8MR600X speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Sound	Loose or incorrect wiring; amplifier off or in protect mode; head unit issue.	Check all speaker and amplifier connections. Ensure amplifier is powered on and not in protect mode. Verify head unit is functioning correctly.
Distorted Sound	Amplifier clipping; incorrect gain settings; improper crossover settings; damaged speaker.	Reduce amplifier gain. Adjust crossover settings. Lower volume to see if distortion disappears. Inspect speaker for physical damage.
Low Volume	Incorrect amplifier gain; phase issues; low input signal.	Increase amplifier gain (without clipping). Check speaker wiring for correct polarity. Ensure head unit output is sufficient.
Speaker Buzzing/Humming	Ground loop issue; loose connections; interference.	Check grounding points. Ensure all connections are secure. Reroute power and signal cables to avoid interference.

If these steps do not resolve the issue, please contact PRV AUDIO customer support.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The PRV AUDIO 8MR600X speaker comes with a limited warranty. Please retain your proof of purchase for warranty claims. The warranty typically covers manufacturing defects under normal use. Damage resulting from improper installation, abuse, or unauthorized modifications is not covered.

8.2 Proposition 65 Warning

This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

8.3 Customer Support

For technical assistance, warranty inquiries, or further information, please visit the official PRV AUDIO website or contact their customer service department. You can find more information and contact details at the [PRV AUDIO Store on Amazon](#) or their dedicated support channels.