

## Size CLO 1002

# Size Audio CD: Complete Studio Recordings Instruction Manual

MODEL: CLO 1002

Brand: Size

## 1. INTRODUCTION

This instruction manual provides essential information for the proper use and care of your Size Audio CD, Model CLO 1002. This compilation features the complete studio recordings by the legendary post-punk band, Size. Please read this manual thoroughly to ensure optimal playback and longevity of your Audio CD.

## 2. PRODUCT OVERVIEW

The Size Audio CD (CLO 1002) is a standard compact disc containing digital audio tracks. It is designed for playback on compatible CD players, car audio systems, and computer drives. The disc features a collection of studio recordings from the artist Size, known for their influential post-punk sound.



**Figure 1:** Front cover of the Size Audio CD. The artwork displays a stylized image of a person in a conical hat, rendered in shades of purple and yellow, with the band name "SIZE" prominently displayed in a distressed yellow font at the top left.

### 3. SETUP

---

To begin playback of your Audio CD, follow these steps:

1. **Select a Compatible Player:** Ensure you have a functional Audio CD player, DVD player with CD playback capability, or a computer with a CD/DVD drive.
2. **Open Disc Tray:** Gently press the eject button on your player to open the disc tray.
3. **Insert CD:** Hold the Audio CD by its edges to avoid touching the playing surface. Place the disc label-side up into the disc tray.
4. **Close Disc Tray:** Gently press the eject button again or manually push the tray to close it. The player should recognize the disc.

### 4. OPERATING INSTRUCTIONS

---

Once the CD is loaded, you can control playback using your player's standard functions:

- **Play/Pause:** Press the **PLAY** button to start playback. Press it again to pause.



- **Stop:** Press the **STOP** button to end playback and reset to the beginning of the disc.
- **Skip Tracks:** Use the **NEXT** or **PREVIOUS** buttons to navigate between tracks.
- **Fast Forward/Rewind:** Hold down the **NEXT** or **PREVIOUS** buttons during playback to fast forward or rewind within a track.
- **Volume Control:** Adjust the volume using your player's or amplifier's volume controls.

Refer to your specific CD player's manual for detailed instructions on advanced features such as programming tracks or repeat functions.

## 5. MAINTENANCE AND CARE

---

Proper care will extend the life and maintain the sound quality of your Audio CD:

- **Handling:** Always hold the CD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playing surface.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Scratches on the playing surface can cause skipping or playback errors. Handle with care to prevent damage.

## 6. TROUBLESHOOTING

---

If you encounter issues during playback, consider the following:

- **Disc Not Playing:**
  - Ensure the disc is inserted correctly (label-side up).
  - Check if the disc is clean and free of visible scratches or smudges. Clean if necessary.
  - Verify that your player is powered on and functioning correctly with other CDs.
- **Skipping or Stuttering:**
  - Clean the disc thoroughly as described in the Maintenance section.
  - Check for deep scratches on the playing surface. Severe scratches may prevent proper playback.
  - Ensure the CD player is on a stable surface to prevent vibrations.
- **No Sound:**
  - Check the volume level on your player and amplifier.
  - Ensure all audio cables are securely connected between the CD player and your audio system.
  - Verify that your audio system is set to the correct input source.

## 7. SPECIFICATIONS

---

Item Model Number	CLO 1002
-------------------	----------



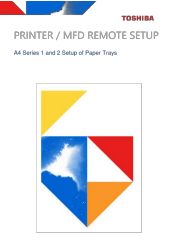
Brand	Size
Product Dimensions	5.43 x 0.47 x 4.96 inches; 2.82 ounces
Number of Discs	1
Label	The Orchard
Manufacturer	The Orchard
Original Release Date	2024
ASIN	B07GVSBQS7

## 8. WARRANTY AND SUPPORT

This Audio CD is a physical media product. While specific warranties for audio CDs are typically limited to manufacturing defects, please inspect your disc upon receipt for any physical damage. If you believe your disc has a manufacturing defect, please contact your retailer or the manufacturer, The Orchard, for assistance.

For general inquiries about the artist "Size" or their music, you may refer to official artist websites or music databases.

### Related Documents - CLO 1002

	<p><a href="#">ProSense FMM Series (-1002) Magnetic-Inductive Flow Meters</a></p> <p>Automation Direct's ProSense FMM Series (-1002) Magmeters offer reliable detection of conductive liquid flow rates up to 158.5 GPM. These compact, stainless steel meters feature a 4-digit display, selectable engineering units, and two analog outputs for remote monitoring of flow and temperature. They are suitable for various industrial process applications.</p>
	<p><a href="#">ProSense FMM Series (-1002) Magnetic-Inductive Flow Meters</a></p> <p>Explore the ProSense FMM Series (-1002) Magnetic-Inductive Flow Meters, designed for reliable liquid flow rate detection. This document provides an overview, features, specifications, and selection guides for these robust and compact flow meters.</p>
	<p><a href="#">Toshiba Printer/MFD Remote Setup: A4 Series 1 and 2 Paper Tray Configuration Guide</a></p> <p>This guide provides instructions for remotely configuring paper trays on Toshiba A4 Series 1 and 2 printers and Multi-Function Devices (MFDs). It covers common setup issues and offers solutions through both the device interface and web browser.</p>

