

Small Foot 10947

Small Foot Wooden Toys Premium Pastel Baby Walker and Playcenter (Model 10947) - Instruction Manual

Brand: Small Foot | Model: 10947

INTRODUCTION

This instruction manual provides important information for the safe and effective use of your Small Foot Wooden Toys Premium Pastel Baby Walker and Playcenter, Model 10947. This versatile wooden toy is designed to support toddlers aged 12 months and up in their early development, combining a sturdy walker with multiple engaging activity features.

Crafted from FSC 100% certified wood, this product features a minimalist design with tasteful pastel colors, rounded edges, and is painted with child-safe, non-toxic, water-based paint. Please read this manual thoroughly before assembly and use, and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- **Adult Supervision Required:** Always ensure an adult supervises the child during use of the walker and playcenter.
- **Age Recommendation:** This product is suitable for children 12 months and up.
- **Check Before Use:** Before each use, inspect the product for any loose parts, damage, or signs of wear. Do not use if any components are damaged.
- **Stable Surface:** Ensure the walker is used on a stable, flat surface. Avoid stairs, uneven terrain, or areas with obstacles.
- **Finger Entrapment Warning:** Exercise caution with moving parts, particularly the flip-down number panels and the lift-up top board. Small fingers can become trapped. Ensure children are supervised when interacting with these features.
- **Choking Hazard:** Small parts, such as the shape sorter blocks, could pose a choking hazard for very young children. Ensure all parts are used as intended and supervised.

- **Materials:** Made from FSC 100% certified wood and painted with child-safe, non-toxic, water-based paint.

PARTS LIST

The package includes the following components:

- 1x Walker "Move it!" (main assembly)
- Assorted wooden shape blocks for the shape sorter
- Any additional small components required for assembly (refer to separate assembly instructions)



Image: Overview of the assembled Small Foot Baby Walker and Playcenter.

SETUP AND ASSEMBLY

Your Small Foot Baby Walker and Playcenter requires some assembly. Detailed step-by-step assembly instructions with diagrams are included in the product packaging. Please follow these instructions carefully.

General Assembly Tips:

- Lay out all components and hardware before beginning.
- Ensure all screws and fasteners are securely tightened to prevent instability.
- Do not overtighten screws to avoid damaging the wood.
- Verify that the wheels are properly attached and rotate freely.
- Once assembled, check the entire walker for stability and ensure all activity elements are securely in place.



Image: Size reference of the baby walker next to a child silhouette.

OPERATING INSTRUCTIONS

1. Walker Function

The primary function of this product is to assist toddlers in learning to walk. The sturdy wooden frame and comfortable handle provide support. The wheels are designed for smooth movement. A parking brake is integrated to secure the walker in place when not in motion, providing stability for stationary play.

To engage the parking brake: Locate the brake mechanism (usually a lever or knob near the wheels) and activate it to prevent the wheels from rolling. Ensure it is disengaged for walking.

2. Top Activity Panel

The top surface features various interactive elements:

- **Spinning Elements:** Rotate the circular pieces with different patterns and images.
- **Push-Down Mushrooms:** Press down on the mushroom-shaped pegs, which will spring back up.
- **Maze Track:** Guide the small wooden pieces along the carved tracks.



Image: Detailed view of the interactive top activity panel.

3. Shape Sorter Side

One side of the walker includes a shape sorter with various cut-out shapes (triangle, circle, star, square, etc.). Match the corresponding wooden blocks to their correct openings. The blocks fall into the storage compartment inside the walker.



Image: Side of the walker featuring the shape sorter activity.

4. Flip-Down Number/Picture Panels Side

Another side features a series of flip-down panels. Each panel has a number or picture on one side, which can be flipped to reveal another image or number on the reverse. This encourages number recognition and fine motor skills.



Image: Side of the walker displaying the interactive flip-down panels.

5. Clock Side

A third side of the walker features a clock with movable hands, allowing children to learn about time concepts and practice moving the hour and minute hands.



Image: Side of the walker featuring a large clock with movable hands.

6. Chalkboard Side

The fourth side of the walker is equipped with a chalkboard surface, providing a creative space for drawing and writing with chalk (chalk not included).

7. Storage Compartment

The top activity panel can be lifted to reveal a spacious storage compartment inside the walker. This is ideal for storing the shape sorter blocks, other small toys, or chalk for the chalkboard.

MAINTENANCE

- **Cleaning:** Wipe the wooden surfaces with a damp cloth and mild soap if necessary. Dry immediately with a clean, soft cloth. Do not immerse in water.
- **Inspection:** Regularly check all screws and connections to ensure they remain tight. Retighten as needed.
- **Storage:** Store the walker in a dry place, away from direct sunlight and extreme temperatures, to prevent warping or damage to the wood.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Walker is unstable or wobbly.	Ensure all assembly screws are securely tightened. Check that the wheels are properly attached and not damaged.
Child's fingers get caught in moving parts (e.g., flip panels, top lid).	This is a known concern. Always supervise children closely when they interact with these features. Teach children to use these parts carefully. If the top lid is a concern, consider securing it with a child-safe latch (not included) when not in use for storage.
Wheels are not rolling smoothly.	Check for debris caught in the wheels. Ensure the parking brake is fully disengaged. Verify that the wheels are not damaged or warped.
Activity elements are stiff or not moving freely.	Ensure no foreign objects are obstructing the movement. A small amount of food-grade lubricant (e.g., beeswax) can be applied to wooden moving parts if they become too stiff, but ensure it is safe for children.

SPECIFICATIONS

Feature	Detail
Model Number	10947
Product Dimensions	15.35 x 15.35 x 16.54 inches
Item Weight	1.6 ounces
Recommended Age	12 months and up
Material	FSC 100% Certified Wood
Paint	Child-safe, non-toxic, water-based paint
Manufacturer	small foot by Legler
Batteries	AA batteries required.

Note on Batteries: While product specifications mention AA batteries, this wooden walker does not typically require batteries for its core functions. Please refer to the specific assembly instructions for any battery-operated components, if applicable.



Image: FSC certification logo.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the documentation included with your purchase or contact Small Foot customer service directly. Contact details can typically be found on the product packaging or the official Small Foot website.

Keep your proof of purchase for any warranty claims.